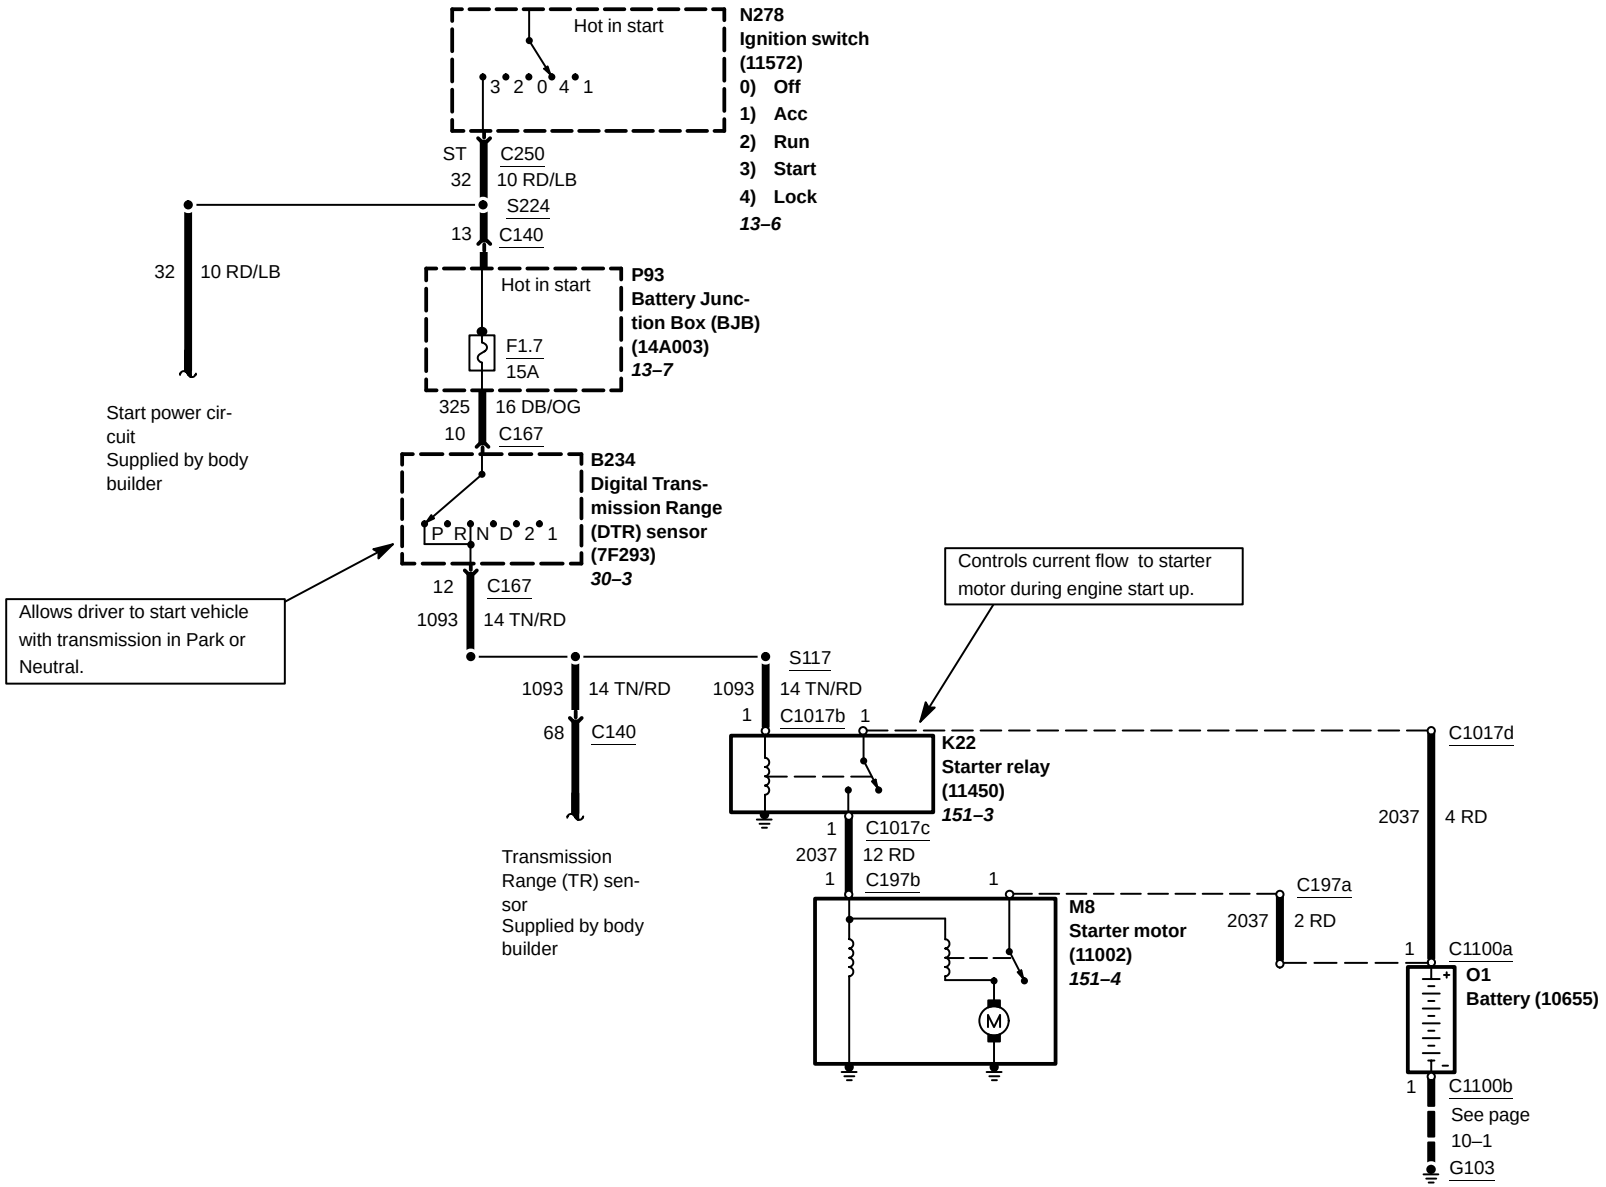
Hot in start
3 2 0 4 1
N278
Ignition switch
(11572)
0) Off
1) Acc
2) Run
3) Start
4) Lock
13–6
ST
C250
32
10 RD/LB
S224
13
C140
32
10 RD/LB
Hot in start
P93
Battery Junction Box (BJB)
(14A003)
13–7
F1.7
15A
325
16 DB/OG
10
C167
Start power circuit
Supplied by body builder
B234
Digital Transmission Range (DTR) sensor
(7F293)
30–3
P R N D 2 1
12
C167
1093
14 TN/RD
Allows driver to start vehicle with transmission in Park or Neutral.
Controls current flow to starter motor during engine start up.
S117
1093
14 TN/RD
1093
14 TN/RD
68
C140
1
C1017b
1
K22
Starter relay
(11450)
151–3
C1017d
2037
4 RD
1
C1017c
2037
12 RD
1
C197b
1
C197a
2037
2 RD
M8
Starter motor
(11002)
151–4
1
C1100a
O1
Battery (10655)
1
C1100b
See page 10–1
G103
Transmission Range (TR) sensor
Supplied by body builder