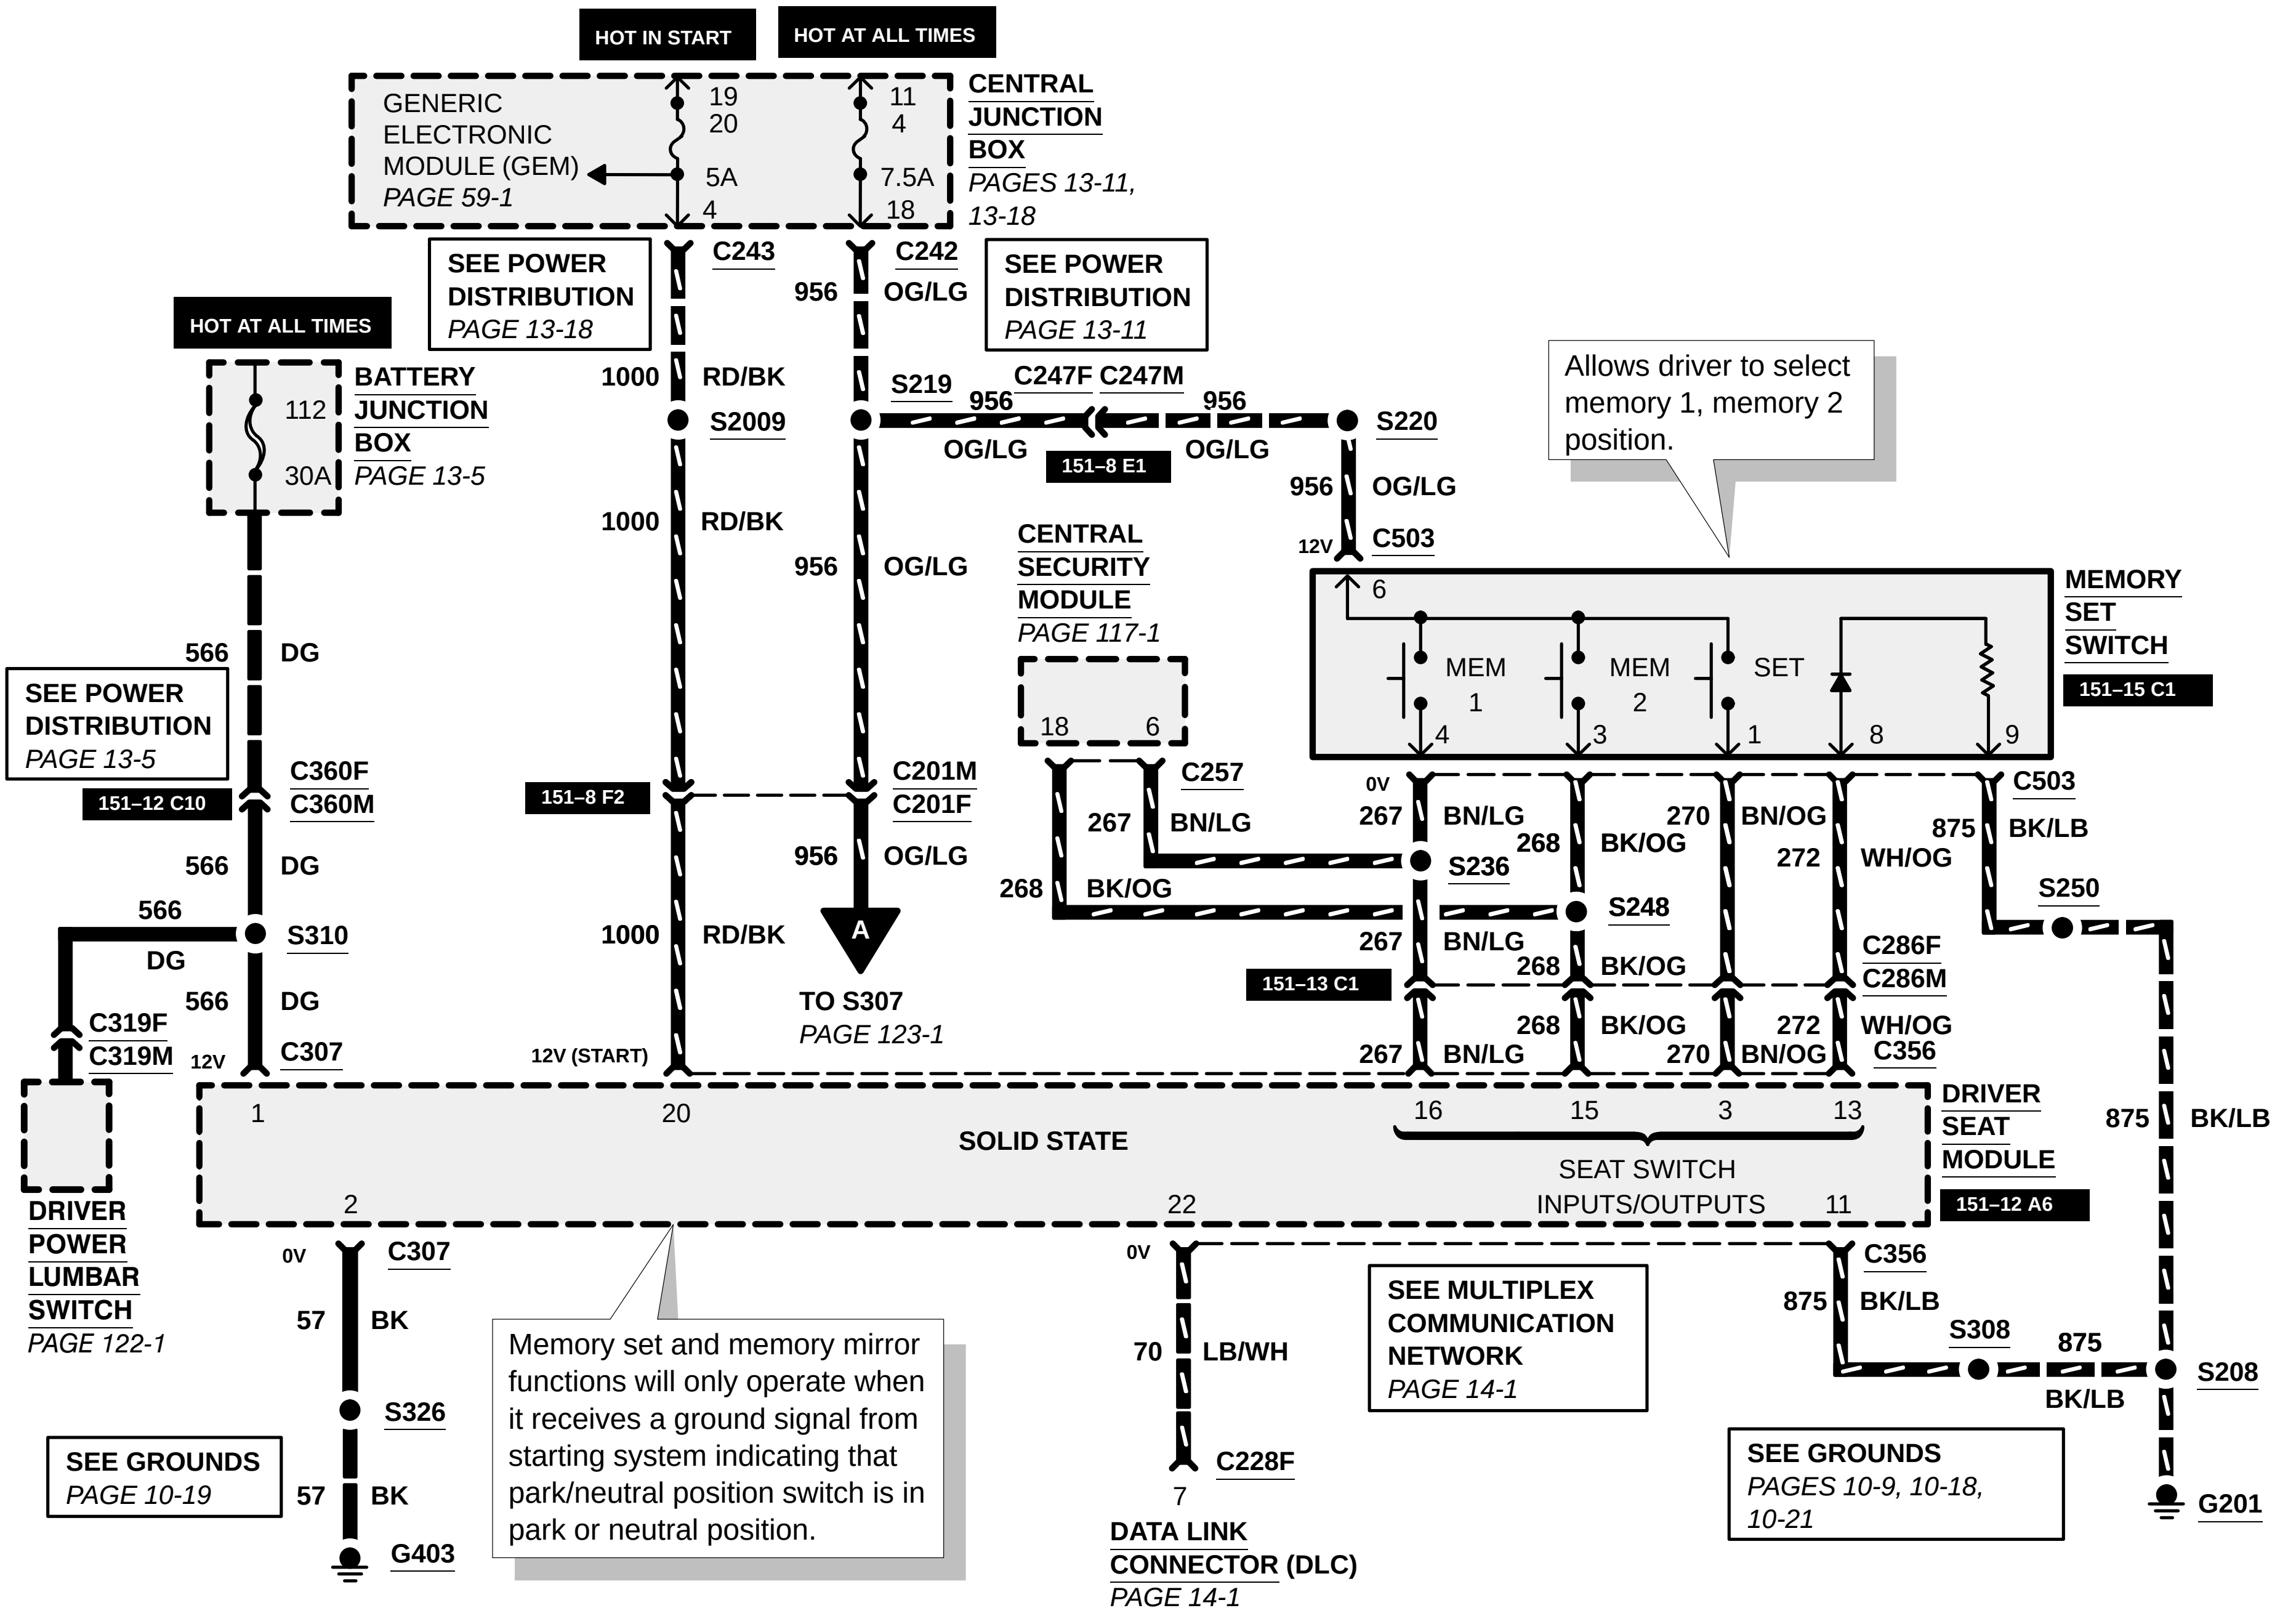
HOT IN START
HOT AT ALL TIMES
GENERIC ELECTRONIC MODULE (GEM) PAGE 59-1
19
20
5A
4
11
4
7.5A
18
CENTRAL JUNCTION BOX PAGES 13-11, 13-18
C243
C242
956
OG/LG
SEE POWER DISTRIBUTION PAGE 13-18
SEE POWER DISTRIBUTION PAGE 13-11
HOT AT ALL TIMES
BATTERY JUNCTION BOX PAGE 13-5
112
30A
1000
RD/BK
S2009
S219
956
C247F C247M
956
S220
OG/LG
151–8 E1
OG/LG
956
OG/LG
12V
C503
1000
RD/BK
956
OG/LG
CENTRAL SECURITY MODULE PAGE 117-1
18
6
6
MEM 1
MEM 2
SET
4
3
1
8
9
MEMORY SET SWITCH
151–15 C1
566
DG
SEE POWER DISTRIBUTION PAGE 13-5
C360F
C360M
151–12 C10
151–8 F2
C201M
C201F
C257
0V
C503
267
BN/LG
267
BN/LG
270
BN/OG
268
BK/OG
875
BK/LB
272
WH/OG
956
OG/LG
S236
268
BK/OG
S250
566
DG
566
S310
DG
1000
RD/BK
A
S248
267
BN/LG
268
BK/OG
C286F
C286M
151–13 C1
TO S307 PAGE 123-1
566
DG
C319F
C319M
12V
C307
12V (START)
268
BK/OG
272
WH/OG
267
BN/LG
270
BN/OG
C356
1
20
16
15
3
13
SOLID STATE
DRIVER SEAT MODULE
875
BK/LB
SEAT SWITCH INPUTS/OUTPUTS
151–12 A6
2
22
11
DRIVER POWER LUMBAR SWITCH PAGE 122-1
0V
C307
0V
C356
57
BK
875
BK/LB
70
LB/WH
SEE MULTIPLEX COMMUNICATION NETWORK PAGE 14-1
S308
875
S208
BK/LB
S326
SEE GROUNDS PAGE 10-19
57
BK
C228F
7
SEE GROUNDS PAGES 10-9, 10-18, 10-21
G403
DATA LINK CONNECTOR (DLC) PAGE 14-1
G201

Allows driver to select memory 1, memory 2 position.

Memory set and memory mirror functions will only operate when it receives a ground signal from starting system indicating that park/neutral position switch is in park or neutral position.