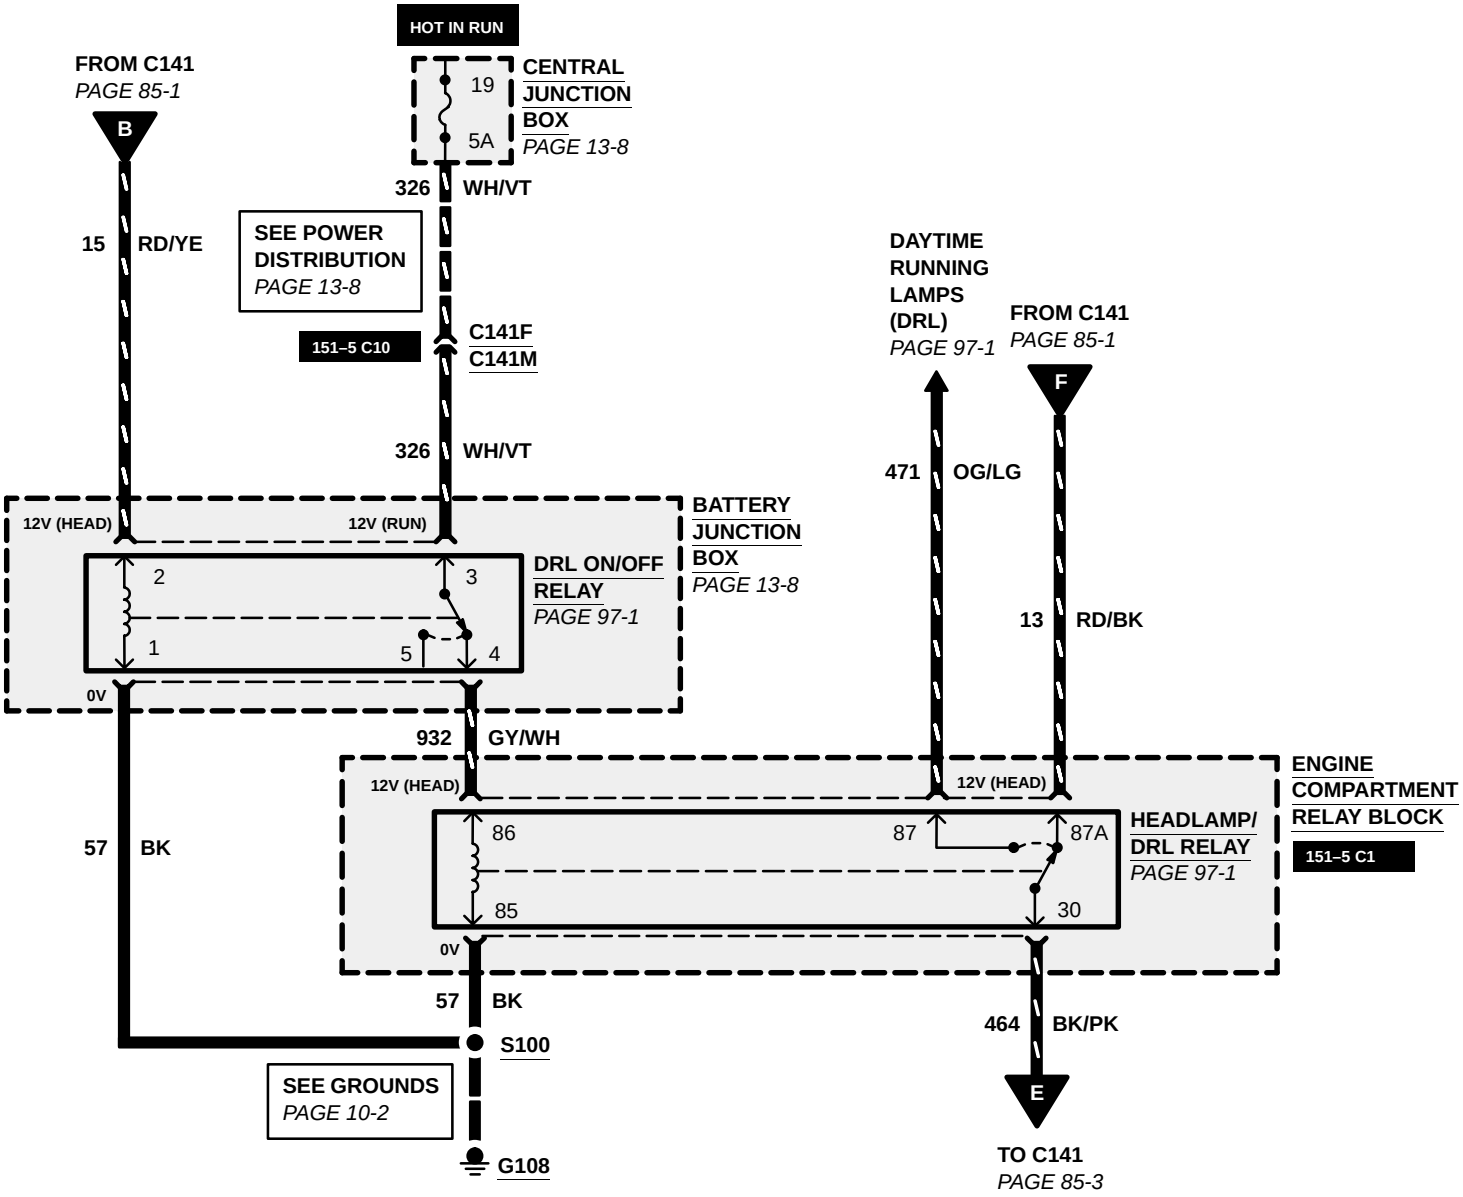
HOT IN RUN
FROM C141
PAGE 85-1
B
19
5A
CENTRAL JUNCTION BOX
PAGE 13-8
326 WH/VT
15 RD/YE
SEE POWER DISTRIBUTION
PAGE 13-8
151–5 C10
C141F
C141M
326 WH/VT
DAYTIME RUNNING LAMPS (DRL)
PAGE 97-1
FROM C141
PAGE 85-1
F
471 OG/LG
13 RD/BK
12V (HEAD)
12V (RUN)
BATTERY JUNCTION BOX
PAGE 13-8
2
3
1
5
4
DRL ON/OFF RELAY
PAGE 97-1
0V
932 GY/WH
12V (HEAD)
12V (HEAD)
ENGINE COMPARTMENT RELAY BLOCK
151–5 C1
86
87
87A
85
30
HEADLAMP/ DRL RELAY
PAGE 97-1
0V
57 BK
57 BK
464 BK/PK
S100
SEE GROUNDS
PAGE 10-2
E
G108
TO C141
PAGE 85-3