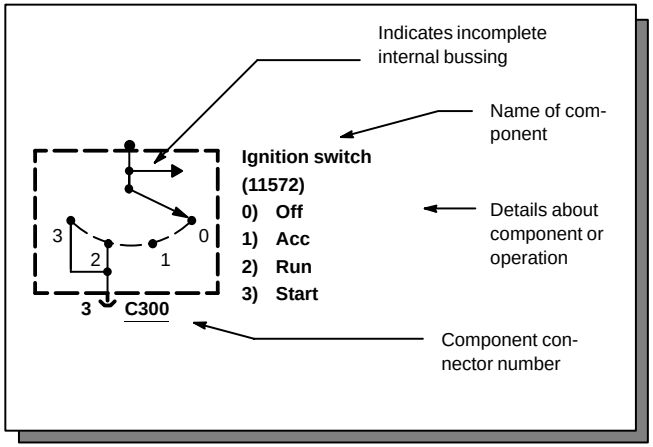
Indicates incomplete internal bussing
Name of component
Ignition switch
(11572)
0) Off
1) Acc
2) Run
3) Start
Details about component or operation
3
2
1
0
3 C300
Component connector number

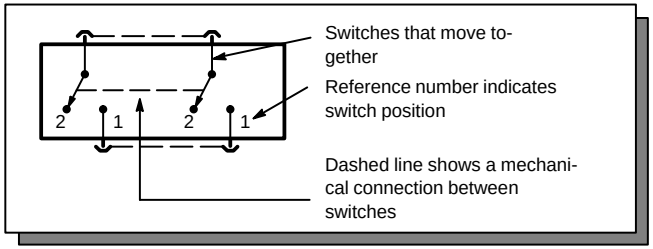
Switches that move together
Reference number indicates switch position
Dashed line shows a mechanical connection between switches
2
1
2
1

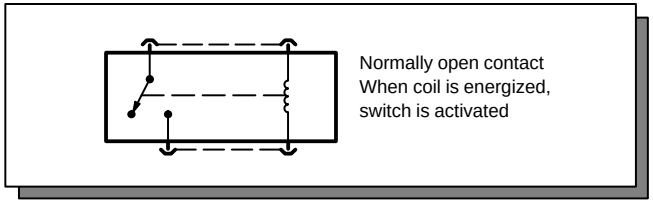
Normally open contact
When coil is energized, switch is activated

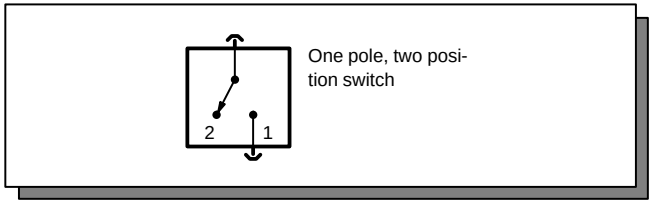
One pole, two position switch
2
1

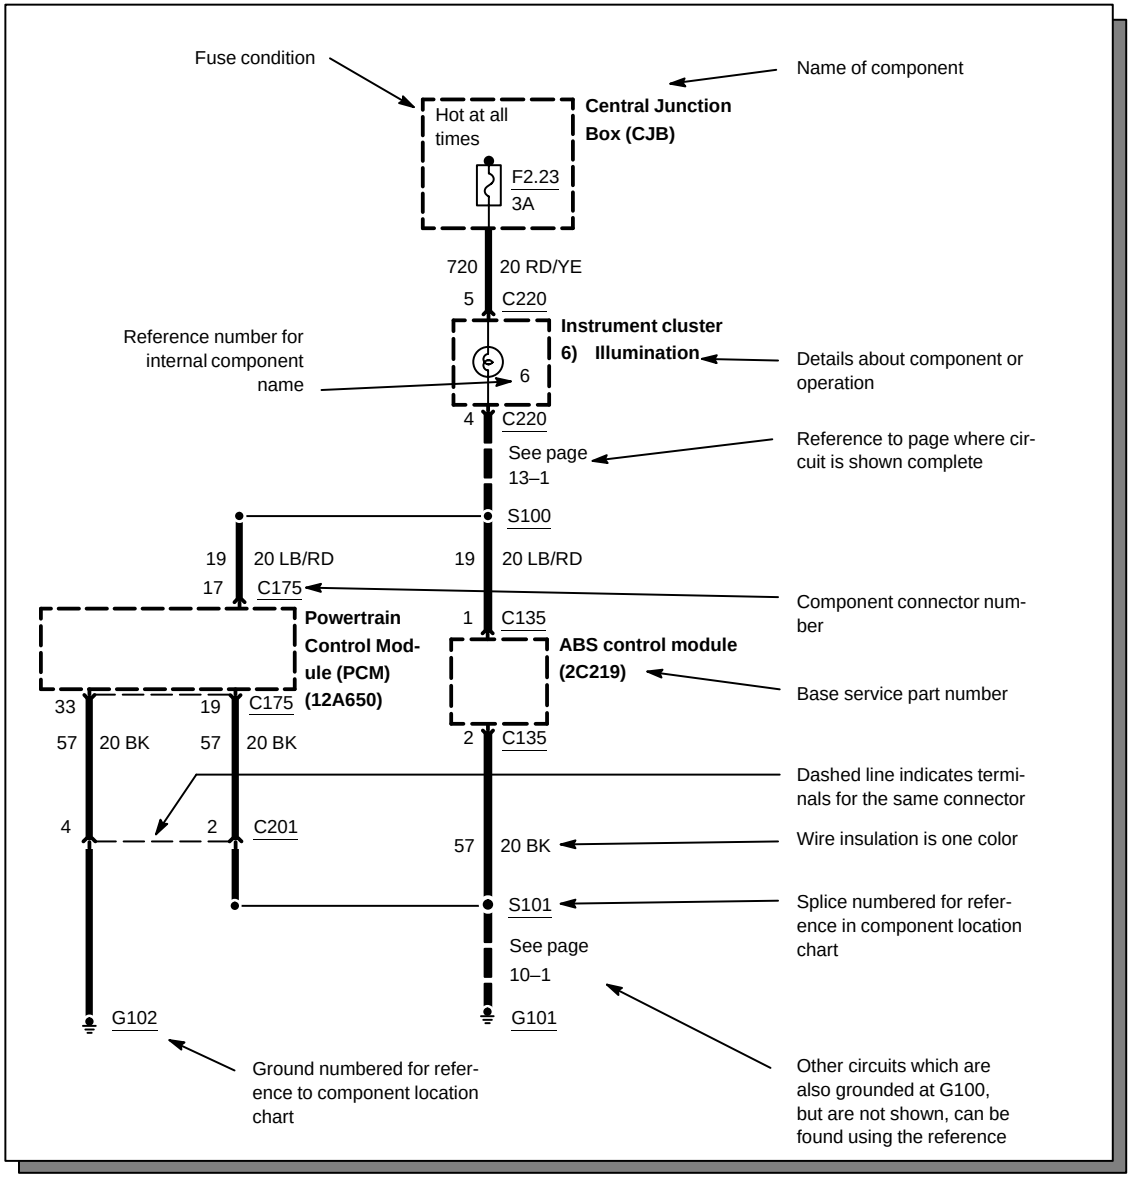
Fuse condition
Name of component
Hot at all times
Central Junction Box (CJB)
F2.23
3A
720 20 RD/YE
5 C220
Instrument cluster
6) Illumination
Reference number for internal component name
Details about component or operation
6
4 C220
See page 13–1
Reference to page where circuit is shown complete
S100
19 20 LB/RD
17 C175
19 20 LB/RD
1 C135
Component connector number
Powertrain Control Module (PCM)
(12A650)
ABS control module
(2C219)
Base service part number
33 19 C175
57 20 BK
57 20 BK
2 C135
Dashed line indicates terminals for the same connector
4
2 C201
57 20 BK
Wire insulation is one color
S101
Splice numbered for reference in component location chart
See page 10–1
G102
G101
Ground numbered for reference to component location chart
Other circuits which are also grounded at G100, but are not shown, can be found using the reference