C1054

14398

K41
Ignition relay

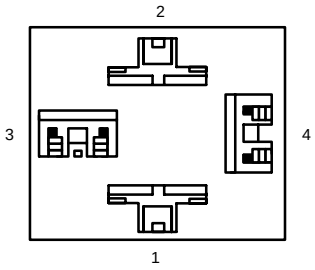

F04291

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
3	326 (WH/VT)	Central Junction Box (CJB) (14A068) to Ignition relay
4	1050 (LG/VT)	Voltage supplied at all times (overload protected)

C1065

12B637

T1
Ignition coil (12029)

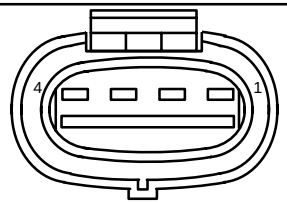

F04215

Pin	Circuit	Circuit function
1	20 (WH/LB)	Voltage supplied in Start and Run (overload protected)
2	527 (RD/LB)	PCM to Ignition coil (12029)
3	528 (PK/WH)	PCM to Ignition coil (12029)
4	526 (DB/LG)	PCM to Ignition coil (12029)

C1066

12B637

Y133
Idle Air Control
(IAC) valve (9F715)

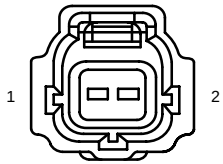

F02091

Pin	Circuit	Circuit function
1	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)
2	264 (WH/LB)	Idle Air Control (IAC) valve (9F715), control

C1064 (GY)

12B637

B10
Engine Coolant
Temperature (ECT)
sensor (12A648)

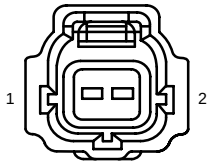

F02091

Pin	Circuit	Circuit function
1	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
2	359 (GY/RD)	signal, return

C1068 (GY)

12B637

B257
Differential Pressure
Feedback EGR
(DPFE) sensor
(9J460)

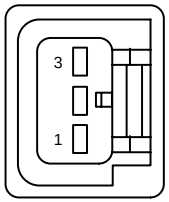

F03201

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference, voltage
2	359 (GY/RD)	signal, return
3	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input