C603 (WH)

14630

Door lock actuator,
right front

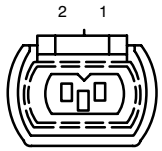

F02116

Pin	Circuit	Circuit function
1	1383 (RD)	motor drive +/–
2	1384 (LB)	motor drive +/–

C606 (WH)

14630

Door entry lamp,
right front (13776)

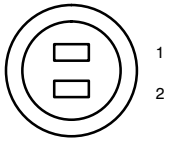

F02086

Pin	Circuit	Circuit function
1	1334 (OG/WH)	Switched ground
2	1458 (VT/WH)	Voltage supplied at all times (overload protected)

C605 (GN)

14630

Door lock switch,
passenger side
(14028)

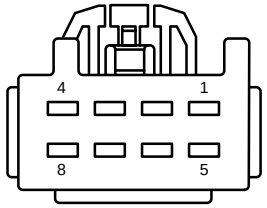

F08217

Pin	Circuit	Circuit function
1	1205 (BK)	Ground, Instrument illumination
2	–	not used
3	1297 (YE/RD)	signal, Door unlock
4	1205 (BK)	Ground
5	194 (PK)	Instrument illumination
6	–	not used
7	1296 (OG/BK)	signal, Door lock
8	–	not used

C610 (GY)

14630

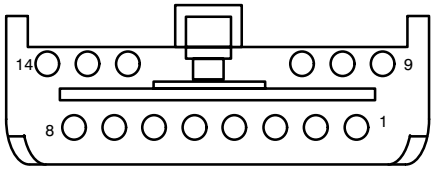

F14002

14A005

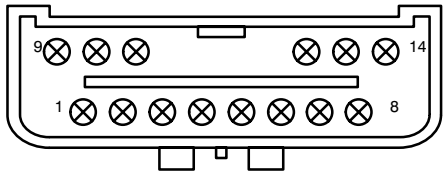

F14008

(1) 543 (DG)
(2) 1545 (OG)
(3) 1384 (LB)
(4) 1383 (RD)
(5) 1297 (YE/RD)
(6) 1296 (OG/BK)
(7) 1315 (LB/PK)
(8) 59 (DG/VT)
(9) 1547 (RD)
(10) 1340 (DG)
(11) 1334 (OG/WH)
(12) 1458 (VT/WH)
(13) 194 (PK)
(14) 544 (VT)