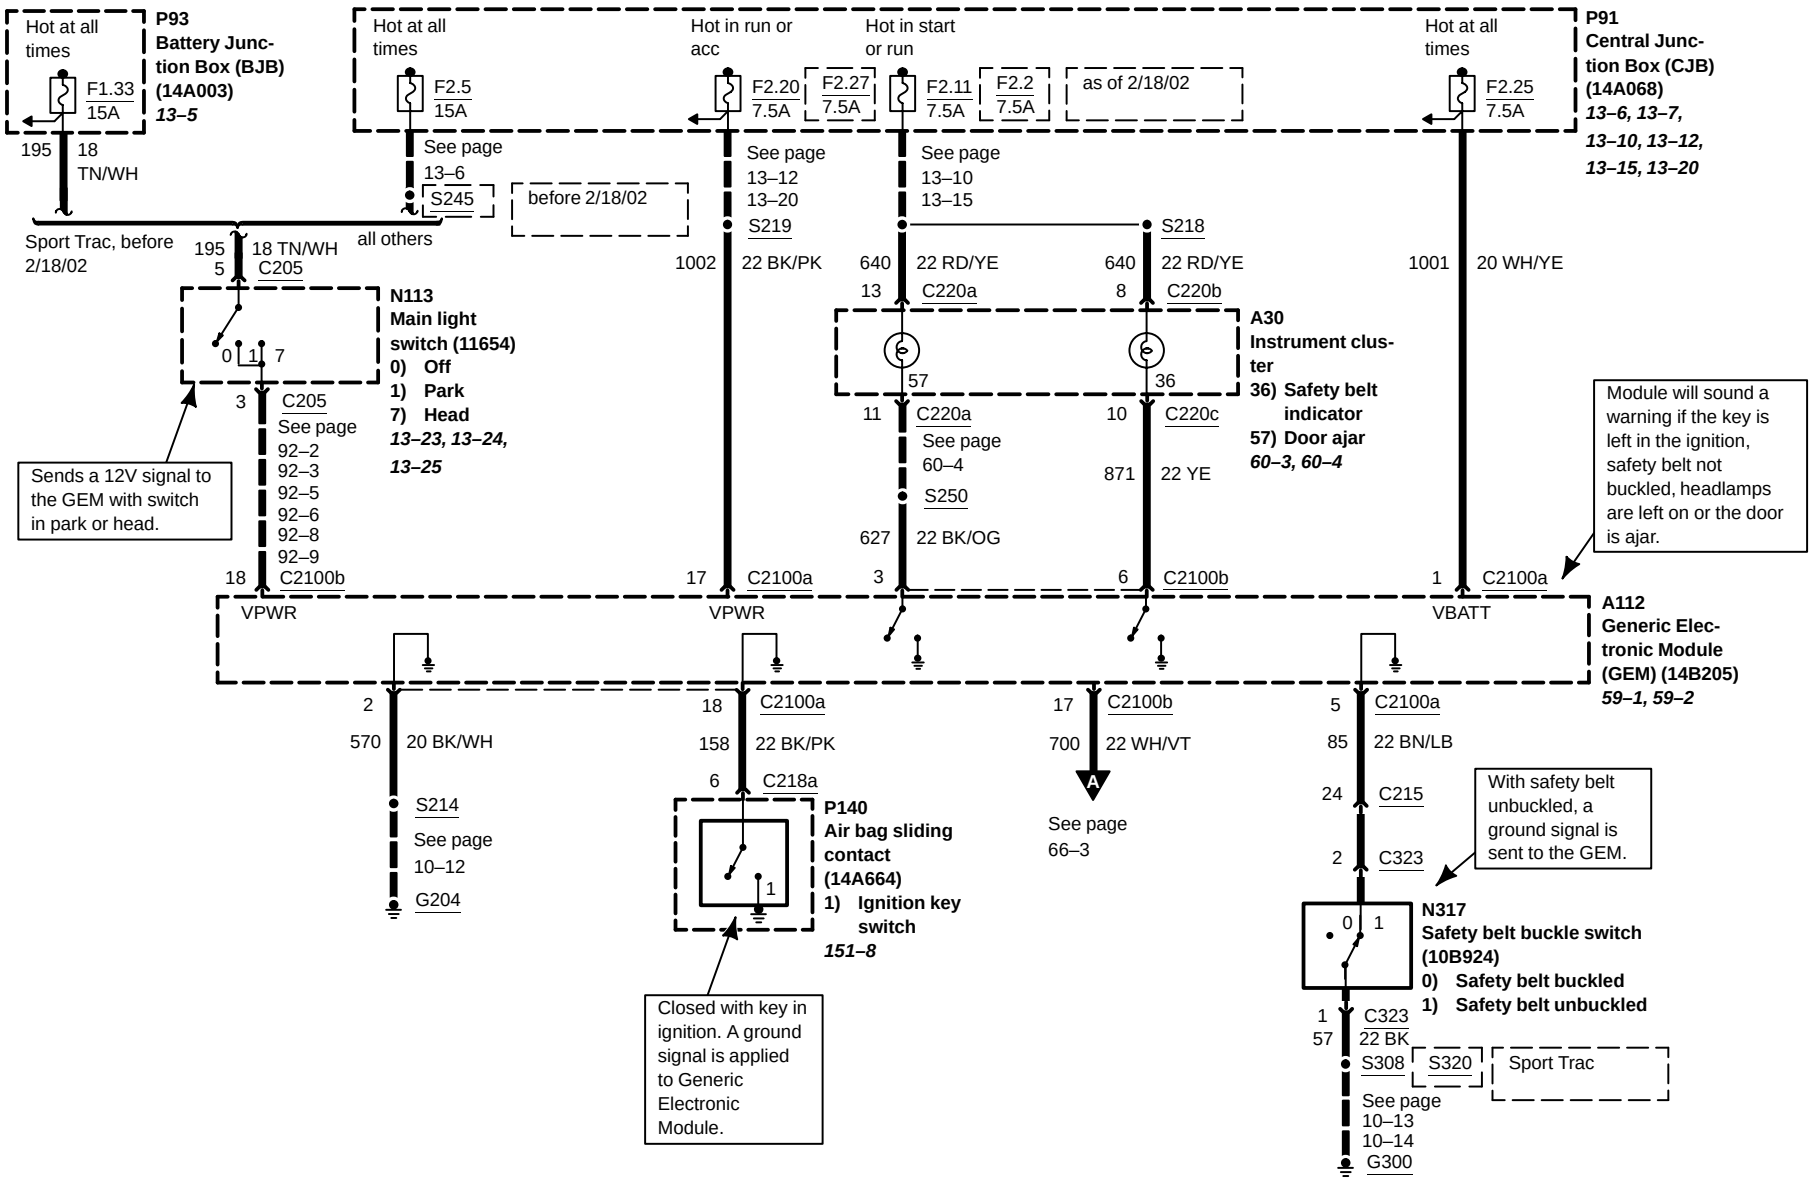
Hot at all times
F1.33 15A
P93 Battery Junction Box (BJB) (14A003) 13–5
195
18 TN/WH
Hot at all times
F2.5 15A
See page 13–6
S245
before 2/18/02
Hot in run or acc
F2.20 7.5A
F2.27 7.5A
See page 13–12 13–20
S219
Hot in start or run
F2.11 7.5A
F2.2 7.5A
as of 2/18/02
See page 13–10 13–15
S218
Hot at all times
F2.25 7.5A
P91 Central Junction Box (CJB) (14A068) 13–6, 13–7, 13–10, 13–12, 13–15, 13–20
Sport Trac, before 2/18/02
195
5
18 TN/WH
C205
all others
1002
22 BK/PK
640
13
22 RD/YE
C220a
640
8
22 RD/YE
C220b
1001
20 WH/YE
N113 Main light switch (11654)
0) Off
1) Park
7) Head
13–23, 13–24, 13–25
A30 Instrument cluster
36) Safety belt indicator
57) Door ajar
60–3, 60–4
57
36
Sends a 12V signal to the GEM with switch in park or head.
3
C205
See page 92–2 92–3 92–5 92–6 92–8 92–9
11
C220a
See page 60–4
S250
627
22 BK/OG
10
C220c
871
22 YE
Module will sound a warning if the key is left in the ignition, safety belt not buckled, headlamps are left on or the door is ajar.
18
C2100b
17
C2100a
3
6
C2100b
1
C2100a
VPWR
VPWR
VBATT
A112 Generic Electronic Module (GEM) (14B205) 59–1, 59–2
2
570
20 BK/WH
S214
See page 10–12
G204
18
C2100a
158
22 BK/PK
6
C218a
P140 Air bag sliding contact (14A664)
1) Ignition key switch
151–8
Closed with key in ignition. A ground signal is applied to Generic Electronic Module.
17
C2100b
700
22 WH/VT
A
See page 66–3
5
C2100a
85
22 BN/LB
24
C215
2
C323
With safety belt unbuckled, a ground signal is sent to the GEM.
N317 Safety belt buckle switch (10B924)
0) Safety belt buckled
1) Safety belt unbuckled
1
57
C323
22 BK
S308
S320
Sport Trac
See page 10–13 10–14
G300