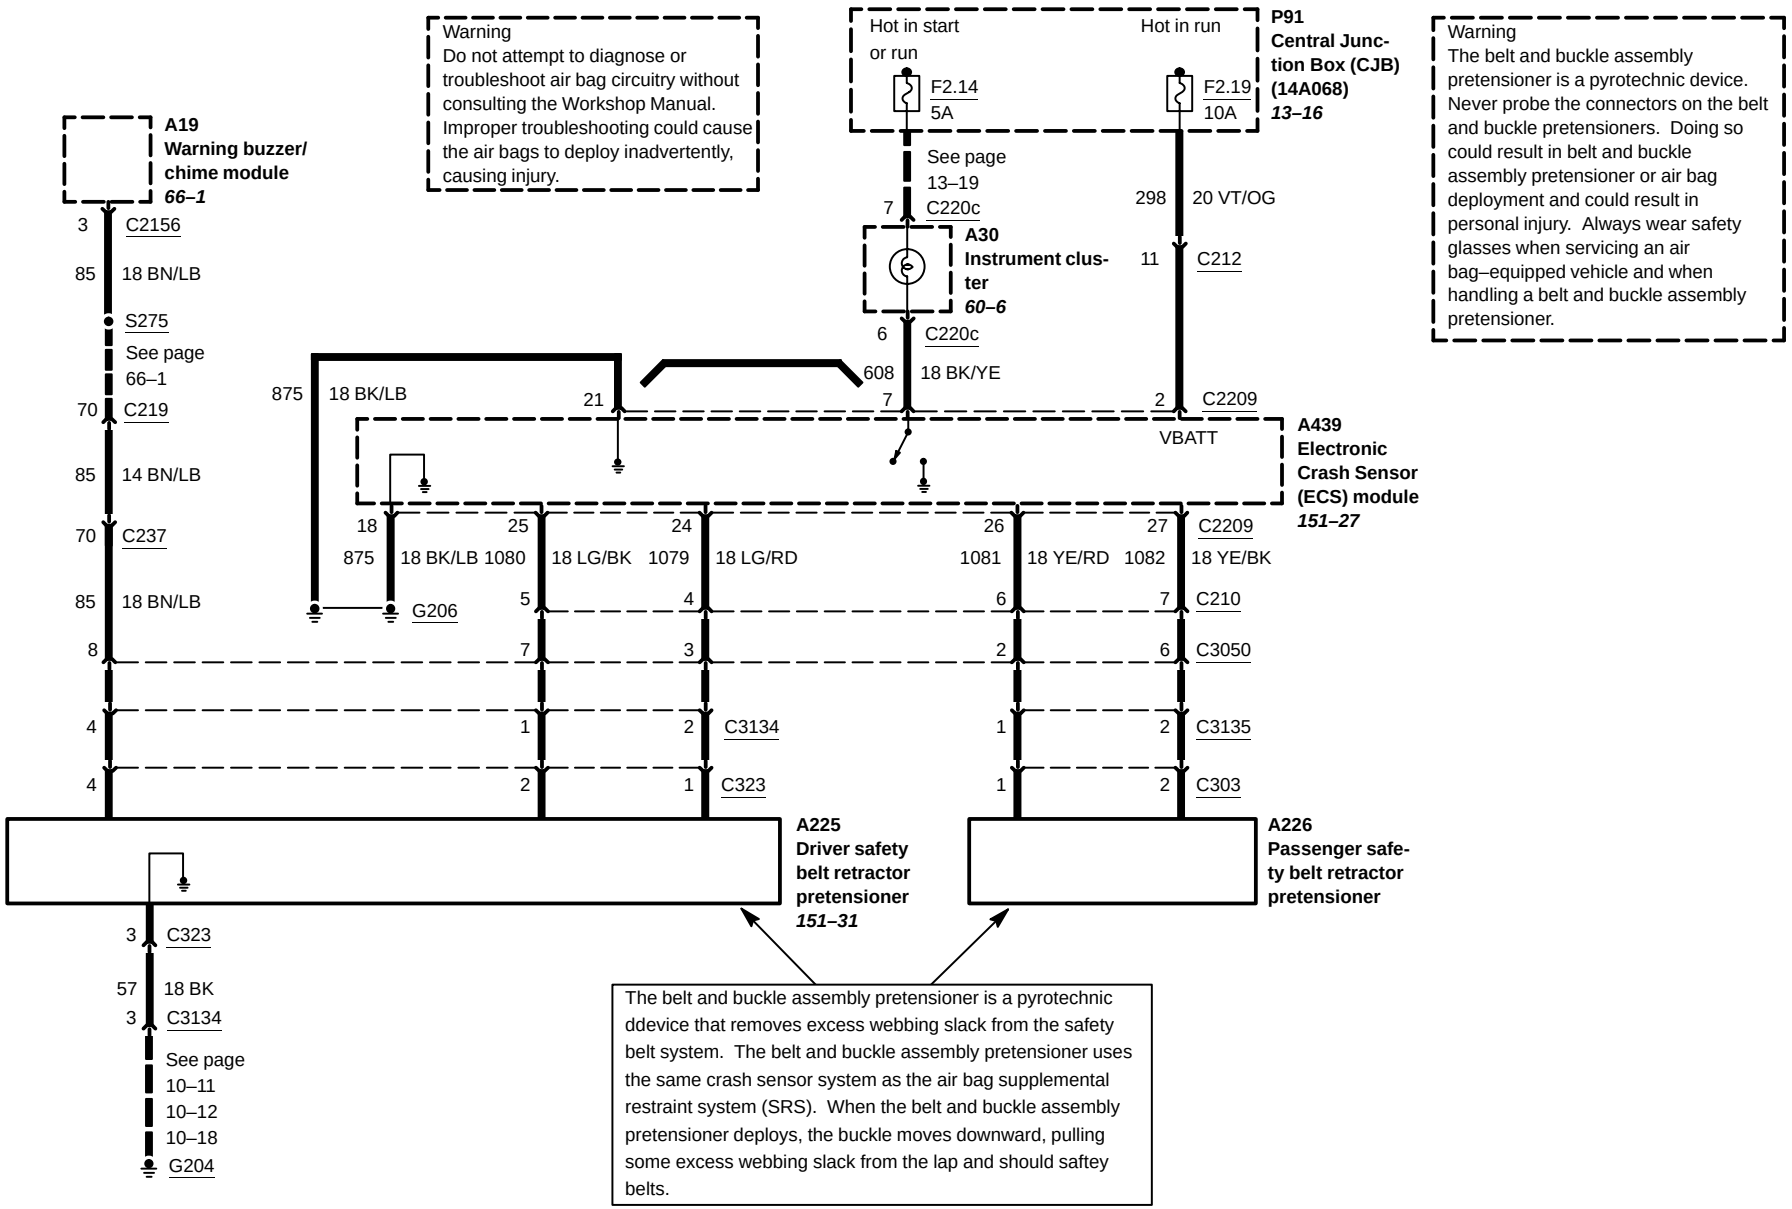
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Warning
The belt and buckle assembly pretensioner is a pyrotechnic device. Never probe the connectors on the belt and buckle pretensioners. Doing so could result in belt and buckle assembly pretensioner or air bag deployment and could result in personal injury. Always wear safety glasses when servicing an air bag–equipped vehicle and when handling a belt and buckle assembly pretensioner.
A19 Warning buzzer/ chime module 66–1
P91 Central Junction Box (CJB) (14A068) 13–16
Hot in start or run
Hot in run
F2.14 5A
F2.19 10A
See page 13–19
A30 Instrument cluster 60–6
A439 Electronic Crash Sensor (ECS) module 151–27
VBATT
A225 Driver safety belt retractor pretensioner 151–31
A226 Passenger safety belt retractor pretensioner
See page 66–1
See page 10–11
10–12
10–18
G206
G204
The belt and buckle assembly pretensioner is a pyrotechnic ddevice that removes excess webbing slack from the safety belt system. The belt and buckle assembly pretensioner uses the same crash sensor system as the air bag supplemental restraint system (SRS). When the belt and buckle assembly pretensioner deploys, the buckle moves downward, pulling some excess webbing slack from the lap and should saftey belts.