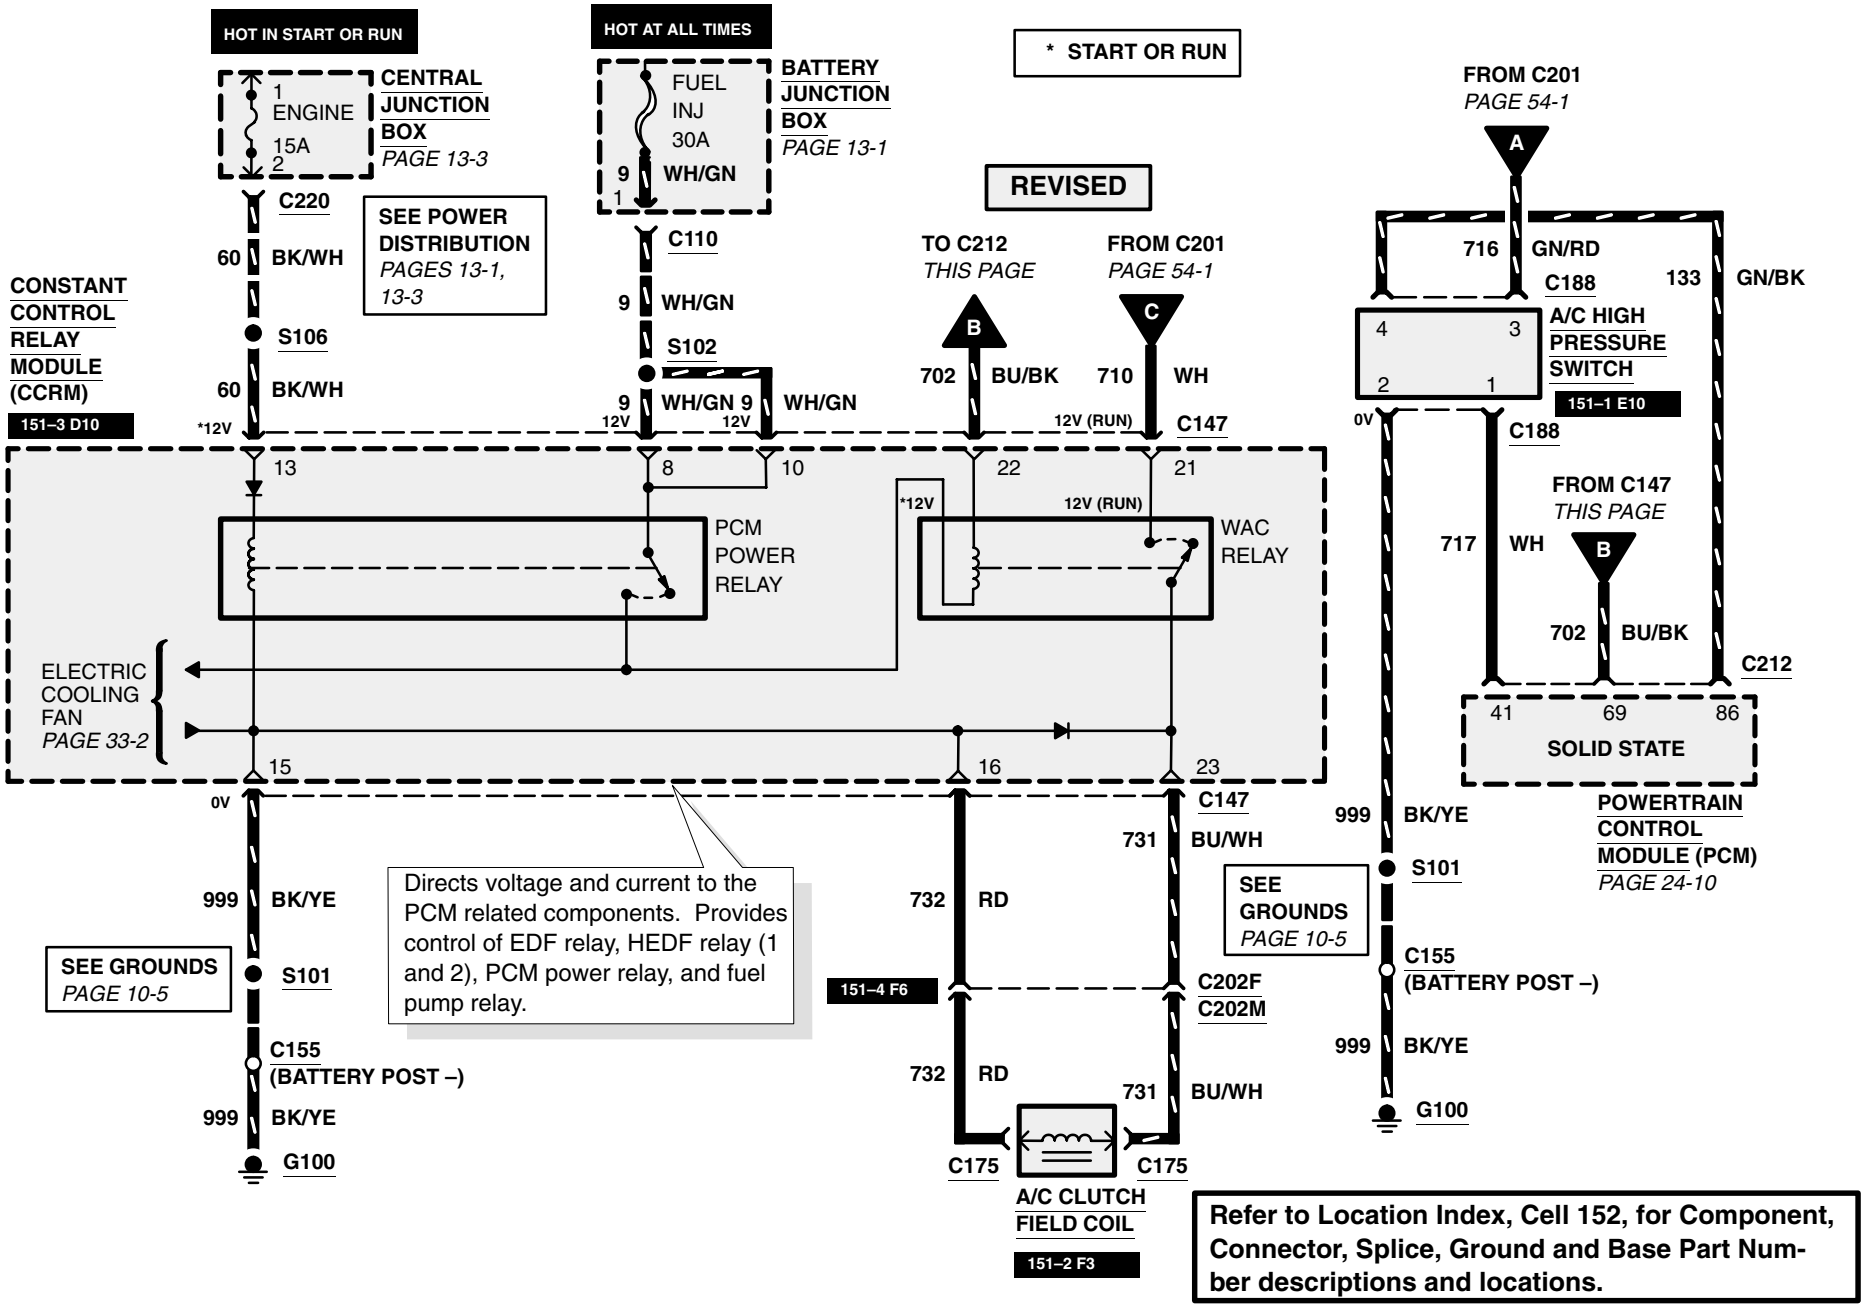
HOT IN START OR RUN
HOT AT ALL TIMES
* START OR RUN
REVISED
CENTRAL JUNCTION BOX
PAGE 13-3
1 ENGINE 15A 2
BATTERY JUNCTION BOX
PAGE 13-1
FUEL INJ 30A
9 WH/GN 1
SEE POWER DISTRIBUTION
PAGES 13-1, 13-3
CONSTANT CONTROL RELAY MODULE (CCRM)
151–3 D10
C220
60 BK/WH
S106
60 BK/WH
*12V
C110
9 WH/GN
S102
9 WH/GN 9 WH/GN
12V 12V
TO C212
THIS PAGE
FROM C201
PAGE 54-1
B
C
702 BU/BK
710 WH
12V (RUN)
C147
13
8
10
22
21
*12V
12V (RUN)
PCM POWER RELAY
WAC RELAY
ELECTRIC COOLING FAN
PAGE 33-2
15
16
23
0V
999 BK/YE
S101
SEE GROUNDS
PAGE 10-5
C155
(BATTERY POST –)
999 BK/YE
G100
Directs voltage and current to the PCM related components. Provides control of EDF relay, HEDF relay (1 and 2), PCM power relay, and fuel pump relay.
731 BU/WH
732 RD
151–4 F6
C202F
C202M
732 RD
731 BU/WH
C175
C175
A/C CLUTCH FIELD COIL
151–2 F3
FROM C201
PAGE 54-1
A
716 GN/RD
C188
133 GN/BK
4 3 2 1
A/C HIGH PRESSURE SWITCH
151–1 E10
0V
C188
FROM C147
THIS PAGE
717 WH
B
702 BU/BK
C212
41 69 86
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGE 24-10
999 BK/YE
S101
SEE GROUNDS
PAGE 10-5
C155
(BATTERY POST –)
999 BK/YE
G100
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.