C1928 (WH)

14K138

N138
Door lock/unlock
switch, passenger

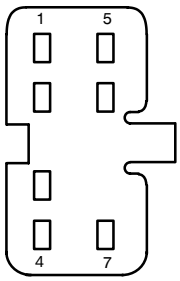

F07016

Pin	Circuit	Circuit Function
1	32-AA39 (WH)	Switched between: Battery voltage, Ground or Open
2	31-AA39 (BK) + 31-LH28 (BK)	Ground
3	–	not used
4	31-LH23 (BK) + 31-LH28 (BK)	Ground
5	15-LH28 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
6	–	not used
7	33-AA39 (YE)	Switched between: Battery voltage, Ground or Open

C1930

9F759

B113
Fuel tank pressure
transducer sensor

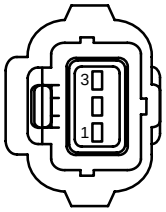

F03093

Pin	Circuit	Circuit Function
1	7-RJ13 (YE/VT)	Voltage D.C. supplied at all times (sensor)
2	9-RJ13 (BN/WH)	Sensor signal return (reference/ground)
3	8-RJ13 (WH/VT)	Sensor signal

C1936

14K733

F01009

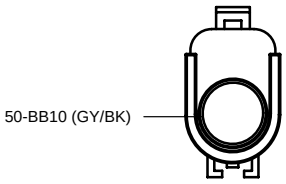

14300
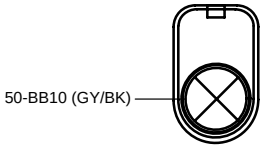
F01010