C704

14A005

M64
Door lock actuator,
left rear (218A43)

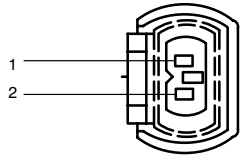

F02116

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output

C715

14A005

N237
Door ajar switch,
driver side rear
(14018)

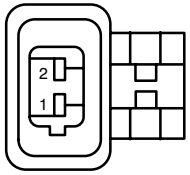

F02117

Pin	Circuit	Circuit Function
1	627 (BK/OG)	Door ajar indicator, control
2	875 (BK/LB)	Ground

C801a

14A005

N110
Window adjust
switch, right rear
(14A412)

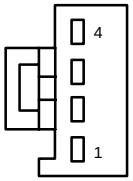

F04153

Pin	Circuit	Circuit Function
1	320 (RD/BK)	Window switch, feed, right rear, Down
2	1002 (BK/PK)	Voltage in Run or Accessory (overload protected)
3	170 (RD/LB)	Window lockout, switched power, output
4	319 (YE/BK)	Window switch, feed, right rear, Up

C801b

14A005

N110
Window adjust switch, right rear
(14A412)

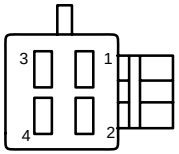

F04193

Pin	Circuit	Circuit Function
1	769 (GY/LB)	Voltage supplied at all times (overload protected)
2	881 (BN)	Window switch, to, Window motor, right rear
3	882 (BN/YE)	Window switch, to, Window motor, right rear
4	57 (BK)	Ground

C802

14A005

Y19
Speaker, right rear
(18808)

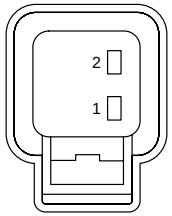

F02337

Pin	Circuit	Circuit Function
1	802 (OG/RD)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –

C803

14A005

M117
Power window mo-
tor, right rear
(23394)



F02073

Pin	Circuit	Circuit Function
1	882 (BN/YE)	Window switch, to, Window motor, right rear
2	881 (BN)	Window switch, to, Window motor, right rear