C704 (GY)

14A005

Door lock actuator, left rear (218A43)

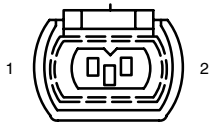

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door unlock, output
2	117 (PK/BK)	Door lock, output

C715 (BK)

14A005

Door ajar switch, driver side rear (14018)

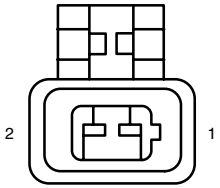

F02117

Pin	Circuit	Circuit function
1	363 (BK/LB)	Door ajar switch, left rear, input
2	57 (BK)	Ground

C801 (GY)

14A005

Window adjust switch, right rear (14A412)

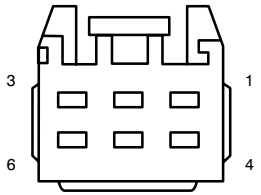

F06303

Pin	Circuit	Circuit function
1	320 (RD/BK)	Window switch, feed, right rear – Up
2	881 (BN)	Window switch, to, Window motor – Down
3	193 (YE/LG)	Window lockout, feed
4	–	not used
5	882 (BN/YE)	Window switch, to, Window motor – Up
6	319 (YE/BK)	Window switch, feed, right rear – Down

* Harley Davidson

C802 (BK)

14632/14A005

Speaker, right rear (18808)

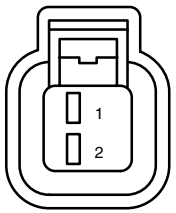

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Speaker, right rear (18808) +
	*825 (TN/LG)	Speaker, right rear (18808) +
2	803 (BN/PK)	Speaker, right rear (18808) –