C485

14A005

Y19
Speaker, right rear
(18808)



F02048

Pin	Circuit	Circuit function
1	803 (BN/PK)	Speaker, right rear (18808) –
2	802 (OG/RD)	Speaker, right rear (18808) +

C516

14631

M259
Exterior rear view
mirror, left



F03177

Pin	Circuit	Circuit function
1	540 (RD)	Right/Left mirror movement, Left
2	541 (DB)	Up/Down mirror movement, Left
3	542 (YE)	Mirror motor, feed

C508

14631

N416
Master window/door
lock/unlock switch

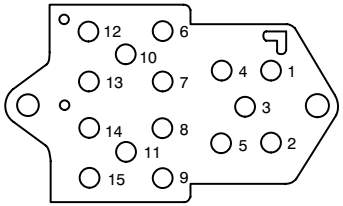

F15029

Pin	Circuit	Circuit function
1	–	not used
2	1014 (VT)	Door lock actuator
3	326 (WH/VT)	Voltage supplied at all times (overload protected)
4	129 (LG)	Door lock actuator
5	–	not used
6	991 (TN/LB)	Master window adjust switch +/–
7	1205 (BK)	Ground
8	314 (TN/LB)	Window switch, right front +/–
9	1205 (BK)	Ground
10	400 (LB/BK)	Voltage in Run or Accessory (overload protected)
11	400 (LB/BK)	Voltage in Run or Accessory (overload protected)
12	1205 (BK)	Ground
13	992 (WH/BK)	Master window adjust switch +/–
14	1205 (BK)	Ground
15	313 (WH/YE)	Window switch, right front +/–

C518

14631

M243
Power window mo-
tor, left front



Pin	Circuit	Circuit function
1	226 (WH/BK)	Power window motor, left front +/–
2	992 (WH/BK)	Power window motor, left front +/–

C523

14631

Y28
Speaker, left front
(18808)



F02048

Pin	Circuit	Circuit function
1	813 (LB/WH)	Speaker, left front (18808) –
2	804 (OG/LG)	Speaker, left front (18808) +