C2222

14401

A447
Warning lamps module

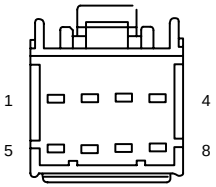

Pin	Circuit	Circuit function
1	608 (BK/YE)	Air bag indicator, control
2	603 (DG)	Anti–lock brake indicator, control
3	977 (VT/WH)	Brake indicator, control
4	383 (RD/WH)	Emergency warning flasher, feed
5	–	not used
6	–	not used
7	57 (BK)	Ground
8	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)

C2230

14A005

A455
Electronic Variable Orifice (EVO) steering module

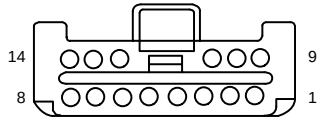

Pin	Circuit	Circuit function
1	633 (RD)	+ Steering position sensor (18B015), to, Electronic Variable Orifice (EVO) steering module, Terminal +A
2	844 (GY/RD)	EVO diagnostic connector
3	419 (DG/LG)	Electronic Variable Orifice (EVO) steering module, to, Instrumentation and Warning System
4	432 (BK/PK)	Electronic Variable Orifice (EVO) steering module,
5	57 (BK)	Ground Ground
6	634 (BN)	Steering position sensor (18B015), to, Electronic Variable Orifice (EVO) steering module, Terminal +B
7	298 (VT/OG)	Voltage in Run (overload protected)
8	676 (PK/OG)	Vehicle Speed Sensor (VSS) –
9	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
10	–	not used
11	–	not used
12	837 (YE/BK)	Steering position sensor (18B015), return
13	86 (GY/OG)	ZF gear solenoid +
14	87 (TN/YE)	Electronic variable orifice actuator (3A674)

C3014

14A005

A225
Driver safety belt retractor pretensioner

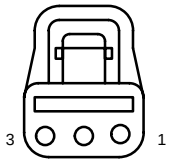

F03035

Pin	Circuit	Circuit function
1	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
2	–	not used
3	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed