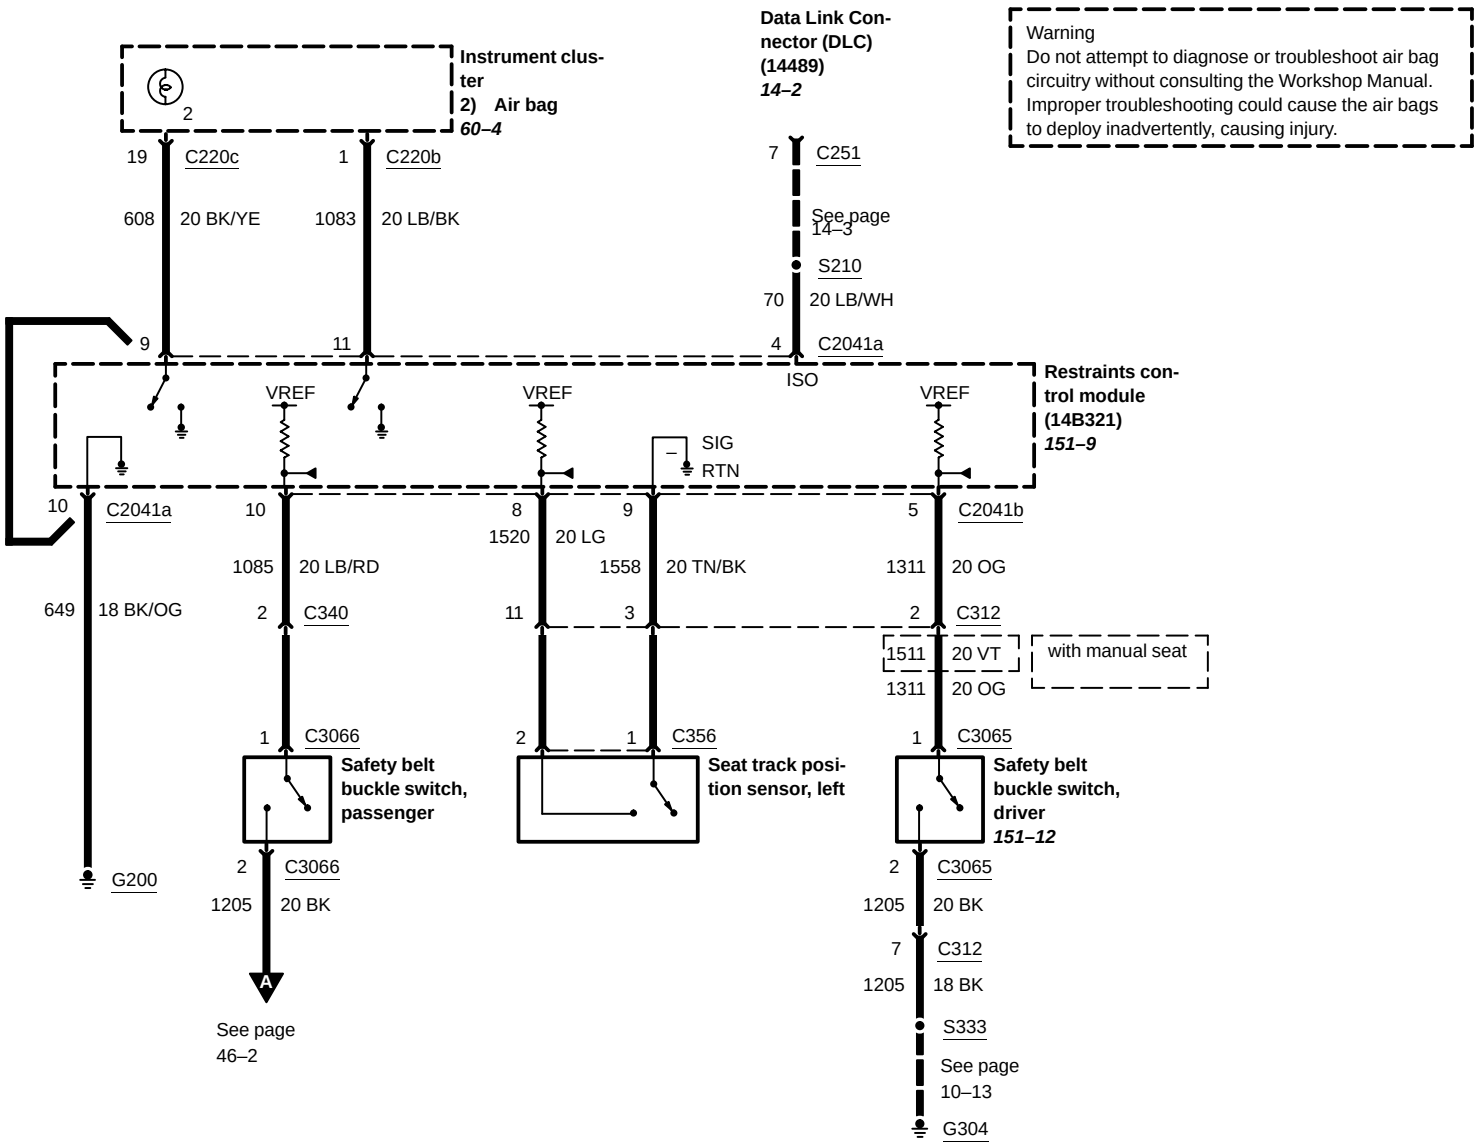
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
Instrument cluster
2) Air bag
60–4
Data Link Connector (DLC)
(14489)
14–2
19 C220c
608 20 BK/YE
1 C220b
1083 20 LB/BK
7 C251
See page 14–3
S210
70 20 LB/WH
4 C2041a
ISO
9
11
Restraints control module
(14B321)
151–9
VREF
VREF
VREF
SIG
RTN
10 C2041a
649 18 BK/OG
G200
10
1085 20 LB/RD
2 C340
1 C3066
Safety belt buckle switch, passenger
2 C3066
1205 20 BK
A
See page 46–2
8
1520 20 LG
9
1558 20 TN/BK
11
3
2 C356
1 C356
Seat track position sensor, left
5 C2041b
1311 20 OG
2 C312
1511 20 VT
with manual seat
1311 20 OG
1 C3065
Safety belt buckle switch, driver
151–12
2 C3065
1205 20 BK
7 C312
1205 18 BK
S333
See page 10–13
G304