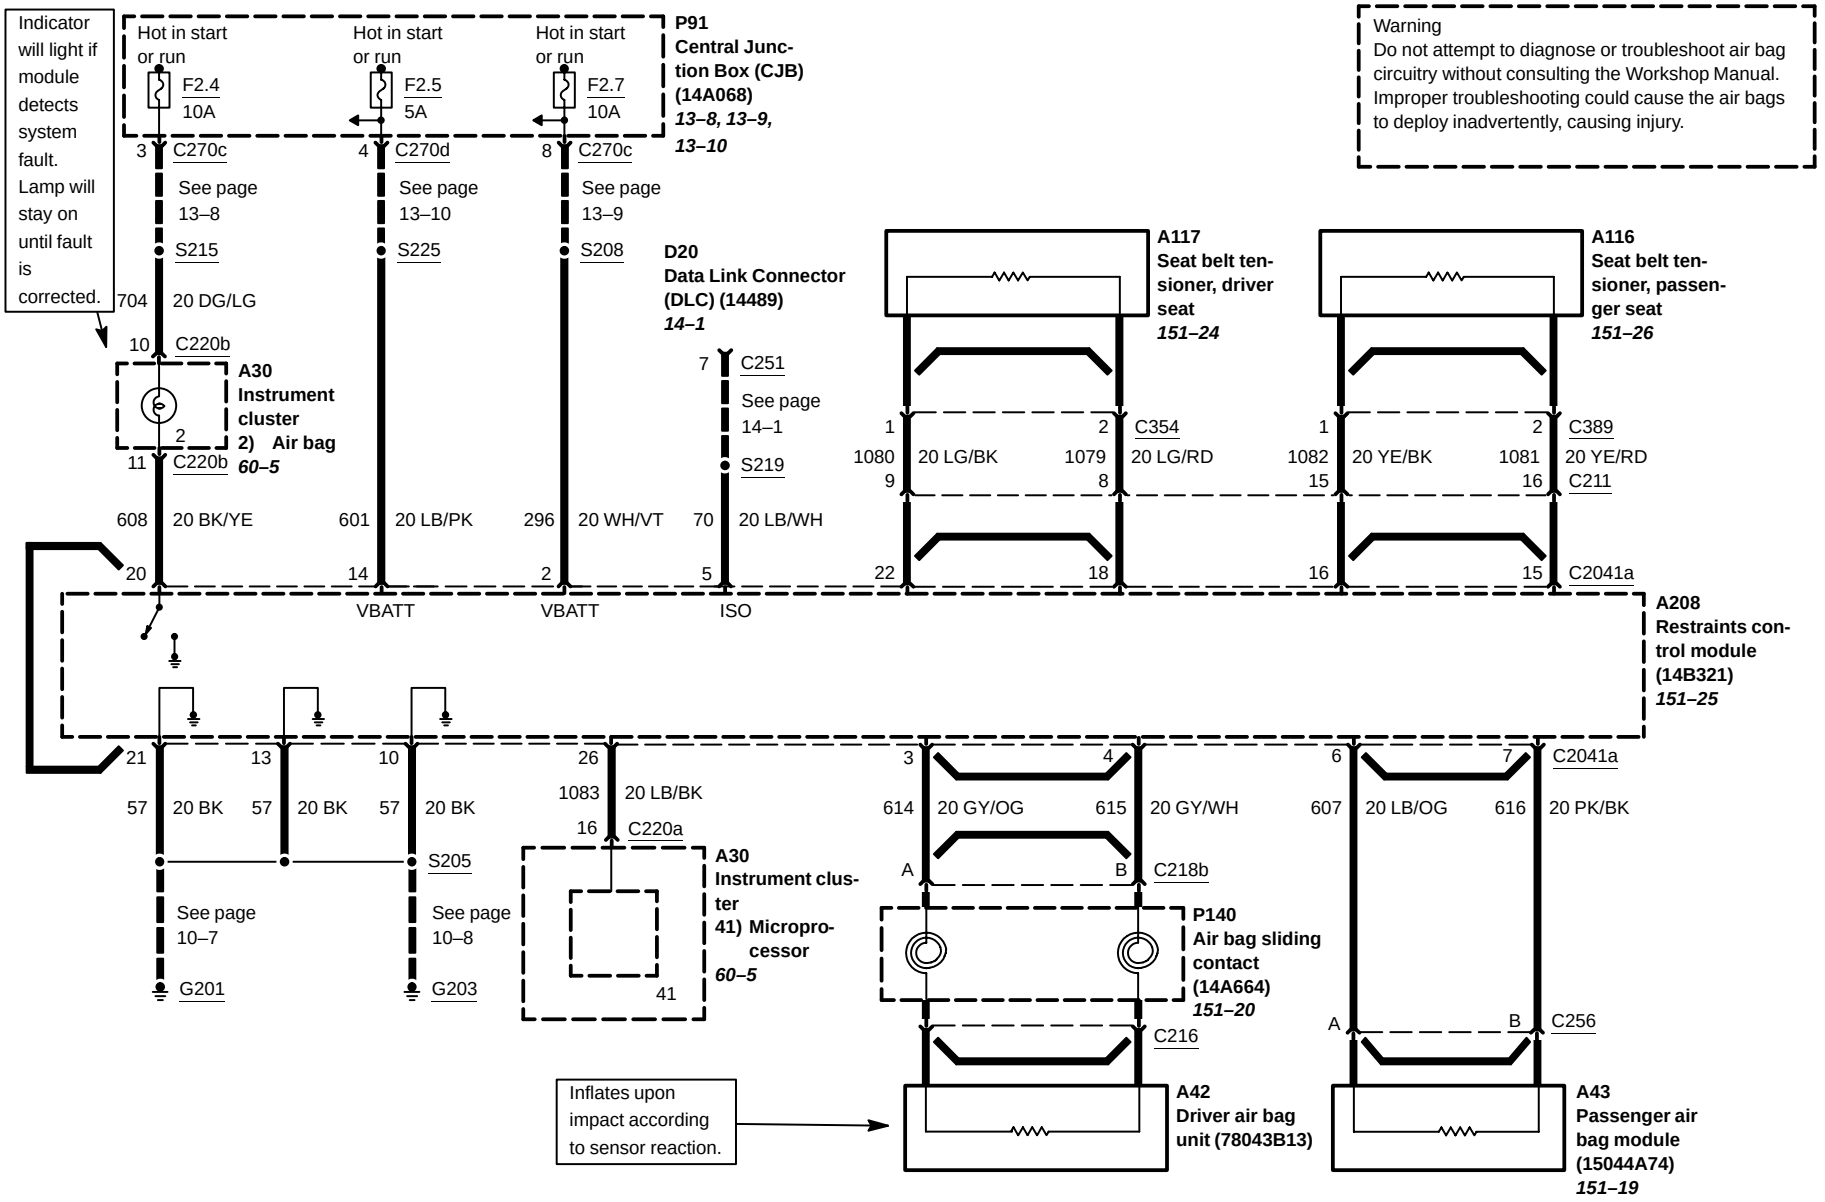
Indicator will light if module detects system fault. Lamp will stay on until fault is corrected.
Hot in start or run
F2.4 10A
Hot in start or run
F2.5 5A
Hot in start or run
F2.7 10A
P91 Central Junction Box (CJB) (14A068) 13–8, 13–9, 13–10
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
3 C270c
4 C270d
8 C270c
See page 13–8
See page 13–10
See page 13–9
S215
S225
S208
D20 Data Link Connector (DLC) (14489) 14–1
704 20 DG/LG
10 C220b
A30 Instrument cluster 2) Air bag 60–5
2
11 C220b
608 20 BK/YE
601 20 LB/PK
296 20 WH/VT
7 C251
See page 14–1
S219
70 20 LB/WH
A117 Seat belt tensioner, driver seat 151–24
A116 Seat belt tensioner, passenger seat 151–26
1 2 C354
1080 20 LG/BK 1079 20 LG/RD
9 8
1 2 C389
1082 20 YE/BK 1081 20 YE/RD
15 16 C211
22 18
16 15 C2041a
20 14 2 5
VBATT
VBATT
ISO
A208 Restraints control module (14B321) 151–25
21 13 10
57 20 BK 57 20 BK 57 20 BK
S205
See page 10–7
See page 10–8
G201
G203
26
1083 20 LB/BK
16 C220a
A30 Instrument cluster 41) Microprocessor 60–5
41
3 4
614 20 GY/OG 615 20 GY/WH
A B C218b
P140 Air bag sliding contact (14A664) 151–20
C216
6 7 C2041a
607 20 LB/OG 616 20 PK/BK
A B C256
Inflates upon impact according to sensor reaction.
A42 Driver air bag unit (78043B13)
A43 Passenger air bag module (15044A74) 151–19