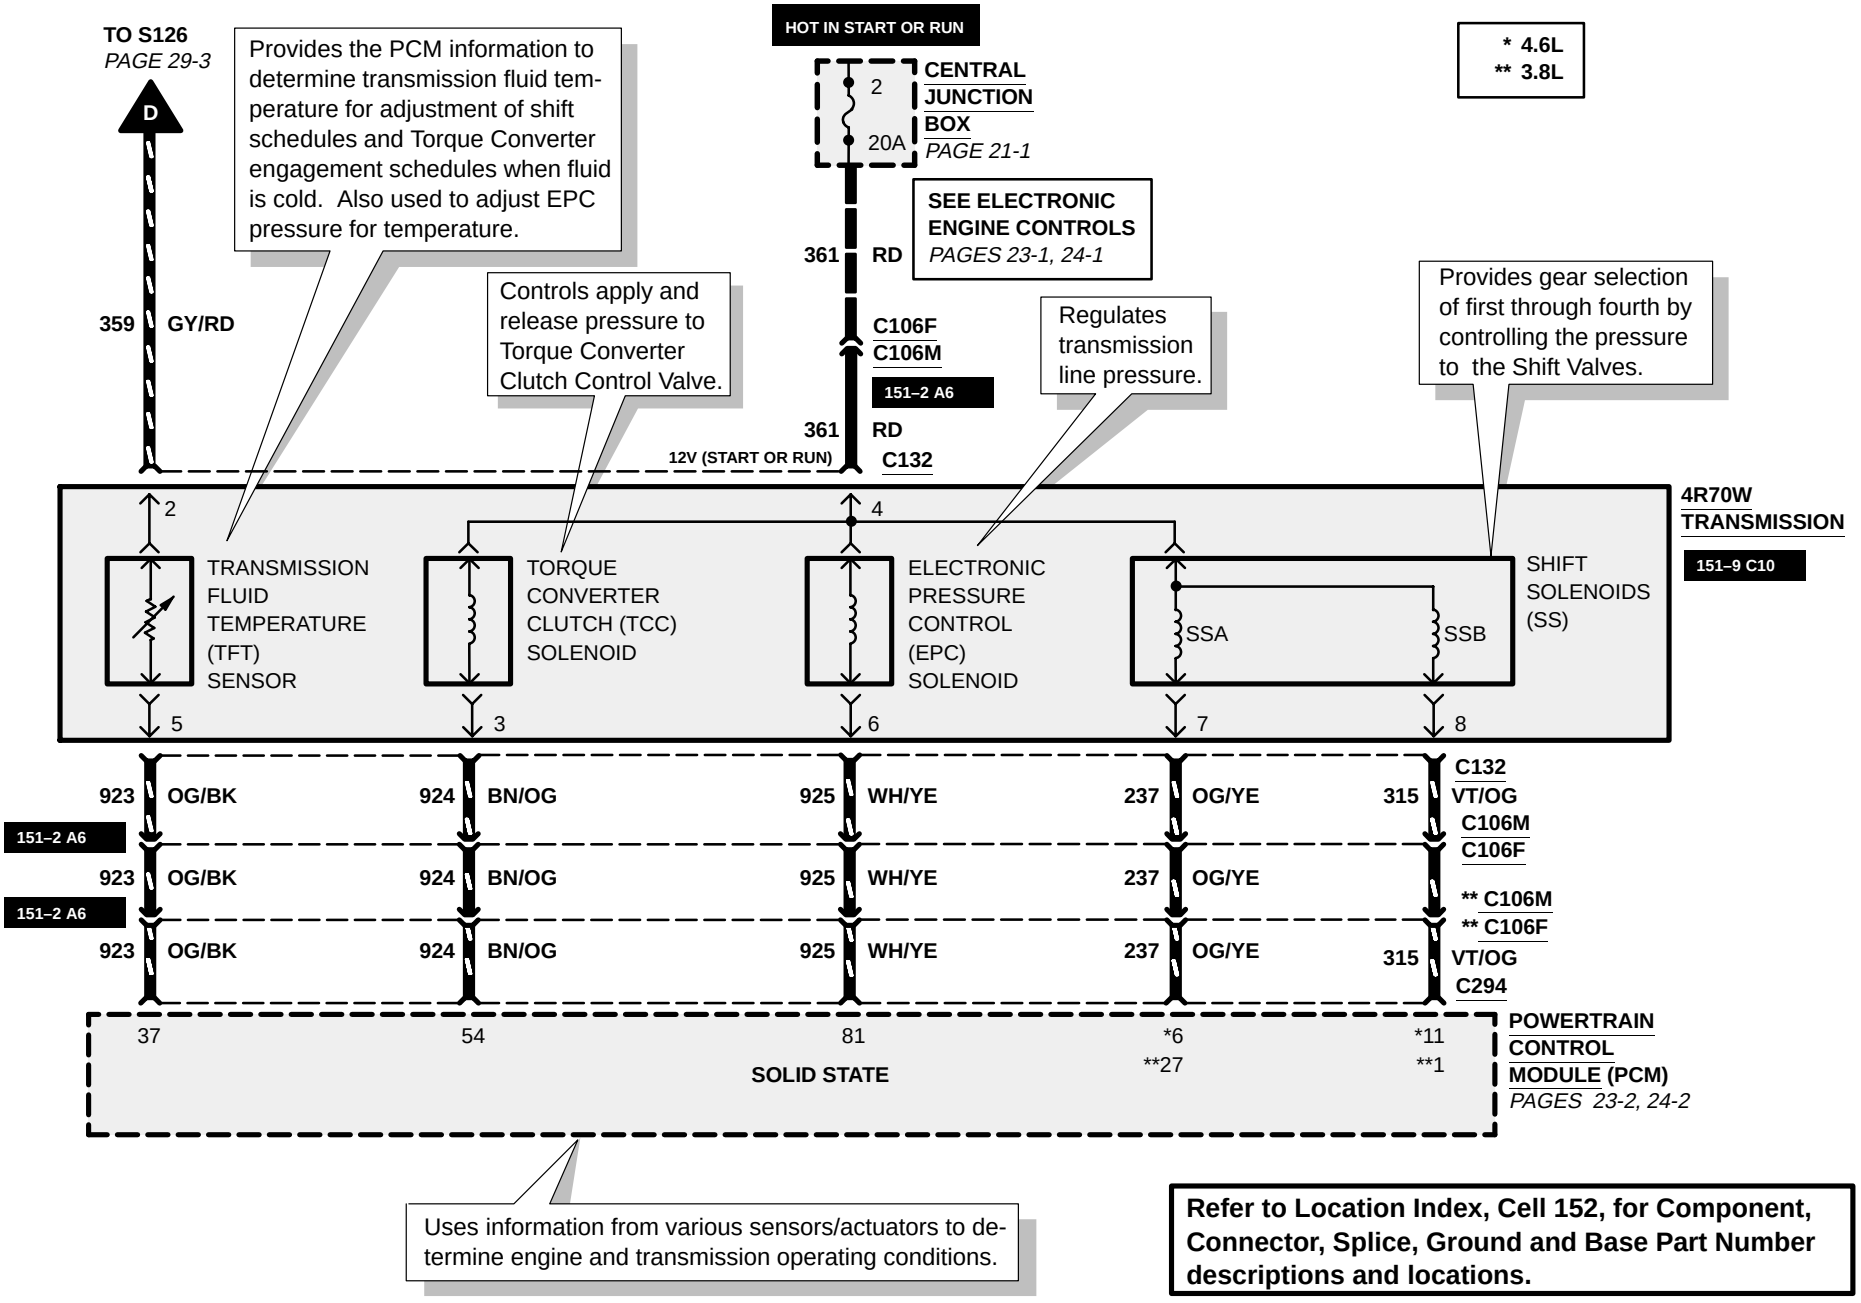
TO S126
PAGE 29-3
D
359 GY/RD
Provides the PCM information to determine transmission fluid temperature for adjustment of shift schedules and Torque Converter engagement schedules when fluid is cold. Also used to adjust EPC pressure for temperature.
HOT IN START OR RUN
2
20A
CENTRAL JUNCTION BOX
PAGE 21-1
SEE ELECTRONIC ENGINE CONTROLS
PAGES 23-1, 24-1
361 RD
C106F
C106M
151–2 A6
361 RD
12V (START OR RUN)
C132
Controls apply and release pressure to Torque Converter Clutch Control Valve.
Regulates transmission line pressure.
Provides gear selection of first through fourth by controlling the pressure to the Shift Valves.
* 4.6L
** 3.8L
4R70W TRANSMISSION
151–9 C10
2
4
TRANSMISSION FLUID TEMPERATURE (TFT) SENSOR
TORQUE CONVERTER CLUTCH (TCC) SOLENOID
ELECTRONIC PRESSURE CONTROL (EPC) SOLENOID
SSA
SSB
SHIFT SOLENOIDS (SS)
5
3
6
7
8
923 OG/BK
924 BN/OG
925 WH/YE
237 OG/YE
315 VT/OG
C132
C106M
C106F
151–2 A6
923 OG/BK
924 BN/OG
925 WH/YE
237 OG/YE
** C106M
** C106F
151–2 A6
923 OG/BK
924 BN/OG
925 WH/YE
237 OG/YE
315 VT/OG
C294
37
54
81
*6
**27
*11
**1
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-2, 24-2
Uses information from various sensors/actuators to determine engine and transmission operating conditions.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.