C870 (BK)

12A522, 12A690

O5
Generator

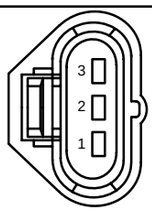

F03101

Pin	Circuit	Circuit Function
1	4-EB6 (GY)	Data link, bus positive
2	5-EB6 (BU)	Data link, bus negative
3	30-BA10 (RD)	Voltage supplied at all times (not overload protected)

C882 (BK)

14K733

N76
Dual pressure switch

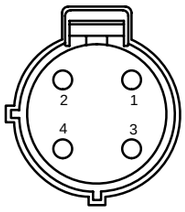

F04030

Pin	Circuit	Circuit Function
1	8-PA13 (WH/RD)	Sensor signal
2	15S-FA38 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	9-PA13 (BN/RD)	Sensor signal return (reference/ground)
4	15S-RE8 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched

C887 (BK)

14335

E87
Cargo space lamp

F01005

Pin	Circuit	Circuit Function
1	29-LB6 (OG/YE)	Voltage supplied at all times (overload protected)

C888 (BK)

14335

E87
Cargo space lamp



F02009

Pin	Circuit	Circuit Function
1	31S-LB6 (BK/YE)	Ground, switched
2	31-LB25 (BK)	Ground

C890 (BK)

14335

E18
Interior lamp, front



F02009

Pin	Circuit	Circuit Function
1	31S-LC7 (BK/BU)	Ground, switched
	31S-LC7 (BK/BU) +	Ground, switched
	31S-LC17 (BK/YE)	Ground, switched
2	31-LB13A (BK)	Ground
	31-LC7 (BK) +	Ground
	31-LC17 (BK)	Ground

C891 (BK)

14335

E19
Interior lamp, rear



F02009

Pin	Circuit	Circuit Function
1	31S-LC17 (BK/YE)	Ground, switched
2	31-LC17 (BK)	Ground