## C1076

**9D930**

R32
Fuel heater




| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 16 (RD/LG) | Voltage supplied in Start and Run (overload protected) |
| 2 | 1280 (GY/RD) | Fuel heater, to, Powertrain Control Module (PCM) (12A650) |

## C1078

**12A581**

N126
A/C high pressure switch (19D594)

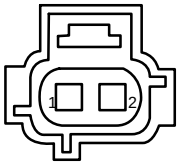


F04195

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 347 (BK/YE) | A/C clutch relay, switched output |
| 3 | – | not used |
| 4 | 441 (RD/YE) | A/C pressure switch, to A/C cycling switch |

## C1084a

**9D930**

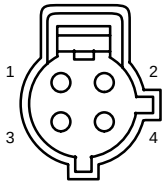K212
Glow plug relay

F01025

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 361 (RD) | Voltage supplied in Start and Run (overload protected) |

## C1084b

**9D930**

K212
Glow plug relay

F01025

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 38 (BK/OG) | Voltage supplied at all times (overload protected) |

## C1084c

**9D930**

K212
Glow plug relay

F01025

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1086 (VT/OG) | Glow plug relay, to, Powertrain Control Module (PCM) (12A650) |

## C1084d

**9D930**

K212
Glow plug relay

F01025

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 339 (DB) | Glow plug relay, output, to, Glow plugs |