4.6L

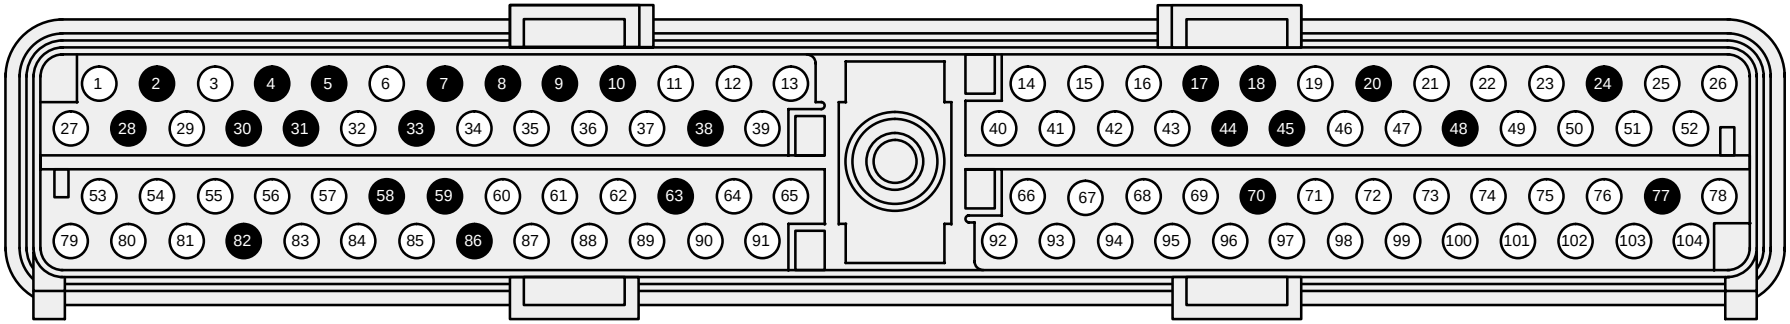

C174 (GRAY)
POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil on Plug #6	18	–	NOT USED
2	–	NOT USED	19	637 (DB/WH)	Suspension Control Module to Acceleration Signal
3	570 (BK/WH)	Power Ground			
4	–	NOT USED	20	–	NOT USED
5	–	NOT USED	21	349 (DB)	Crankshaft Position (CKP) (+) Sensor
6	237 (OG/YE)	Shift Solenoid A (SSA)	22	350 (GY)	Crankshaft Position (CKP) (–) Sensor
7	1496 (PK)	NOT USED	23	1274 (DG/WH)	Dual Knock Sensor
8	–	NOT USED	24	–	NOT USED
9	–	NOT USED	25	567 (LB/YE)	Case Ground
10	–	NOT USED	26	1024 (LG/WH)	Coil on Plug #1
11	315 (VT/OG)	Shift Solenoid B (SSB)	27	1021 (LG/YE)	Coil on Plug #5
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL) Output	28	–	NOT USED
			29	224 (TN/WH)	Transmission Control Switch (TCS)
13	107 (VT)	Flash E PROM Supply (FEPS)	30	–	NOT USED
14	784 (LB/BK)	4x4 Low Indicator Switch	31	–	NOT USED
15	915 (PK/LB)	J1850 Bus (–)	32	311 (DG/VT)	Dual Knock Sensor
16	914 (TN/OG)	J1850 Bus (+)	33	–	NOT USED
17	–	NOT USED	34	1144 (YE/BK)	Digital Transmission Range Sensor (DTR1)
			35	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #12 Input

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Signal Return	64	199 (LB/YE)	Digital Transmission Range Sensor (DTR3A)
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor	65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) Sensor
38	–	NOT USED	66	1102 (YE/LG)	Cylinder Head Temperature (CHT) Sensor
39	743 (GY)	Intake Air Temperature (IAT) Sensor	67	91 (VT/WH)	Canister Vent Solenoid
40	238 (DG/YE)	Fuel Pump Monitor	68	679 (GY/BK)	Vehicle Speed Out
41	347 (BK/YE)	A/C High Pressure Cutoff Switch Input	69	331 (PK/YE)	WOT Relay
42	1498 (PK/OG)	Throttle Position Output	70	–	NOT USED
43	71 (OG/LG)	Data Output Link	71	361 (RD)	Vehicle Power (VPWR)
44	–	NOT USED	72	561 (TN/RD)	Fuel Injector #7 Control
45	–	NOT USED	73	559 (TN/BK)	Fuel Injector #5 Control
46	367 (BN)	Intake Manifold Tuning Valve (IMTV)	74	557 (BN/YE)	Fuel Injector #3 Control
47	360 (BN/PK)	EGR Vacuum Regulator (EVR) Control	75	555 (TN)	Fuel Injector #1 Control
48	–	NOT USED	76	570 (BK/WH)	Power Ground
49	1145 (LB/BK)	Digital Transmission Range Sensor (DTR2)	77	–	NOT USED
50	1143 (WH/BK)	Digital Transmission Range Sensor (DTR4)	78	1027 (PK/LB)	Coil on Plug #7
51	570 (BK/WH)	Power Ground	79	1029 (WH/RD)	Coil on Plug #8
52	1028 (WH/PK)	Coil on Plug #3	80	926 (LB/OG)	Fuel Pump Relay Control
53	1030 (DG/VT)	Coil on Plug #4	81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid			
55	729 (RD/WH)	Keep Alive Power (KAPWR)	82	–	NOT USED
56	191 (LG/BK)	EVAP Canister Purge Valve	83	264 (WH/LB)	Idle Air Control (IAC) Valve Control
57	310 (YE/RD)	Dual Knock Sensor +	84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor
58	–	NOT USED	85	795 (DG)	Camshaft Position (CMP) Sensor
59	–	NOT USED	86	–	NOT USED
60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 Input	87	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 Input
			88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
61	393 (VT/LG)	Heated Oxygen Sensor (HO2S) #22 Input	89	355 (GY/WH)	Throttle Position (TP) Sensor
62	791 (RD/PK)	Fuel Tank Pressure (FTP) Sensor	90	351 (BN/WH)	Reference Voltage
63	–	NOT USED	91	359 (GY/RD)	Signal Return
			92	810 (RD/LG)	Brake Pedal Position (BPP) Switch

PIN	CIRCUIT	CIRCUIT FUNCTION
93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 Heater
94	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 Heater
95	389 (WH/BK)	Heated Oxygen Sensor (HO2S) #12 Heater
96	390 (TN/YE)	Heated Oxygen Sensor (HO2S) #22 Heater
97	361 (RD)	Vehicle Power (VPWR)
98	562 (LB)	Fuel Injector #8 Control
99	560 (LG/OG)	Fuel Injector #6 Control
100	558 (BN/LB)	Fuel Injector #4 Control
101	556 (WH)	Fuel Injector #2 Control
102	1274 (DG/WH)	Dual Knock Sensor
103	570 (BK/WH)	Power Ground
104	1026 (PK/WH)	Coil on Plug #2

4.6L

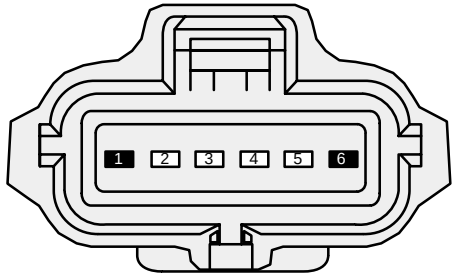

C1026

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	361 (RD)	Power (Hot in Start or Run)
3	570 (BK/WH)	Ground
4	968 (TN/LB)	MAF Sensor Signal Return
5	967 (LB/RD)	MAF Signal Out
6	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C157	31-4
C182	29-5, 30-5
C183	29-5
C193	30-5
C228	14-3
C237	62-6
C238	62-6
C242	13-29
C243	13-28
C261	130-11
C267	59-7
C295	41-5