## C3077b

### VJ9241

A267
Rear Seat Entertainment (RSE) module

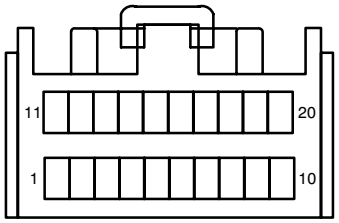


F20039

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 115 (VT) | not used |
| 2 | 125 (LG/RD) | not used |
| 3 | 135 (GY) | not used |
| 4 | 145 (OG/BK) | not used |
| 5 | – | not used |
| 6 | 205 (BK/WH) | Rear Seat Entertainment (RSE) module, to, Video cassette player |
| 7 | 225 (DB/RD) | Rear Seat Entertainment (RSE) module, to, Video cassette player |
| 8 | 245 (YE/RD) | Rear Seat Entertainment (RSE) module, to, Video cassette player |
| 9 | 95 (DG) | Ground |
| 10 | 255 (PK/DG) | Rear Seat Entertainment (RSE) module, to, Video cassette player |
| 11 | 155 (RD) | Rear Seat Entertainment (RSE) module, to, Radio (18806), Left + |
| 12 | 165 (WH) | Rear Seat Entertainment (RSE) module, to, Radio (18806), Left – |
| 13 | 175 (OG) | Rear Seat Entertainment (RSE) module, to, Radio (18806), Right – |
| 14 | 185 (YE) | Rear Seat Entertainment (RSE) module, to, Radio (18806), Right + |
| 15 | – | not used |
| 16 | 195 (OG/BK) | Rear Seat Entertainment (RSE) module, to, Video cassette player |
| 17 | – | not used |
| 18 | – | not used |
| 19 | – | not used |
| 20 | – | not used |

## C3104

### 14406

B19
Fuel sender (9H307)

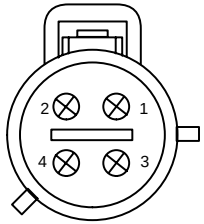


F04263

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 787 (PK/BK) | Fuel pump, Power |
| 2 | – | not used |
| 3 | 57 (BK) | Ground |
| 4 | – | not used |

## C3122

### 14A655

Y266
Extended range fuel tank valve 1

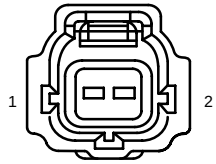


F02091

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 787 (PK/BK) | Fuel pump, Power |
| 2 | 57 (BK) | Ground |

## C3123

### 14406

B113
Fuel tank pressure transducer sensor (9C968)

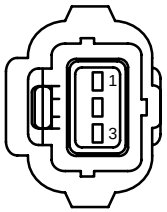


F03093

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 351 (BN/WH) | Reference, voltage |
| 2 | 359 (GY/RD) | signal, return |
| 3 | 791 (RD/PK) | Fuel tank pressure transducer sensor (9C968) |