C523

14A005

Y28
Speaker, left front
(18808)

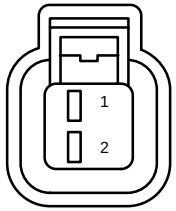

F02069

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C525

14A005

M241
Door lock actuator,
left front

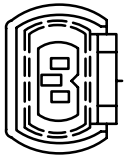

F02116

Pin	Circuit	Circuit function
1	163 (RD/OG)	Driver door unlock relay, switched power
2	117 (PK/BK)	Door lock, output

C526

14A005

N84
Door ajar switch, left
front

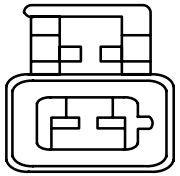

F02379

Pin	Circuit	Circuit function
1	344 (BK/Y)	Door ajar switch, left front, signal
2	57 (BK)	Ground

C527

14A005

N409
Exterior rear view
mirror switch
(17B676)

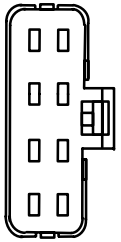

F08265

Pin	Circuit	Circuit function
1	54 (LG/YE)	Voltage supplied at all times (overload protected)
2	–	not used
3	543 (DG)	Voltage supplied at all times (overload protected)
4	540 (RD)	Right/Left mirror movement
5	27 (BK)	Ground
6	542 (YE)	Mirror motor, feed
7	541 (DB)	Up/Down mirror movement, Left
8	544 (VT)	Up/Down mirror movement, Right

C535a

14A005

N447
Master window ad-
just switch (14529)

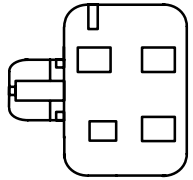

F04337

Pin	Circuit	Circuit function
1	995 (GY)	Window motor, feed, Down
2	992 (WH/BK)	Master window adjust switch (14529), feed, Up
3	991 (TN/LB)	Master window adjust switch (14529), feed, Down
4	170 (RD/LB)	Window lockout, switched power, output