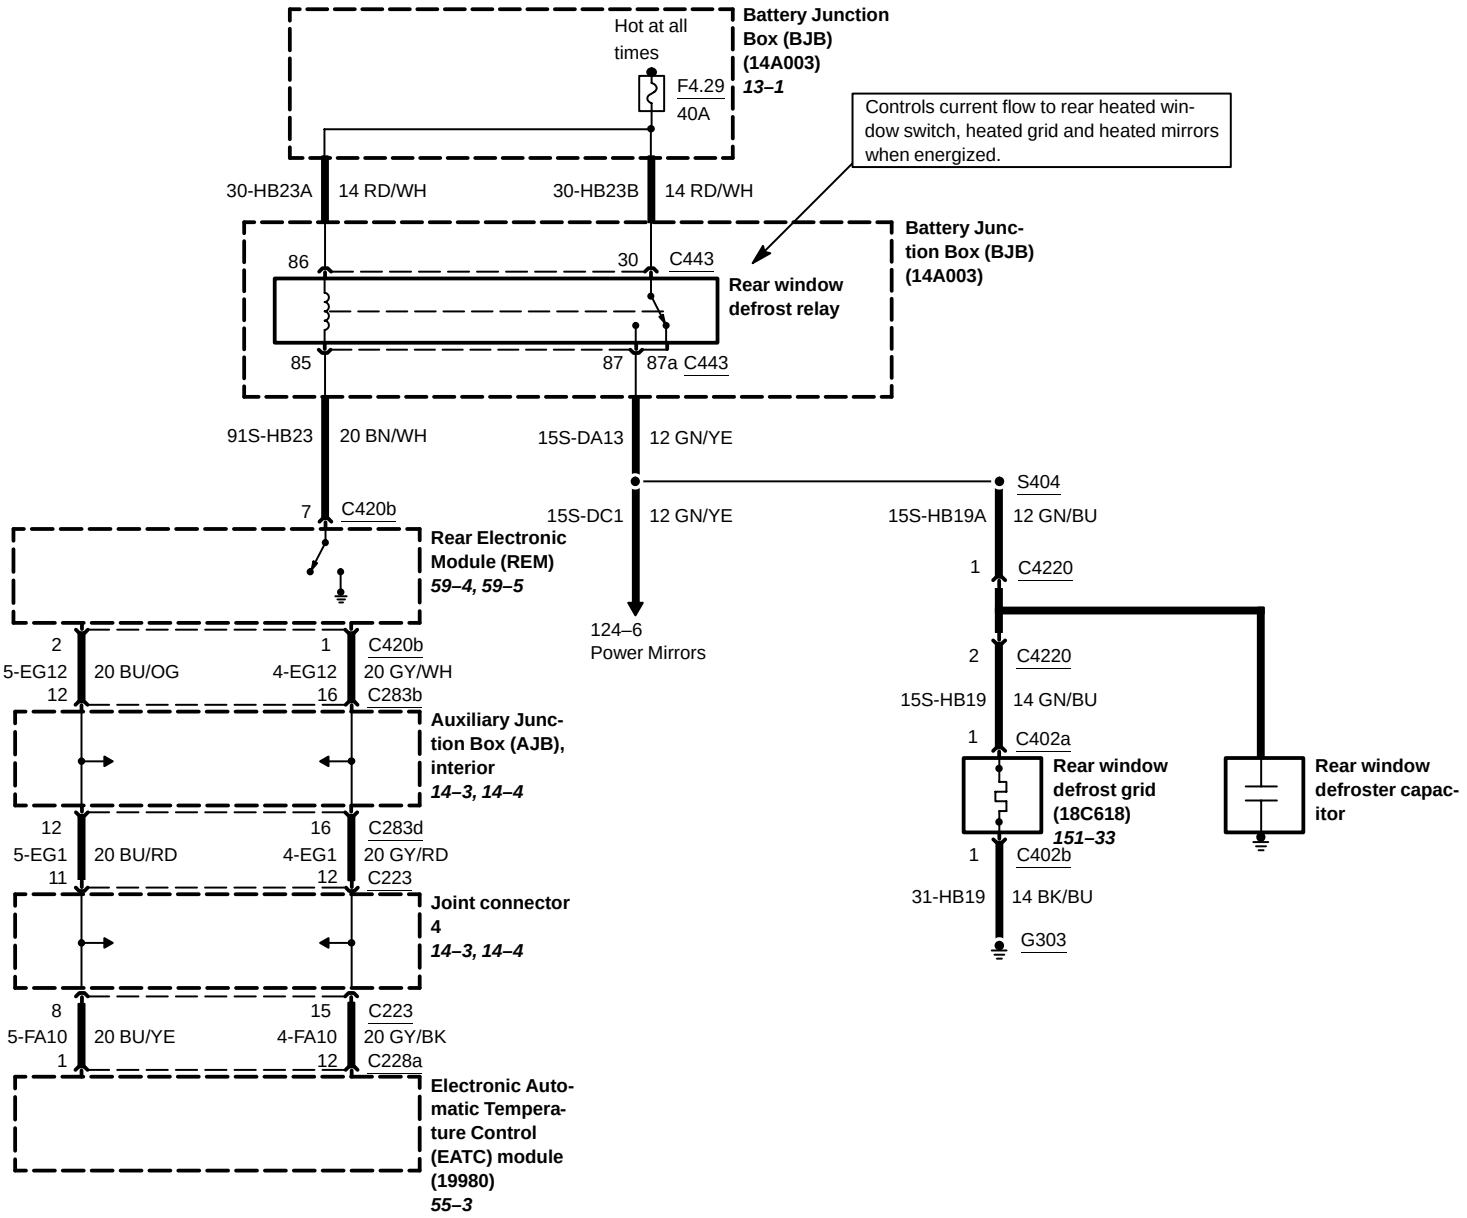
Battery Junction Box (BJB) (14A003) 13–1
Hot at all times
F4.29
40A
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
30-HB23A
14 RD/WH
30-HB23B
14 RD/WH
Battery Junction Box (BJB) (14A003)
86
30
C443
Rear window defrost relay
85
87
87a
C443
91S-HB23
20 BN/WH
15S-DA13
12 GN/YE
7
C420b
15S-DC1
12 GN/YE
S404
15S-HB19A
12 GN/BU
1
C4220
Rear Electronic Module (REM) 59–4, 59–5
124–6
Power Mirrors
2
5-EG12
12
20 BU/OG
1
4-EG12
16
C420b
20 GY/WH
C283b
2
C4220
15S-HB19
14 GN/BU
1
C402a
Auxiliary Junction Box (AJB), interior 14–3, 14–4
Rear window defrost grid (18C618) 151–33
Rear window defroster capacitor
12
5-EG1
11
20 BU/RD
16
4-EG1
12
C283d
20 GY/RD
C223
1
C402b
31-HB19
14 BK/BU
G303
Joint connector 4 14–3, 14–4
8
5-FA10
1
20 BU/YE
15
4-FA10
12
C223
20 GY/BK
C228a
Electronic Automatic Temperature Control (EATC) module (19980) 55–3