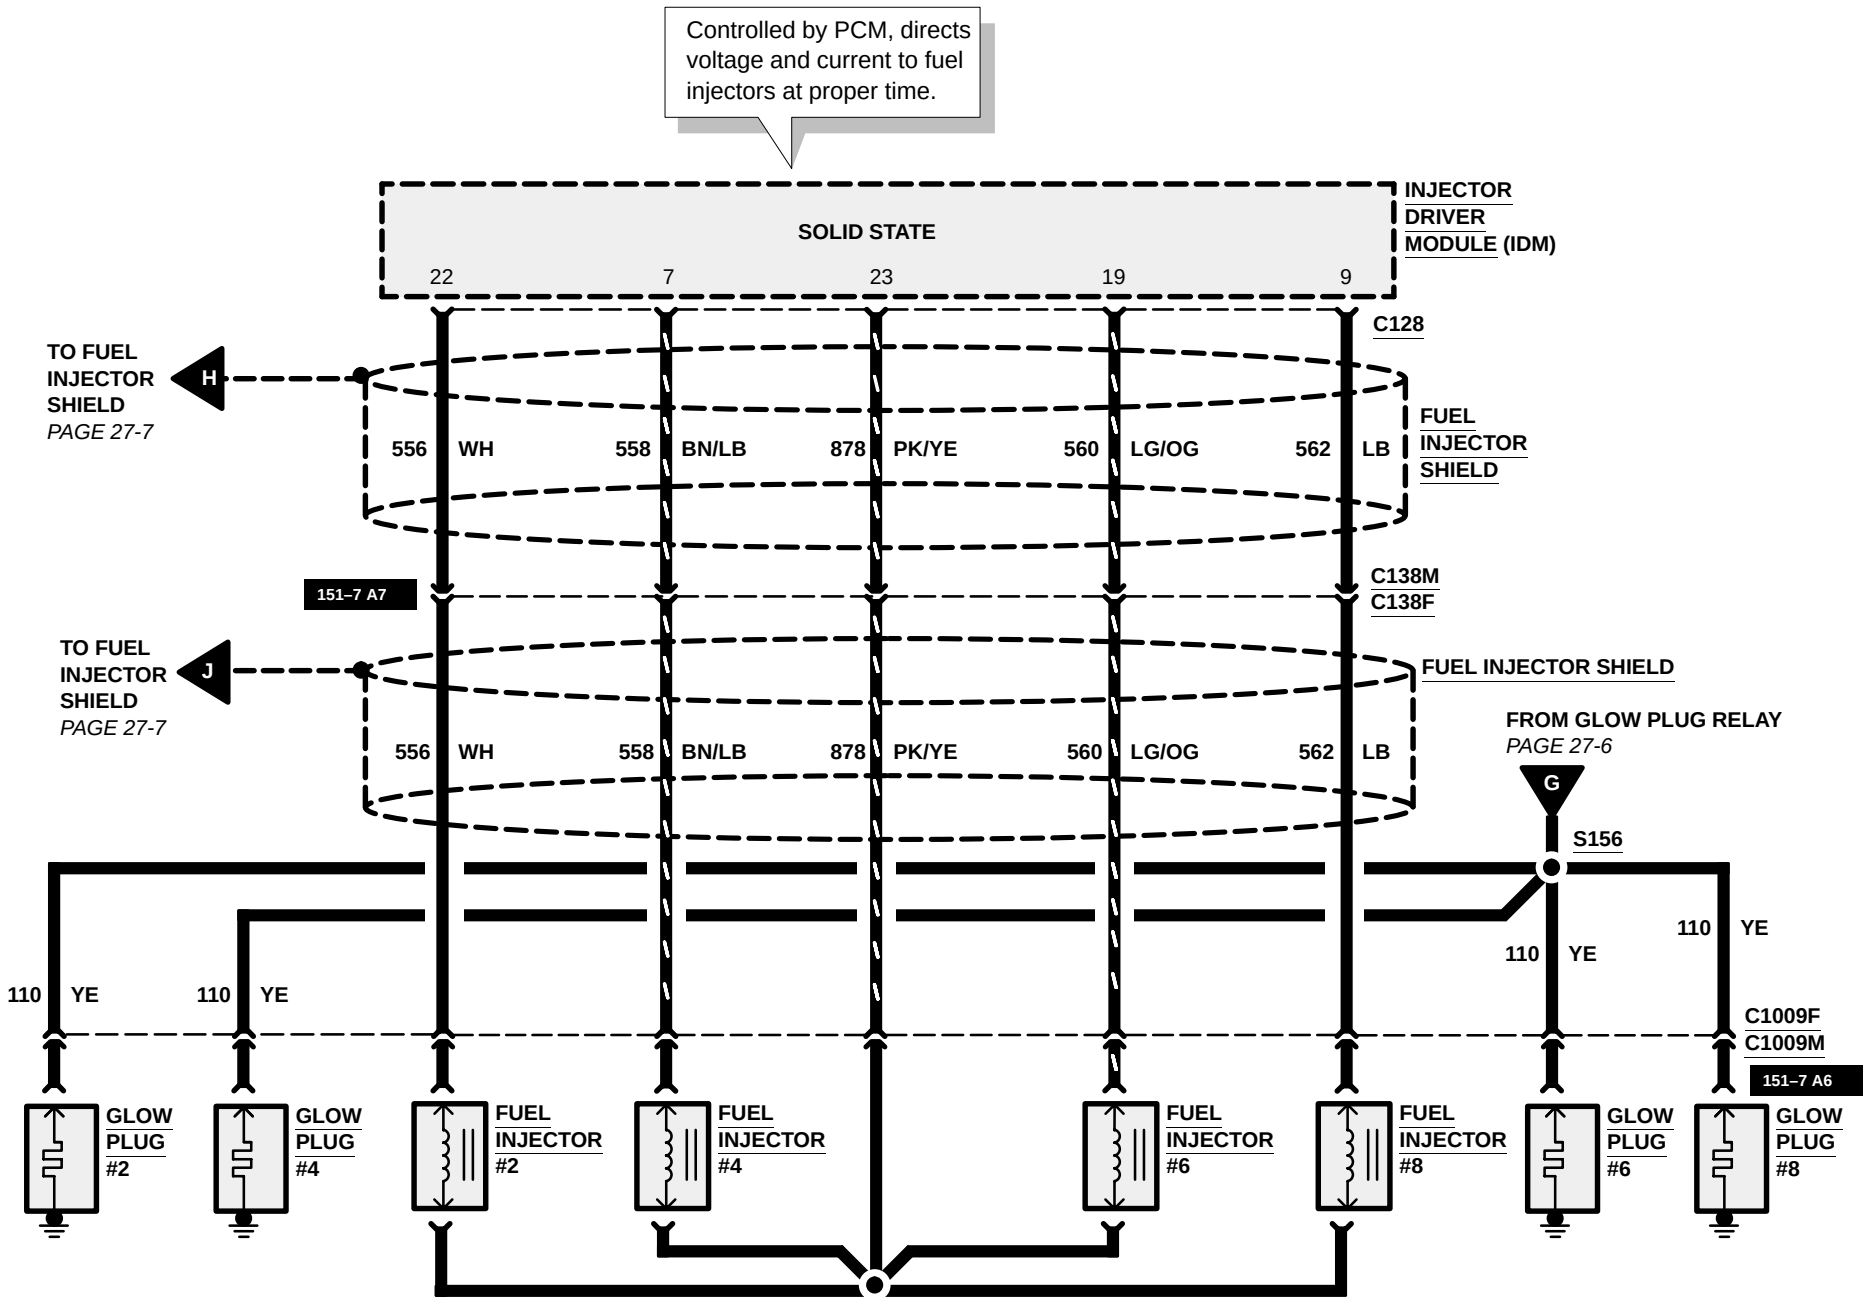
Controlled by PCM, directs voltage and current to fuel injectors at proper time.
SOLID STATE
INJECTOR DRIVER MODULE (IDM)
22
7
23
19
9
C128
TO FUEL INJECTOR SHIELD
H
PAGE 27-7
556 WH
558 BN/LB
878 PK/YE
560 LG/OG
562 LB
FUEL INJECTOR SHIELD
151–7 A7
C138M
C138F
TO FUEL INJECTOR SHIELD
J
PAGE 27-7
FUEL INJECTOR SHIELD
FROM GLOW PLUG RELAY
PAGE 27-6
G
S156
110 YE
110 YE
110 YE
110 YE
C1009F
C1009M
151–7 A6
GLOW PLUG #2
GLOW PLUG #4
FUEL INJECTOR #2
FUEL INJECTOR #4
FUEL INJECTOR #6
FUEL INJECTOR #8
GLOW PLUG #6
GLOW PLUG #8