C400

14A344

P75
Auxiliary Junction Box (AJB), trailer tow

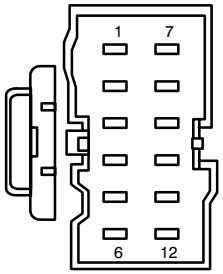

F12091

Pin	Circuit	Circuit function
1	–	not used
2	30S-DC1 (RD/YE)	Voltage supplied at all times (not overload protected), Switched
3	–	not used
4	–	not used
5	30S-DC4 (RD/GN)	Voltage supplied at all times (not overload protected), Switched
6	–	not used
7	–	not used
8	30S-ND16A (RD/BU)	Voltage supplied at all times (not overload protected), Switched
9	–	not used
10	–	not used
11	30S-ND16B (RD/BU)	Voltage supplied at all times (not overload protected), Switched
12	–	not used

C401a

14A005

A432
Vehicle Emergency Message System (VEMS) module

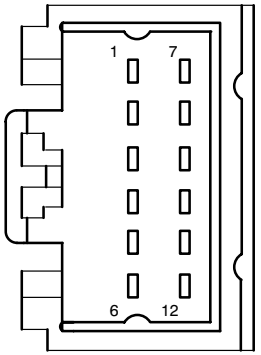

F12093

Pin	Circuit	Circuit function
1	30-GP8 (RD/BK)	Voltage supplied at all times (not overload protected)
2	4-GP14 (GY/RD)	Data link, bus positive
3	5-GP12 (BU/YE)	Data link, bus negative
4	8-GP13 (WH/VT)	Sensor signal
5	5-GP8 (BU/YE)	Data link, bus negative
6	31-GP8 (BK/RD)	Ground
7	15-GP8 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
8	–	not used
9	2-GP10 (GY/VT)	Audio signal negative
10	1-GP11 (WH/GN)	Audio signal positive
11	4-GP8 (GY/BK)	Data link, bus positive
12	31-MC10A (BK/RD)	Ground