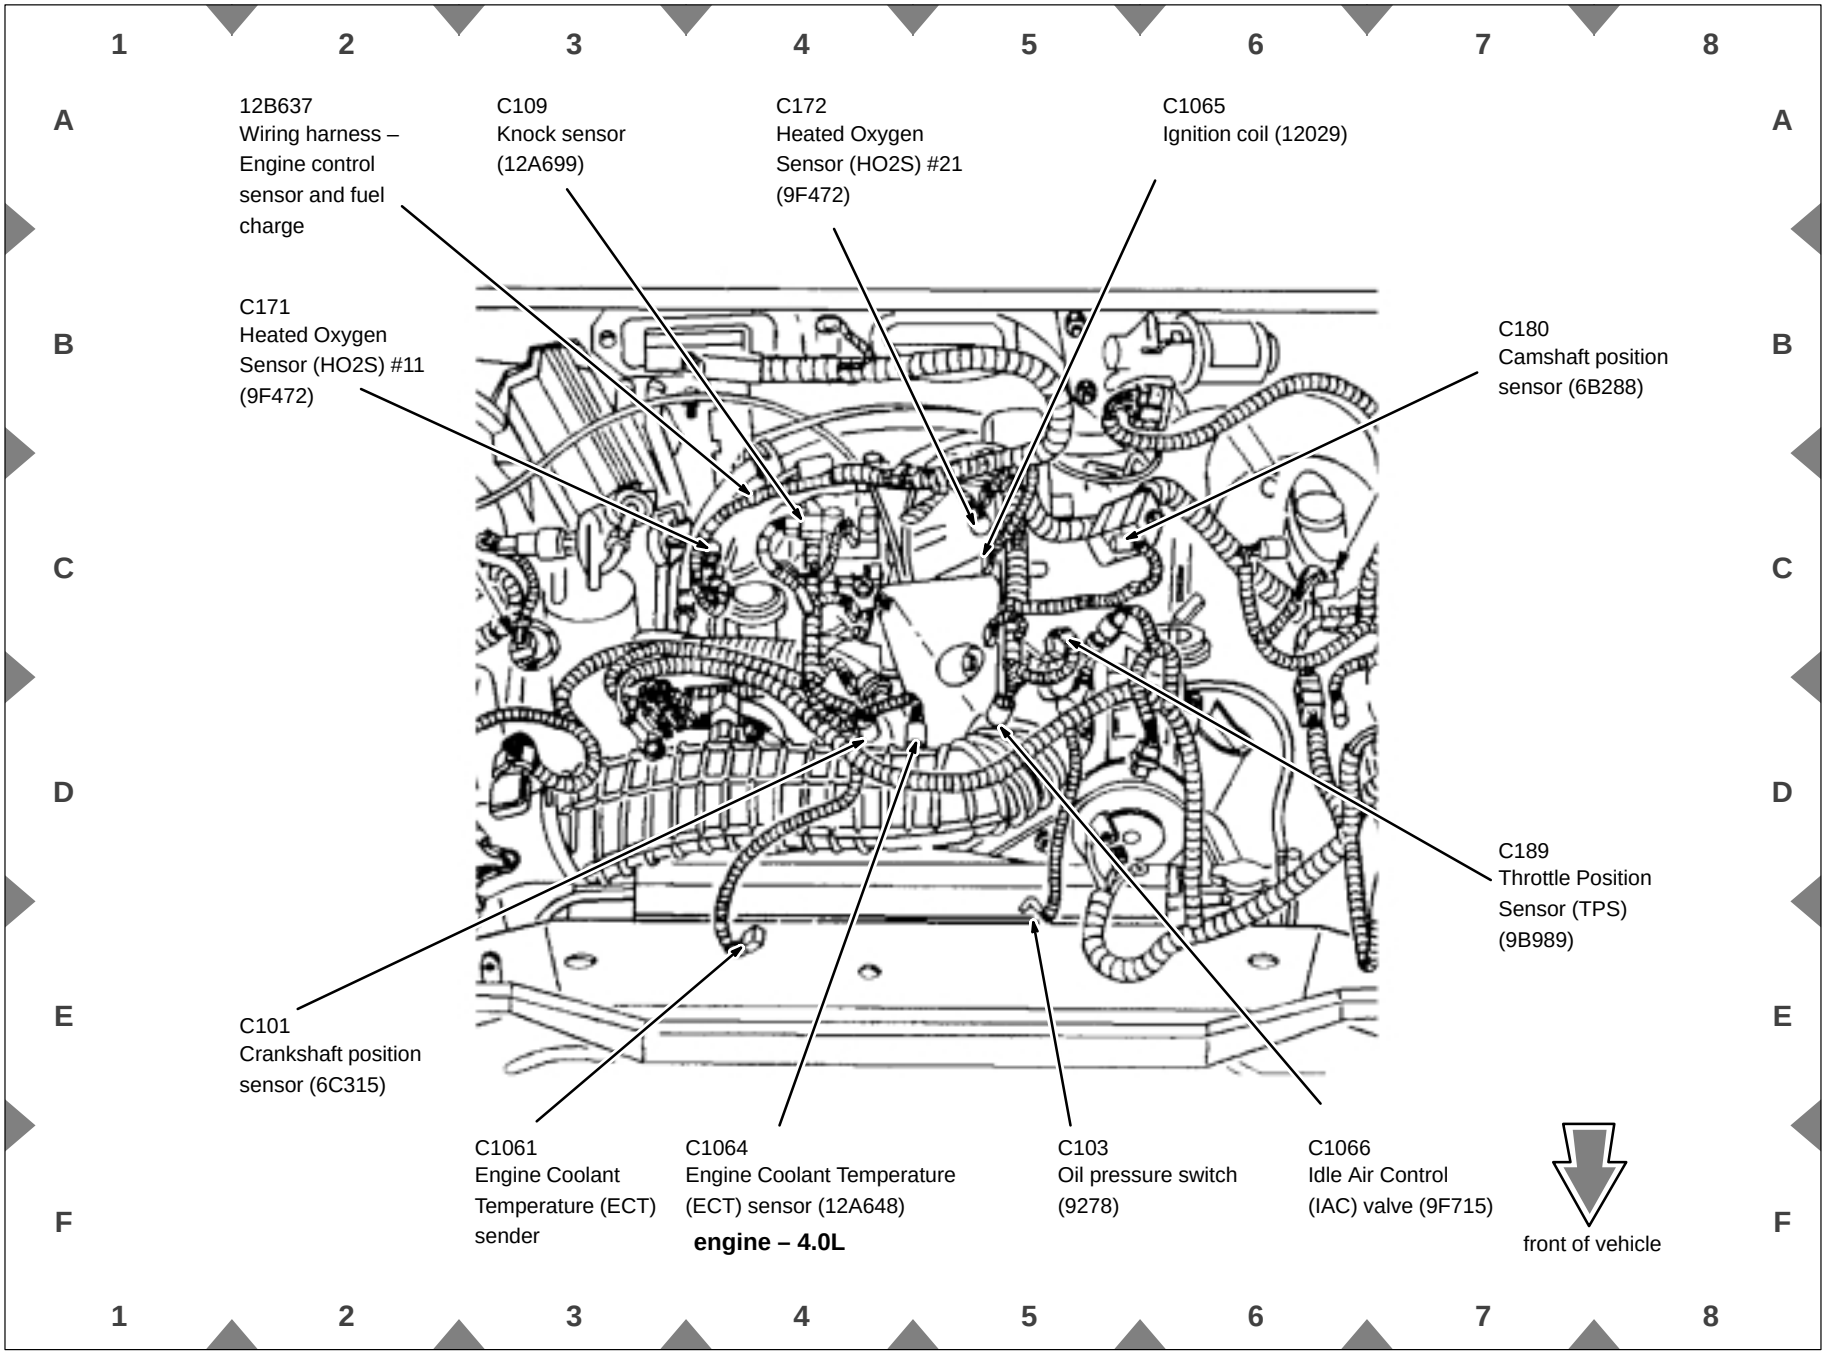

1 2 3 4 5 6 7 8
A
B
C
D
E
F
12B637
Wiring harness – Engine control sensor and fuel charge
C109
Knock sensor (12A699)
C172
Heated Oxygen Sensor (HO2S) #21 (9F472)
C1065
Ignition coil (12029)
C171
Heated Oxygen Sensor (HO2S) #11 (9F472)
C180
Camshaft position sensor (6B288)
C189
Throttle Position Sensor (TPS) (9B989)
C101
Crankshaft position sensor (6C315)
C1061
Engine Coolant Temperature (ECT) sender
C1064
Engine Coolant Temperature (ECT) sensor (12A648)
C103
Oil pressure switch (9278)
C1066
Idle Air Control (IAC) valve (9F715)
front of vehicle

**engine – 4.0L**