C459 (GY)

14401

N282
Multifunction switch

F10091

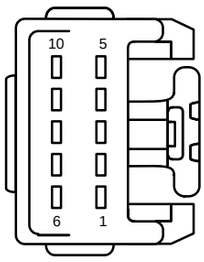

Pin	Circuit	Circuit Function
1	15S-LG1 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
	91S-LG1 (BK/YE)	Ground, switched
2	15-LG27 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
	91-LG27 (BK/GN)	Ground
3	15S-LG2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
	91S-LG2 (BK/BU)	Ground, switched
4	29-LG43 (OG/WH)	Voltage supplied at all times (overload protected), switched
5	91-LG43 (BK/WH)	Ground
6	15-LE14 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
7	15S-LE12 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
8	15S-LE14 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
	15S-LE19A (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
9	15S-LE19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	91S-GE6 (BK/YE)	Ground, switched

C469

14401

N73
Heater blower switch

F06146



Pin	Circuit	Circuit Function
1	31S-FA26 (BK/RD) +	Ground, switched
	31S-FA30 (BK/WH)	Ground, switched
2	31-FA25 (BK)	Ground
3	31S-FA31 (BK/YE)	Ground, switched
5	31S-FA32 (BK/BU)	Ground, switched
6	31S-FA33 (BK/OG)	Ground, switched

C470

18B604

R21
Heater blower series resistor



F04029

Pin	Circuit	Circuit Function
1	31S-FA33 (BK/OG)	Ground, switched
2	31S-FA31 (BK/YE)	Ground, switched
3	31S-FA30 (BK/WH)	Ground, switched
4	31S-FA32 (BK/BU)	Ground, switched