C423 (YE)

14014

A29
Air bag diagnostic monitor

F26020

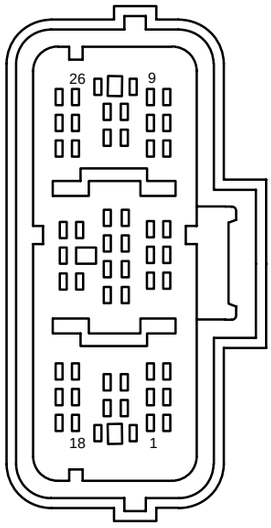

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	–	not used
10	–	not used
11	15S-JA33 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
12	91S-JA33 (BK/BU)	Ground, switched
13	–	not used
14	–	not used
15	15S-JA37 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
16	91S-JA37 (BK/GN)	Ground, switched
17	–	not used
18	15S-JA39 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
19	91-JA39 (BK/YE)	Ground
20	15S-JA34 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected), switched

C424 (YE)

14401

A29
Air bag diagnostic monitor

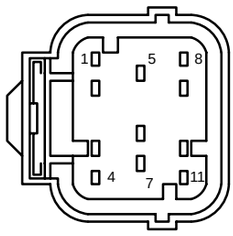

F11018

Pin	Circuit	Circuit Function
1	–	not used
2	15S-JA8 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
3	91S-JA8 (BK/OG)	Ground, switched
4	91S-JA14 (BK/GN)	Ground, switched
5	15S-JA11 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
6	91S-JA11 (BK/WH)	Ground, switched
7	8-EE7 (WH/RD)	Sensor signal
8	15-JA10 (GN/OG)	Voltage, ignition switch in Start or Run (not overload protected)
9	91-JA10 (BK/RD)	Ground
10	–	not used
11	91S-JA14A (BK/GN)	Ground, switched

C425 (GN)

14401

A43
Passenger air bag module

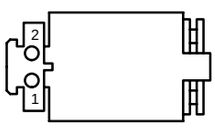

F02068

Pin	Circuit	Circuit Function
1	15S-JA11 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	91S-JA11 (BK/WH)	Ground, switched