4.0L SOHC

REVISED

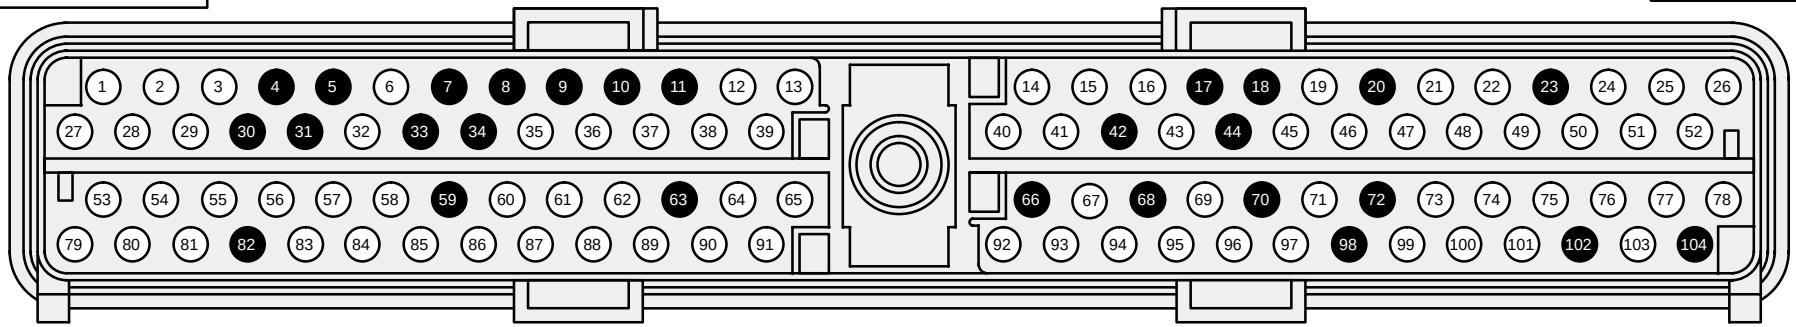

C202

POWERTRAIN CONTROL MODULE (PCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	315 (VT/OG)	Shift Solenoid B	18	–	NOT USED
2	658 (PK/LG)	Malfunction Indicator Lamp (MIL) Control	19	394 (OG/BK)	Load Leveling Acceleration Signal
3	1144 (YE/BK)	Digital Transmission Range (DTR) Sensor (TR1)	20	–	NOT USED
			21	349 (DB)	Crankshaft Position (CKP) Sensor
4	–	NOT USED	22	350 (GY)	Crankshaft Position (CKP) Sensor
5	–	NOT USED	23	–	NOT USED
6	136 (DB/YE)	Output Shaft Speed (OSS) Sensor	24	570 (BK/WH)	Power Ground
7	–	NOT USED	25	57 (BK)	Chassis Ground
8	–	NOT USED	26	95 (TN/WH)	Ignition Coil
9	–	NOT USED	27	237 (OG/YE)	Shift Solenoid A
10	–	NOT USED	28	924 (BN/OG)	Shift Solenoid D
11	–	NOT USED	29	224 (TN/WH)	Transmission Control Switch (TCS) Input
12	29 (YE/WH)	Fuel Gauge Sender	30	–	NOT USED
13	107 (VT)	Data Link Connector (DLC)	31	–	NOT USED
14	784 (LB/BK)	4WD Low Indicator Switch	32	311 (DG/VT)	Knock Sensor Return
15	915 (PK/LB)	SCP Data Bus (–)	33	–	NOT USED
16	914 (TN/OG)	SCP Data Bus (+)	34	–	NOT USED
17	–	NOT USED			

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
35	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #12 Input (Catalyst Monitor)	65	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) Sensor Input
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return	66	–	NOT USED
37	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor	67	91 (VT/WH)	Canister Vent Solenoid
			68	–	NOT USED
38	354 (LG/RD)	Engine Coolant Temperature (ECT) Sensor Input	69	331 (PK/YE)	Wide Open Throttle A/C Cutoff (WAC) Relay Output
39	743 (GY)	Intake Air Temperature (IAT) Sensor Input	70	–	NOT USED
40	238 (DG/YE)	Fuel Pump Relay Input	71	361 (RD)	Power (PWR)
41	348 (VT)	A/C High Pressure Cutoff Switch Input	72	–	NOT USED
42	–	NOT USED	73	559 (TN/BK)	Fuel Injector #5 Control
43	305 (LB/PK)	Message Center (Fuel Flow)	74	557 (BN/YE)	Fuel Injector #3 Control
44	–	NOT USED	75	555 (TN)	Fuel Injector #1 Control
45	357 (YE/WH)	PCM to Generic Electronic Module (GEM)	76	570 (BK/WH)	Power Ground
46	1017 (BK/WH)	Fuel Cap Indicator	77	570 (BK/WH)	Power Ground
47	360 (BN/PK)	EGR Vacuum Regulator (EVR) Control	78	97 (TN/LG)	Ignition Coil
48	11 (TN/YE)	Tachometer	79	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)
49	1145 (LB/BK)	Digital Transmission Range (DTR) Sensor (TR2)	80	926 (LB/OG)	Fuel Pump Relay Control
			81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
50	1143 (WH/BK)	Digital Transmission Range (DTR) Sensor (TR4)	82	–	NOT USED
			83	264 (WH/LB)	Idle Air Control (IAC) Valve Control
51	570 (BK/WH)	Power Ground	84	970 (DG/WH)	Turbine Shaft Speed (TSS) Sensor
52	96 (TN/OG)	Ignition Coil	85	282 (DB/OG)	Camshaft Position (CMP) Sensor Input
53	971 (PK/BK)	Shift Solenoid C	86	347 (BK/YE)	PCM to A/C Cycling Pressure Switch
54	480 (VT/YE)	Torque Converter Clutch Solenoid	87	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 Input
55	37 (YE)	Keep Alive Power (B+)	88	967 (LB/RD)	Mass Air Flow (MAF) Sensor Input
56	191 (LG/BK)	EVAP Canister Purge Valve	89	355 (GY/WH)	Throttle Position (TP) Sensor Input
57	310 (YE/RD)	Knock Sensor Input	90	351 (BN/WH)	Reference Voltage
58	679 (GY/BK)	Vehicle Speed Sensor (VSS) Input	91	359 (GY/RD)	Signal Return
59	–	NOT USED	92	810 (RD/LG)	Brake Paedal Position (BPP) Switch Input
60	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 Input	93	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 Heater
61	393 (VT/LG)	Heated Oxygen Sensor (HO2S) #22	94	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 Heater
62	791 (RD/PK)	Fuel Tank Pressure Sensor	95	389 (WH/BK	Heated Oxygen Sensor (HO2S) #12 Heater (Catalyst Monitor)
63	–	NOT USED			
64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor Input (TR3A)	96	390 (TN/YE)	Heated Oxygen Sensor (HO2S) #22
			97	361 (RD)	Power (PWR)

PIN	CIRCUIT	CIRCUIT FUNCTION
98	–	NOT USED
99	560 (LG/OG)	Fuel Injector #6 Control
100	558 (BN/LB)	Fuel Injector #4 Control
101	556 (WH)	Fuel Injector #2 Control
102	–	NOT USED
103	570 (BK/WH)	Power Ground
104	–	NOT USED

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C109	29-6
C112	29-5
C177	29-5
C286	62-7
C287	62-7
C2001	41-4
C2008	69-3

4.0L SOHC

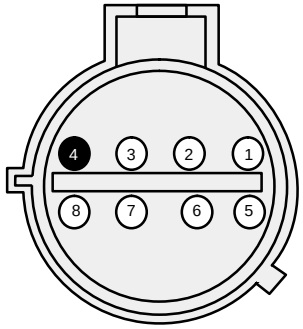

C311

FUEL TANK ASSEMBLY (HARNESS SIDE)

PIN	CIRCUIT	CIRCUIT FUNCTION
1	351 (BN/WH)	Power to Engine Sensors
2	791 (RD/BK)	Fuel Tank Pressure Sensor to PCM
3	359 (GY/RD)	Sensor Signal Return
4	–	NOT USED
5	651 (BK/YE)	Dedicated Ground
6	787 (PK/BK)	Fuel Pump Power
7	57 (BK)	Ground
8	29 (YE/WH)	Fuel Gauge to Fuel Gauge Sender

REVISED