SEDAN

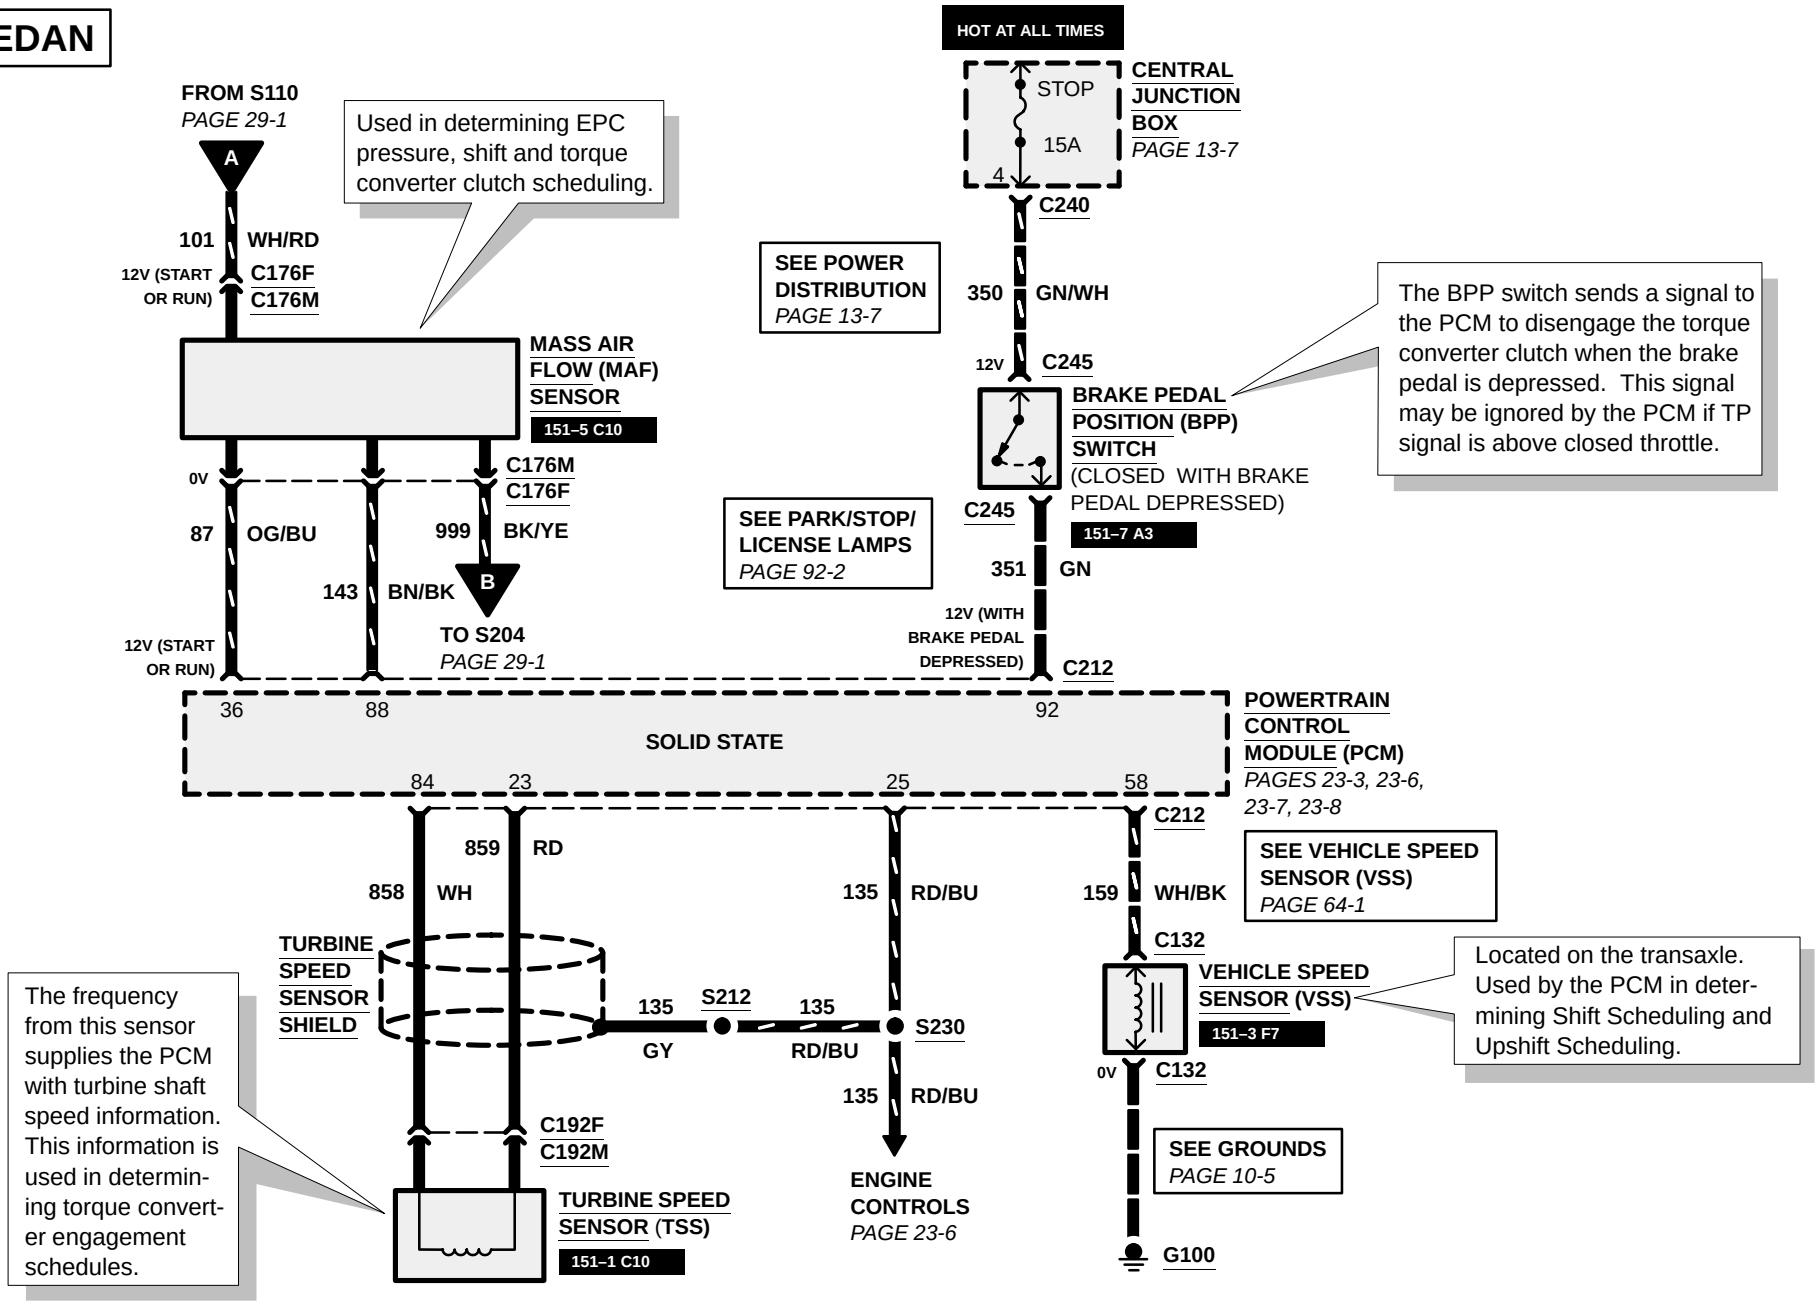
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-7
STOP
15A
4
C240
350 GN/WH
12V
C245
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
151–7 A3
C245
351 GN
12V (WITH BRAKE PEDAL DEPRESSED)
C212
92
SEE POWER DISTRIBUTION
PAGE 13-7
The BPP switch sends a signal to the PCM to disengage the torque converter clutch when the brake pedal is depressed. This signal may be ignored by the PCM if TP signal is above closed throttle.
SEE PARK/STOP/ LICENSE LAMPS
PAGE 92-2
FROM S110
PAGE 29-1
A
101 WH/RD
12V (START OR RUN)
C176F
C176M
Used in determining EPC pressure, shift and torque converter clutch scheduling.
MASS AIR FLOW (MAF) SENSOR
151–5 C10
0V
87 OG/BU
C176M
C176F
999 BK/YE
143 BN/BK
B
TO S204
PAGE 29-1
12V (START OR RUN)
36
88
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-3, 23-6, 23-7, 23-8
84
23
25
58
C212
859 RD
858 WH
135 RD/BU
159 WH/BK
SEE VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
C132
TURBINE SPEED SENSOR SHIELD
135 GY
S212
135 RD/BU
S230
VEHICLE SPEED SENSOR (VSS)
151–3 F7
Located on the transaxle. Used by the PCM in determining Shift Scheduling and Upshift Scheduling.
0V
C132
135 RD/BU
C192F
C192M
The frequency from this sensor supplies the PCM with turbine shaft speed information. This information is used in determining torque converter engagement schedules.
TURBINE SPEED SENSOR (TSS)
151–1 C10
ENGINE CONTROLS
PAGE 23-6
SEE GROUNDS
PAGE 10-5
G100