30-1 TRANSMISSION CONTROLS (NON-ELECTRONIC)
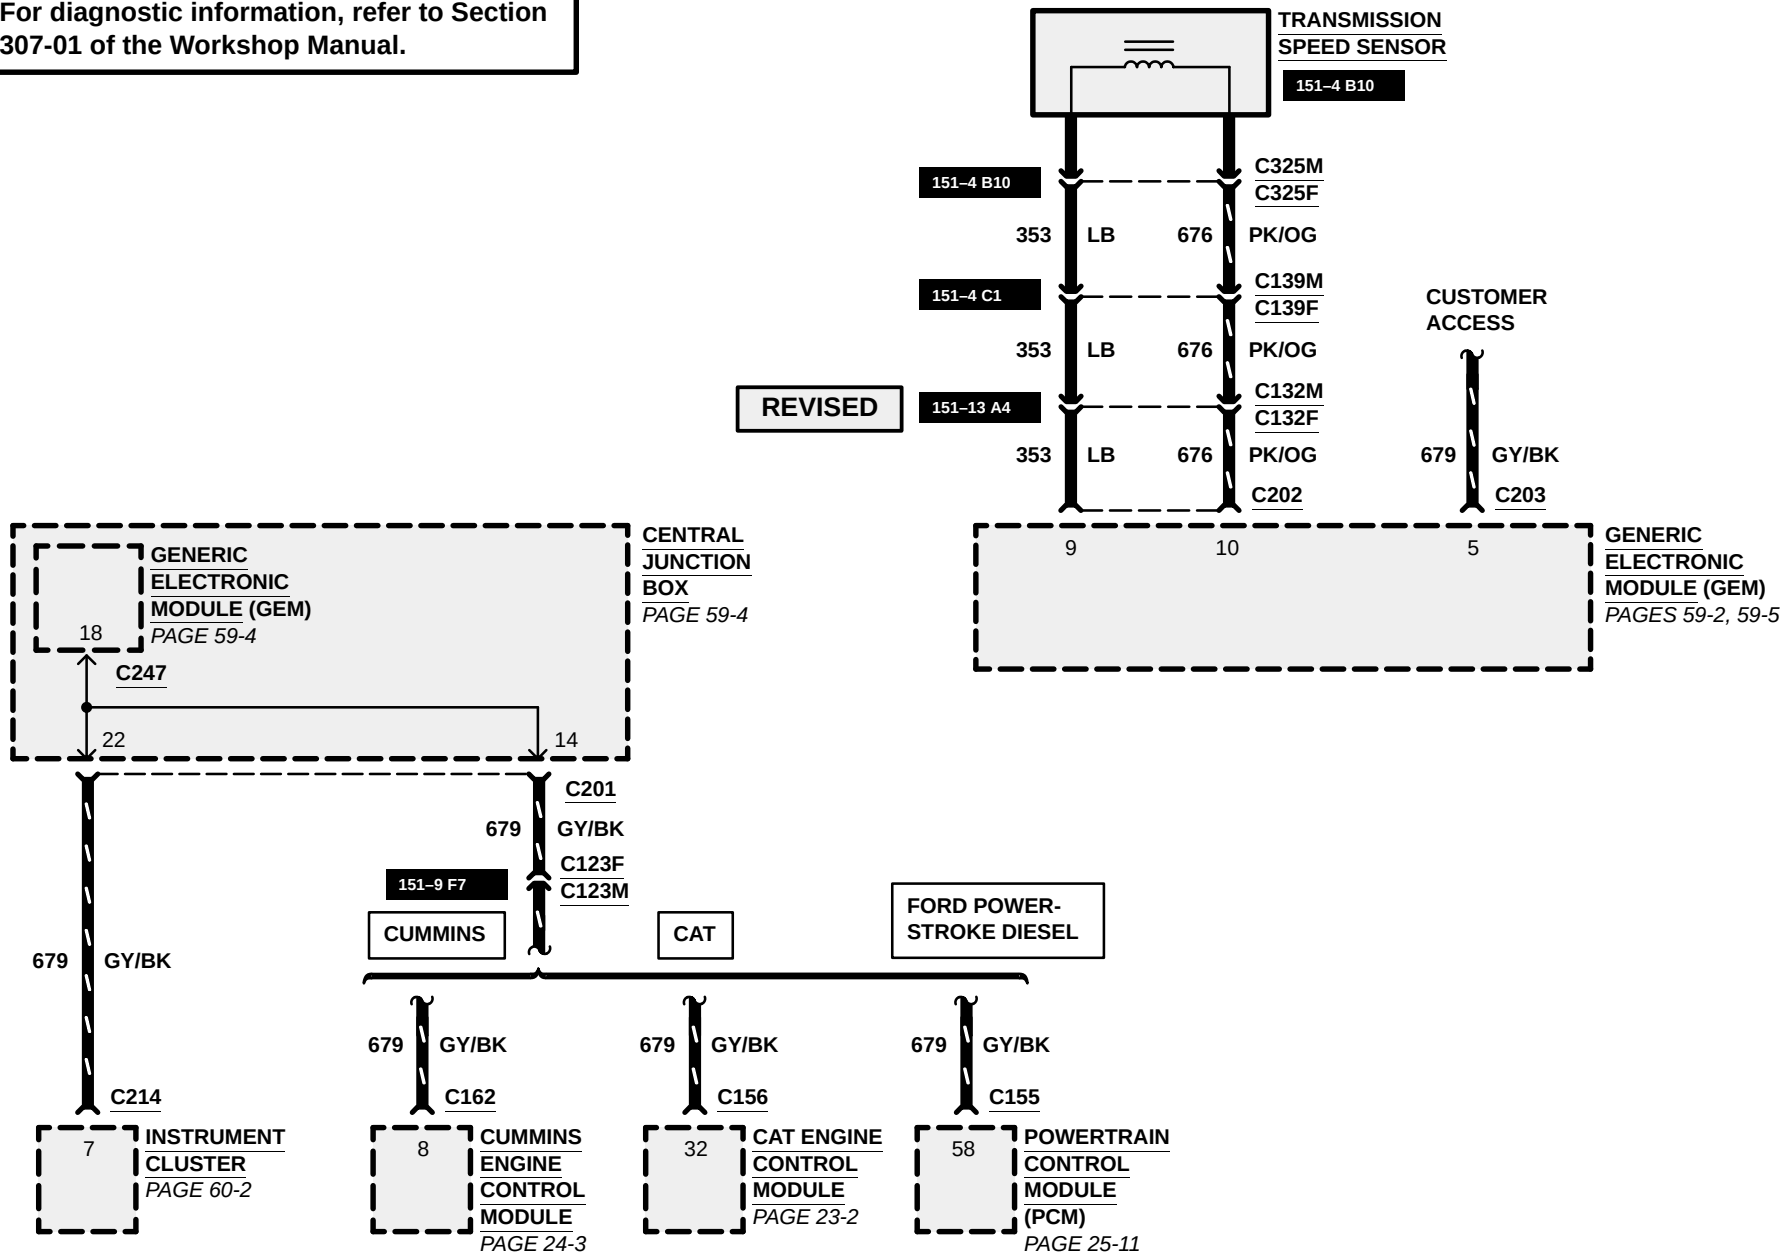
For diagnostic information, refer to Section 307-01 of the Workshop Manual.