C128

14290

B22
Mass Air Flow
(MAF) sensor
(12B579)

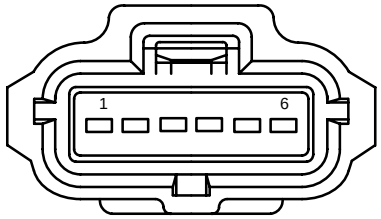

F06077

Pin	Circuit	Circuit Function
1	–	not used
2	15S-RJ22 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), Switched
3	31-RJ22 (BK/OG)	Ground
4	9-RJ22 (BN/BU)	Sensor signal return (reference/ground)
5	8-RJ22 (WH/BU)	Sensor signal
6	–	not used

C129

14290

B213
Intake Air Temperature (IAT) sensor
(12A697)

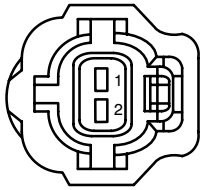

F02027

Pin	Circuit	Circuit Function
1	8-RJ40 (WH/GN)	Sensor signal
2	9-RJ17 (BN/WH)	Sensor signal return (reference/ground)

C130

14290

N412
A/C clutch cycling
pressure switch
(19D594)

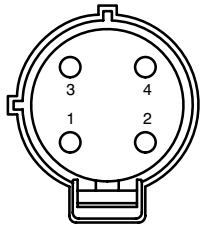

F04030

Pin	Circuit	Circuit Function
1	9-FA88 (BN/WH)	Sensor signal return (reference/ground)
2	7-FA88 (YE/VT)	Voltage D.C. supplied at all times (sensor)
3	8-FA88 (WH/VT)	Sensor signal
4	–	not used

C131

14290

H1
Horn (13832)

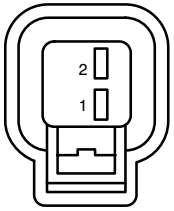

F02069

Pin	Circuit	Circuit Function
1	30S-GJ6 (RD/YE)	Voltage supplied at all times (not overload protected), Switched
2	31-GJ6 (BK)	Ground