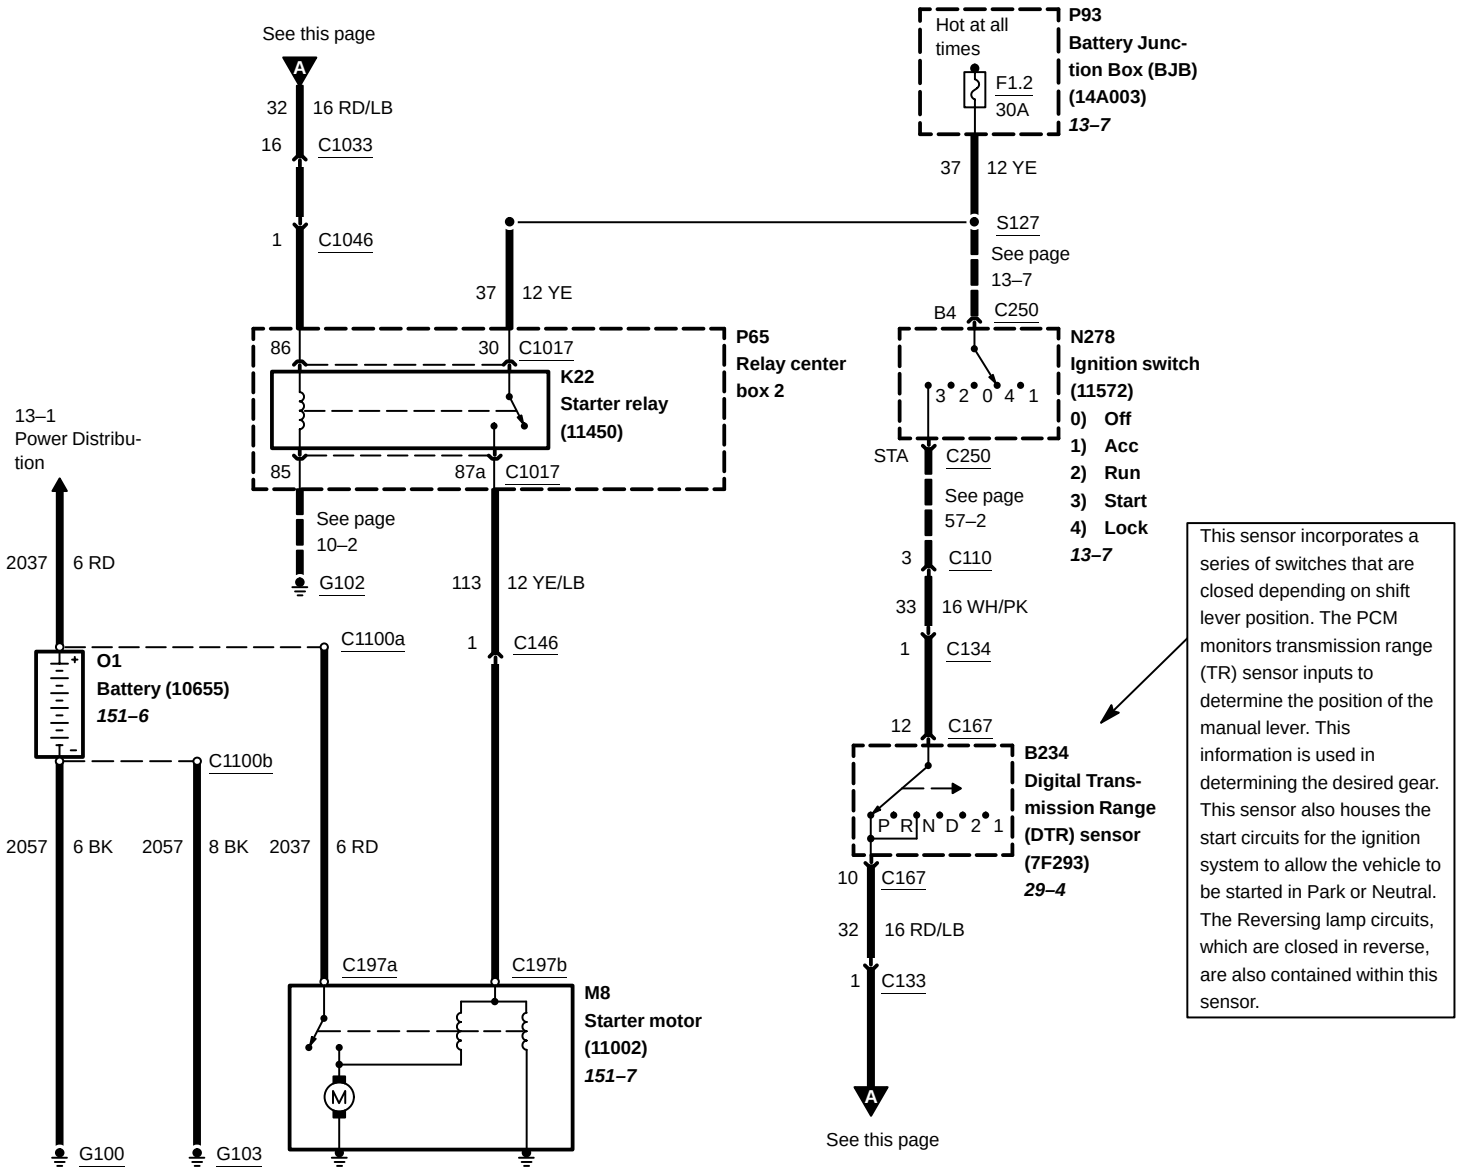
See this page
A
32 16 RD/LB
16 C1033
1 C1046
37 12 YE
86 30 C1017
K22
Starter relay
(11450)
85 87a C1017
P65
Relay center
box 2
See page
10–2
G102
113 12 YE/LB
1 C146
C1100a
O1
Battery (10655)
151–6
C1100b
2037 6 RD
2057 6 BK
2057 8 BK
2037 6 RD
C197a
C197b
M8
Starter motor
(11002)
151–7
M
G100
G103
13–1
Power Distribu-
tion
2037 6 RD
Hot at all
times
F1.2
30A
P93
Battery Junc-
tion Box (BJB)
(14A003)
13–7
37 12 YE
S127
See page
13–7
B4 C250
N278
Ignition switch
(11572)
0) Off
1) Acc
2) Run
3) Start
4) Lock
13–7
3 2 0 4 1
STA C250
See page
57–2
3 C110
33 16 WH/PK
1 C134
12 C167
B234
Digital Trans-
mission Range
(DTR) sensor
(7F293)
29–4
P R N D 2 1
10 C167
32 16 RD/LB
1 C133
A
See this page
This sensor incorporates a series of switches that are closed depending on shift lever position. The PCM monitors transmission range (TR) sensor inputs to determine the position of the manual lever. This information is used in determining the desired gear. This sensor also houses the start circuits for the ignition system to allow the vehicle to be started in Park or Neutral. The Reversing lamp circuits, which are closed in reverse, are also contained within this sensor.