VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR, THE VEHICLE REPAIR LOCATION CODE IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE: A5/FU – (UNDER THE FLOOR OF DRIVER'S LEFT FOOT.)

FRONT/REAR DIRECTION

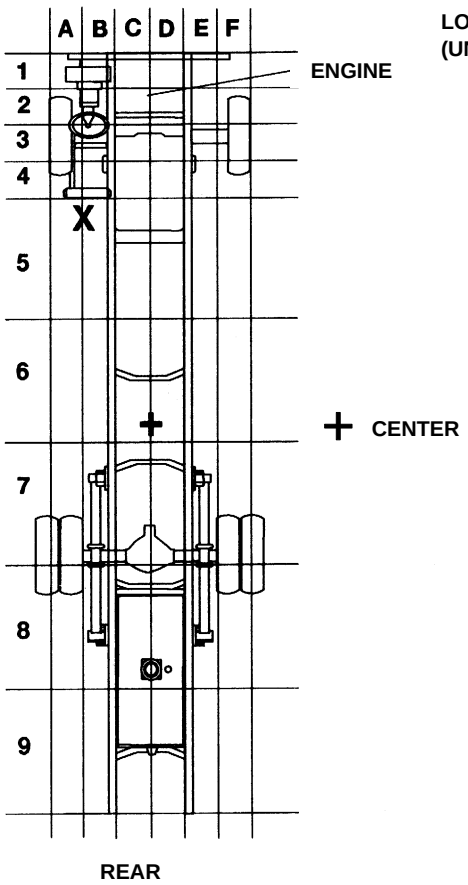

OVER/UNDER DIRECTION

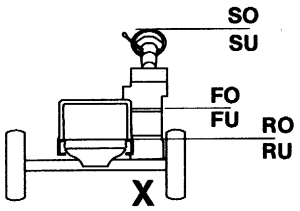

S = STEERING WHEEL
- **SO = STEERING OVER**
- **SU = STEERING UNDER**

F = FLOOR
- **FO = FLOOR OVER**
- **FU = FLOOR UNDER**

R = RAIL
- **RO = RAIL OVER**
- **RU = RAIL UNDER**

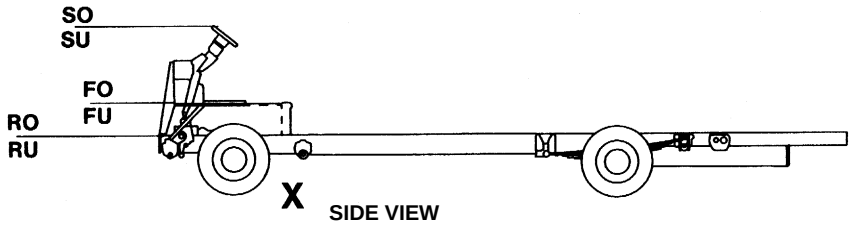

SIDE VIEW

F53 MOTORHOME
STRIPPED CHASSIS
FCS - 12258 - 02