C220a (BK)

* with flex fuel

14401

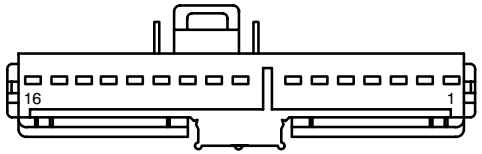

F16057

Instrument cluster

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	3 (LG/WH)	Turn lamps, feed, left front
4	12 (LG/BK)	High beam lamp, indicator, control
5	385 (WH/RD)	Voltage supplied at all times (overload protected)
6	343 (DB/LG)	Anti–theft, indicator, input
7	29 (YE/WH)	Fuel pump/fuel gauge sender
	*27 (OG/LG)	Flexible fuel sensor module
8	398 (BK/YE)	Ground
9	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
10	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
11	1412 (WH/PK)	Traction control override, input
12	464 (BK/PK)	Low coolant indicator, control
13	871 (YE)	Safety belt indicator, control
14	627 (BK/OG)	Door ajar indicator, control
15	658 (PK/LG)	Malfunction Indicator Lamp (MIL), control
16	1045 (DB/WH)	Illumination dimmer, output

C220b (WH)

14401

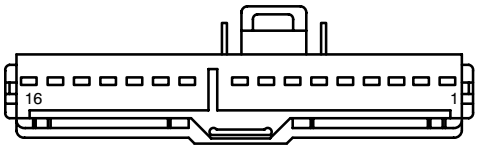

F16022

Instrument cluster

Pin	Circuit	Circuit function
1	603 (DG)	Ground
2	1017 (BK/WH)	Check cap indicator lamp
3	31 (WH/RD)	Engine oil pressure indicator, control
4	547 (LG/YE)	Brake indicator, control
5	203 (OG/LB)	Cruise set, indicator, control
6	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
7	–	not used
8	11 (TN/YE)	Tachometer
9	904 (LG/RD)	Generator/Battery indicator, control
10	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
11	608 (BK/YE)	Air bag indicator, control
12	2 (WH/LB)	Turn lamps, feed, right front
13	398 (BK/YE)	Ground
14	911 (WH/LG)	Check Transaxle lamp
15	–	Illumination dimmer, output
16	679 (GY/BK)	Vehicle Speed Sensor (VSS) +