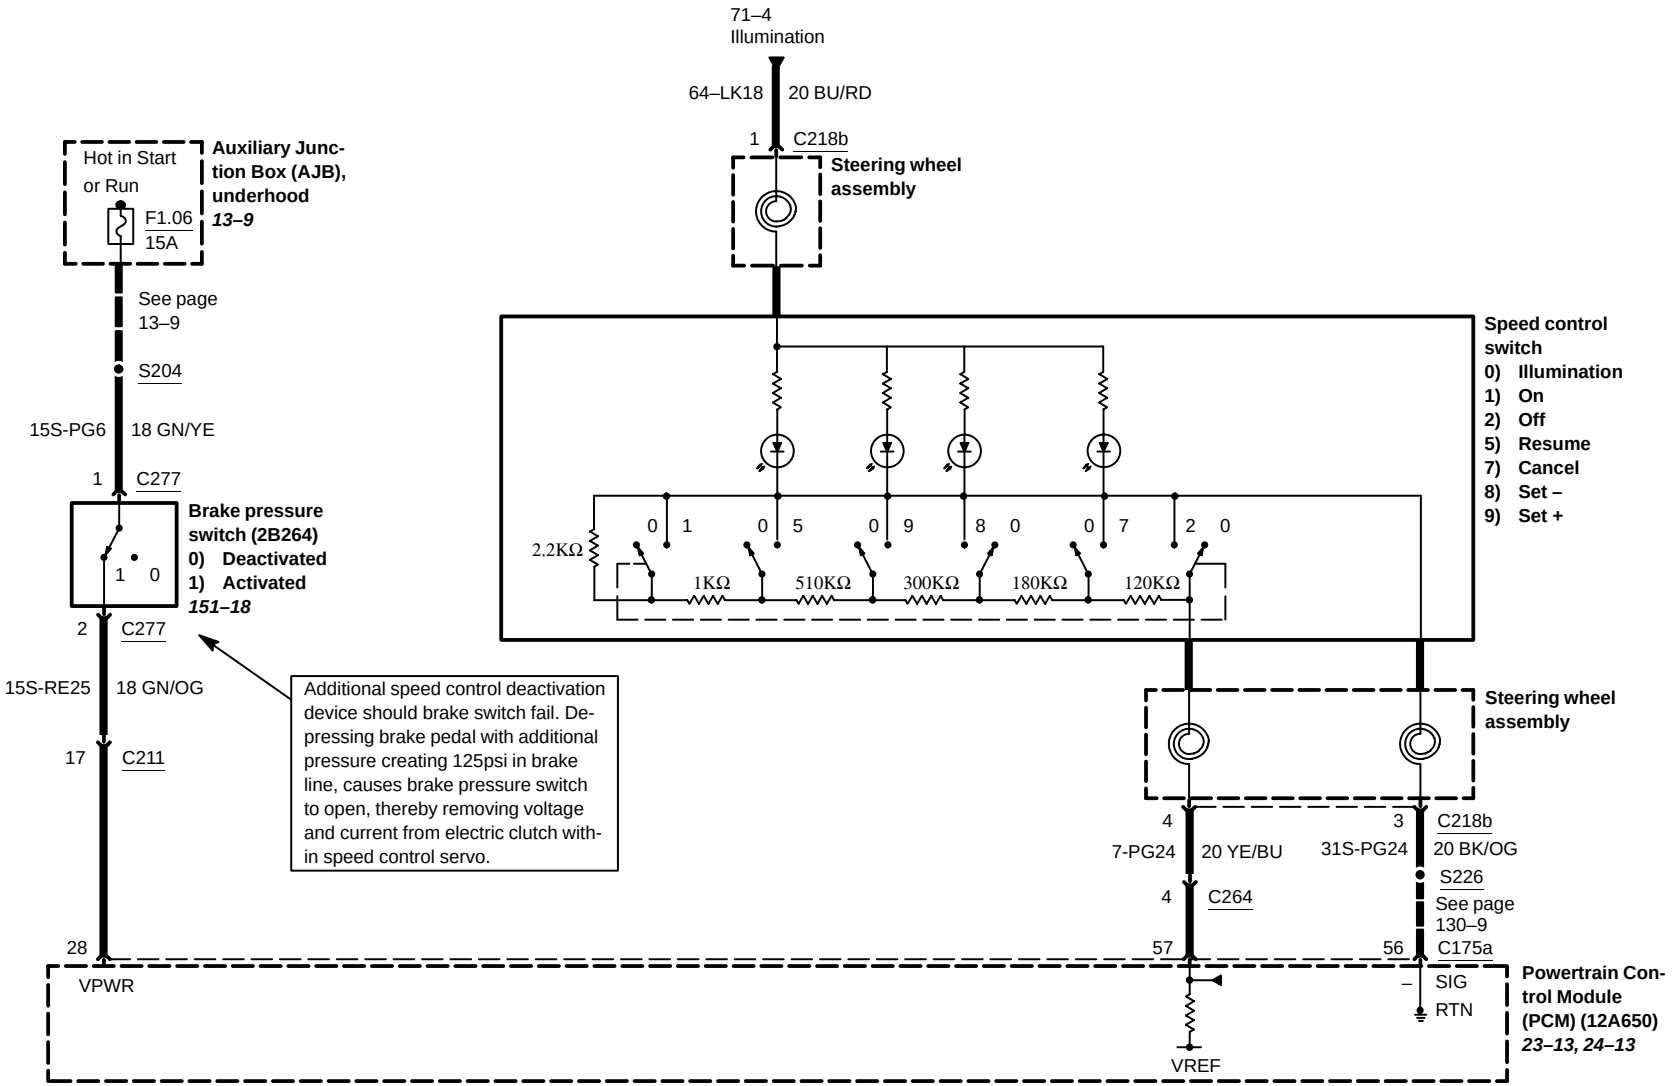
71–4
Illumination
64–LK18 20 BU/RD
1 C218b
Steering wheel assembly
Hot in Start or Run
F1.06
15A
Auxiliary Junction Box (AJB), underhood
13–9
See page 13–9
S204
15S-PG6 18 GN/YE
1 C277
Brake pressure switch (2B264)
0) Deactivated
1) Activated
151–18
2 C277
15S-RE25 18 GN/OG
17 C211
Additional speed control deactivation device should brake switch fail. Depressing brake pedal with additional pressure creating 125psi in brake line, causes brake pressure switch to open, thereby removing voltage and current from electric clutch within speed control servo.
2.2KΩ
0 1 0 5 0 9 8 0 0 7 2 0
1KΩ 510KΩ 300KΩ 180KΩ 120KΩ
Speed control switch
0) Illumination
1) On
2) Off
5) Resume
7) Cancel
8) Set –
9) Set +
Steering wheel assembly
4 7-PG24 20 YE/BU
3 31S-PG24 20 BK/OG
C218b
S226
See page 130–9
4 C264
28 VPWR
57 VREF
56 C175a
– SIG
RTN
Powertrain Control Module (PCM) (12A650)
23–13, 24–13