C9736

Main Chassis Harness

Air solenoid 4-pack



1661375C2

Pin	Circuit	Circuit Function
A	417 (VT/OG)	Air suspension switch feed
B	784 (LB/BK)	4x4 low range switch to PCM or indicator lamp
C	2221 (LG/RD)	
D	195 (TN/WH)	Taillamp switch feed
E	—	Not used

C9800

Main Chassis Harness

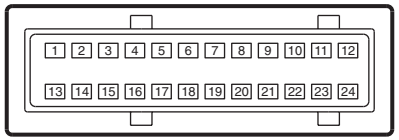

3517441C1

(1) 140 (BK/PK)
(2) 9 (LG/OG)
(3) 5 (OG/LB)
(4) 14 (BN)
(5) 9 (LG/OG)
(6) 5 (OG/LB)
(7) 295 (LB/PK)
(8) 784 (LB/PK)
(8) 26 (WH/VT)
(9) 57 (BK)
(10) 417 (VT/OG)
(10) 25 (DG/VT)
(11) 123 (RD)
(12) 57 (BK)
(13) 519 (LG/BK)
(14) 518 (LG/RD)
(15) 524 (PK/BK)
(16) 523 (RD/PK)
(17) 609 (OG/YE)
(18) 619 (PK/WH)
(19) 620 (VT/LB)
(20) 630 (WH/PK)
(21) 689 (DB)
(22) 604 (OG/RD)
(23) 301 (OG/RD)
(24) 304 (YE/WH)

Rear Chassis Harness

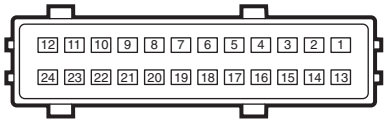

3517817C1

(1) 140 (BK/PK)
(2) 9 (LG/OG)
(3) 5 (OG/LB)
(4) 14 (BN)
(5) 9 (LG/OG)
(6) 5 (OG/LB)
(7) 295 (LB/PK)
(8) 2228 (LB/VT)
(9) 57 (BK)
(10) 417 (VT/OG)
(11) 123 (RD)
(12) 57 (BK)
(13) 519 (LG/BK)
(14) 518 (LG/RD)
(15) 524 (PK/BK)
(16) 523 (RD/PK)
(17) 609 (OG/YE)
(18) 619 (PK/WH)
(19) 620 (VT/LB)
(20) 630 (WH/PK)
(21) 689 (DB)
(22) 604 (OG/RD)
(23) 301 (OG/RD)
(24) 304 (YE/WH)

C9815

Rear Chassis Harness

Axle diff lock warn light, rear

0587567C91

Pin	Circuit	Circuit Function
A	2228 (LB/OG)	Warning light to switch
B	57 (BK)	Ground circuit

C9870

Rear Chassis Harness

Susp dump valve 4x2



0587568C91

Pin	Circuit	Circuit Function
A	417 (VT/OG)	Air suspension switch feed
B	57 (BK)	Ground circuit

C9900

Main Chassis Harness

Air dryer

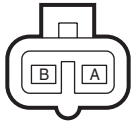

1673790C1

Pin	Circuit	Circuit Function
A	533 (TN/RD)	Fused run power to air dryer
B	57 (BK)	Ground circuit