C279 (BK)

14401

Transmission control switch

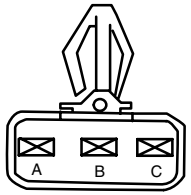

F03249

Pin	Circuit	Circuit function
A	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL), control
B	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
C	224 (TN/WH)	Transmission control switch, output, signal

C282 (GY)

14401

Inertia Fuel Shutoff (IFS) switch (9D362)



F03032

* 5.4L Supercharged
** all others

Pin	Circuit	Circuit function
1	238 (DG/YE)	Fuel pump relay, switched power, output
2	*787 (PK/BK)	Ground
2	**787 (PK/BK)	Fuel pump, Power
3	–	not used

C286 (BN)

14401

Sunload sensor (19E663)



F02431

Pin	Circuit	Circuit function
1	468 (BN)	Sunload sensor (19E663), signal
2	470 (PK/BK)	signal, return

C287 (GY)

14401

Autolamp sensor

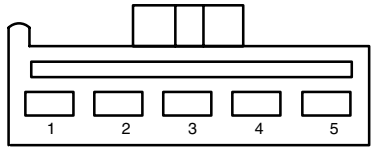

F05135

Pin	Circuit	Circuit function
1	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	57 (BK)	Ground
3	7 (LG/YE)	autolamps, control
4	1525 (LG/RD)	Hot at all times, with autolamps, On
5	–	not used

C289 (WH)

14401

Temperature blend door actuator (19E616)

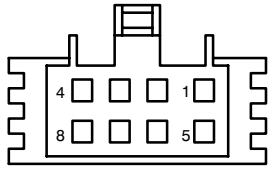

F08059

* with EATC
** with manual A/C

Pin	Circuit	Circuit function
1	*246 (VT)	Temperature blend door actuator (19E616), signal
2	–	not used
3	**437 (YE/LG)	Air temperature door variable resistor, wiper
4	**436 (RD/LG)	Air temperature door variable resistor +
5	*243 (LG/OG)	Temperature blend door actuator (19E616), feed
6	**438 (RD/WH)	Air temperature door variable resistor –
	*247 (WH/YE)	Temperature blend door actuator (19E616), Signal return
7	**295 (LB/PK)	Voltage in Run (overload protected)
	*250 (OG)	Blend door actuator, control
8	**57 (BK)	Ground
	*249 (DB/LG)	Blend door actuator, control