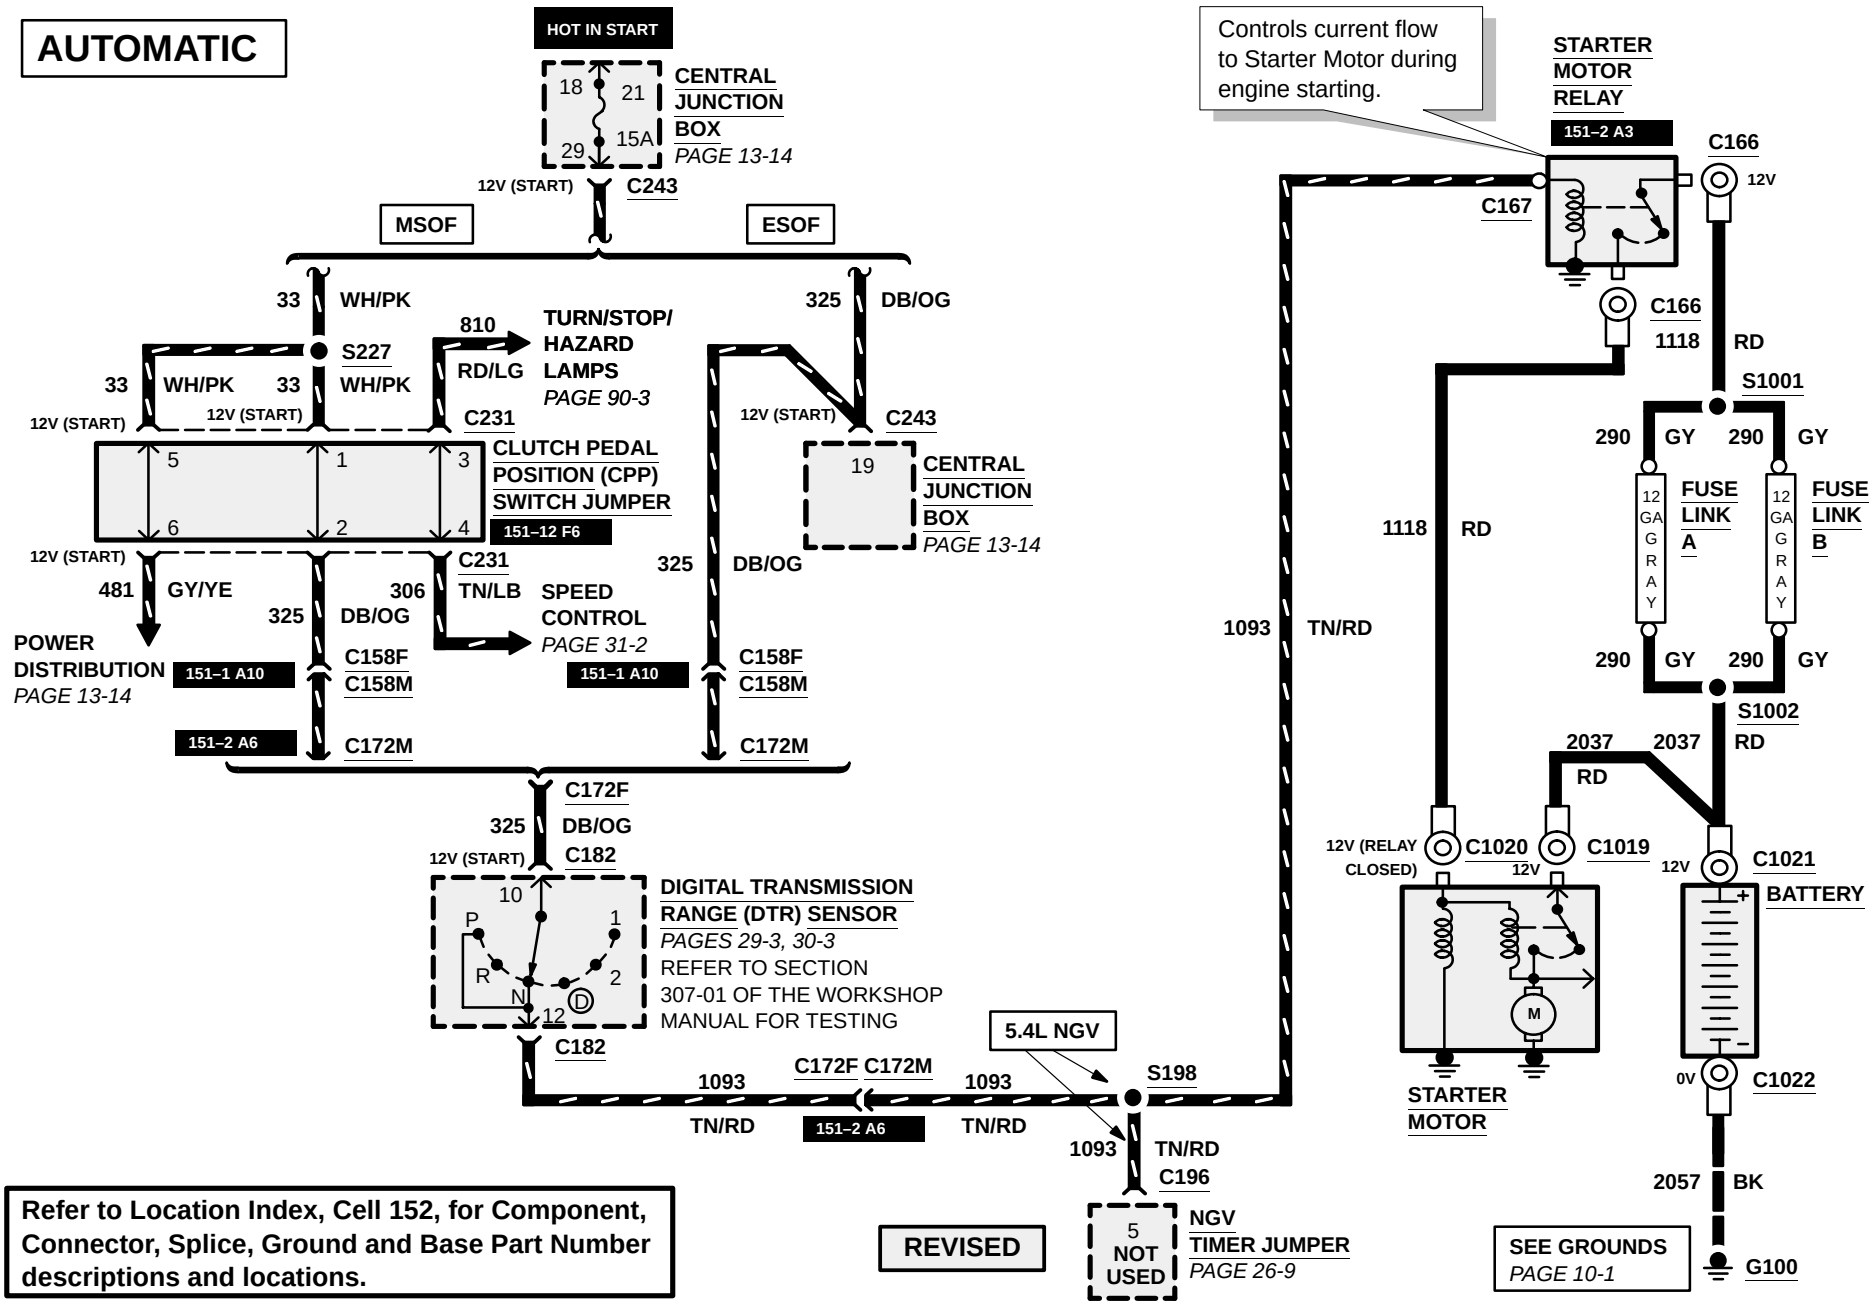
AUTOMATIC
HOT IN START
18
21
29
15A
CENTRAL JUNCTION BOX
PAGE 13-14
12V (START)
C243
MSOF
ESOF
33 WH/PK
S227
33 WH/PK
33 WH/PK
12V (START)
810
RD/LG
TURN/STOP/ HAZARD LAMPS
PAGE 90-3
C231
325 DB/OG
12V (START)
C243
19
CENTRAL JUNCTION BOX
PAGE 13-14
5
1
3
6
2
4
CLUTCH PEDAL POSITION (CPP) SWITCH JUMPER
151–12 F6
12V (START)
481 GY/YE
POWER DISTRIBUTION
PAGE 13-14
151–1 A10
325 DB/OG
C158F
C158M
C231
306 TN/LB
SPEED CONTROL
PAGE 31-2
325 DB/OG
151–1 A10
C158F
C158M
151–2 A6
C172M
C172M
C172F
325 DB/OG
12V (START)
C182
10
P
1
R
2
N
D
12
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGES 29-3, 30-3
REFER TO SECTION 307-01 OF THE WORKSHOP MANUAL FOR TESTING
C182
1093 TN/RD
C172F C172M
151–2 A6
5.4L NGV
1093 TN/RD
S198
1093 TN/RD
C196
5 NOT USED
NGV TIMER JUMPER
PAGE 26-9
REVISED
Controls current flow to Starter Motor during engine starting.
STARTER MOTOR RELAY
151–2 A3
C166
12V
C167
C166
1118 RD
S1001
290 GY
290 GY
12 GA GRAY
FUSE LINK A
12 GA GRAY
FUSE LINK B
1118 RD
1093 TN/RD
290 GY
290 GY
S1002
2037
2037
RD
RD
12V (RELAY CLOSED)
C1020
C1019
12V
12V
C1021
BATTERY
M
STARTER MOTOR
0V
C1022
2057 BK
G100
SEE GROUNDS
PAGE 10-1
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.