-100

## C935 (BU)

### 12A522, 9H589, 12A690

B88
Heated Oxygen
Sensor (HO2S) #12

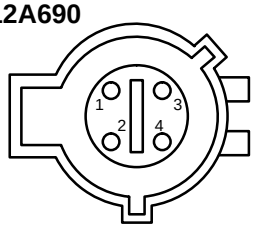


F04082

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 15-RJ15 (GN/BU) | Voltage, ignition switch in Start or Run (not overload protected) |
| 2 | 91S-RJ15 (BK/BU) | Ground, switched |
| 3 | 9-RJ15 (BN/RD) | Sensor signal return (reference/ground) |
| 4 | 8-RJ15 (WH/RD) | Sensor signal |

## C936

### 14401

N208
Start inhibit switch

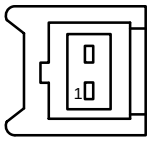


F02012

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31S-BB16 (BK/RD) | Ground, switched |
| 2 | 31S-BB6 (BK/YE) + | Ground, switched |
| | 31S-BB16A (BK/RD) | Ground, switched |
| | 31S-BB16A (BK/RD) | Ground, switched |

## C937

### 14A584

Y28
Speaker, left front




F02058

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-MD28 (WH) | Sensor signal |
| 2 | 10-MD28 (GY) | Signal 2 (Y–direction, reverse, downward) |

## C938

### 14A584

Y18
Speaker, right front




F02058

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-MD28 (WH) | Sensor signal |
| 2 | 10-MD28 (GY) | Signal 2 (Y–direction, reverse, downward) |

## C939

### 14014, 14A584

Y17
Speaker, left rear




F02058

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-MD11 (WH/VT) | Sensor signal |
| | 8-MD29 (WH/VT) | Sensor signal |
| 2 | 10-MD11 (GY/WH) | Signal 2 (Y–direction, reverse, downward) |
| | 10-MD29 (GY/WH) | Signal 2 (Y–direction, reverse, downward) |