C184

9D930/12B637

Fuel injector 4
(9F593)

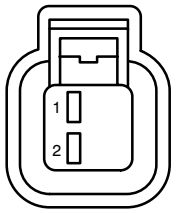

F02069

Pin	Circuit	Circuit function
1	91S-RL13 (BN/BU)	Fuel injector 4 (9F593), control
2	15S-RL13 (GN/RD)	Voltage supplied in Start and Run (overload protected)

C185

9D930/12B637

Fuel injector 5
(9F593)

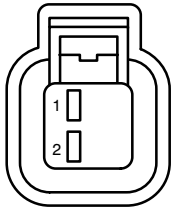

F02069

Pin	Circuit	Circuit function
1	91S-RL14 (BN/GN)	Fuel injector 5 (9F593), control
2	15S-RL14 (GN/BK)	Voltage supplied in Start and Run (overload protected)

C186

9D930/12B637

Fuel injector 6
(9F593)

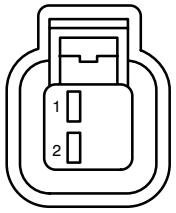

F02069

Pin	Circuit	Circuit function
1	91S-RL15 (BN/YE)	Fuel injector 6 (9F593), control
2	15S-RL15 (GN/OG)	Voltage supplied in Start and Run (overload protected)

C187

12B637

Fuel injector 7
(9F593)

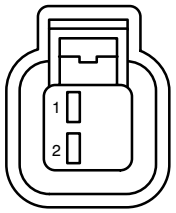

F02069

Pin	Circuit	Circuit function
1	91S-RL16 (BN/WH)	Fuel injector 7 (9F593), control
2	15S-RL16 (GN/WH)	Voltage supplied in Start and Run (overload protected)

C188

12B637

Fuel injector 8
(9F593)

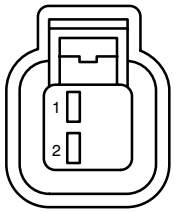

F02069

Pin	Circuit	Circuit function
1	91S-RL17 (BN)	Fuel injector 8 (9F593), control
2	15S-RL17 (GN/YE)	Voltage supplied in Start and Run (overload protected)

C189

12B637

Throttle Position Sensor
(TPS) (9B989)

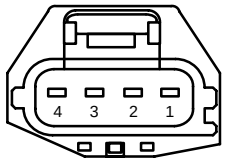

F04130

Pin	Circuit	Circuit function
1	8-RJ39 (WH/RD)	Throttle Position Sensor (TPS) (9B989), signal
2	7-RJ28 (RD)	Reference voltage
3	9-RJ28 (BN)	Signal return
4	8-RJ28 (WH)	Throttle Position Sensor (TPS) (9B989), signal