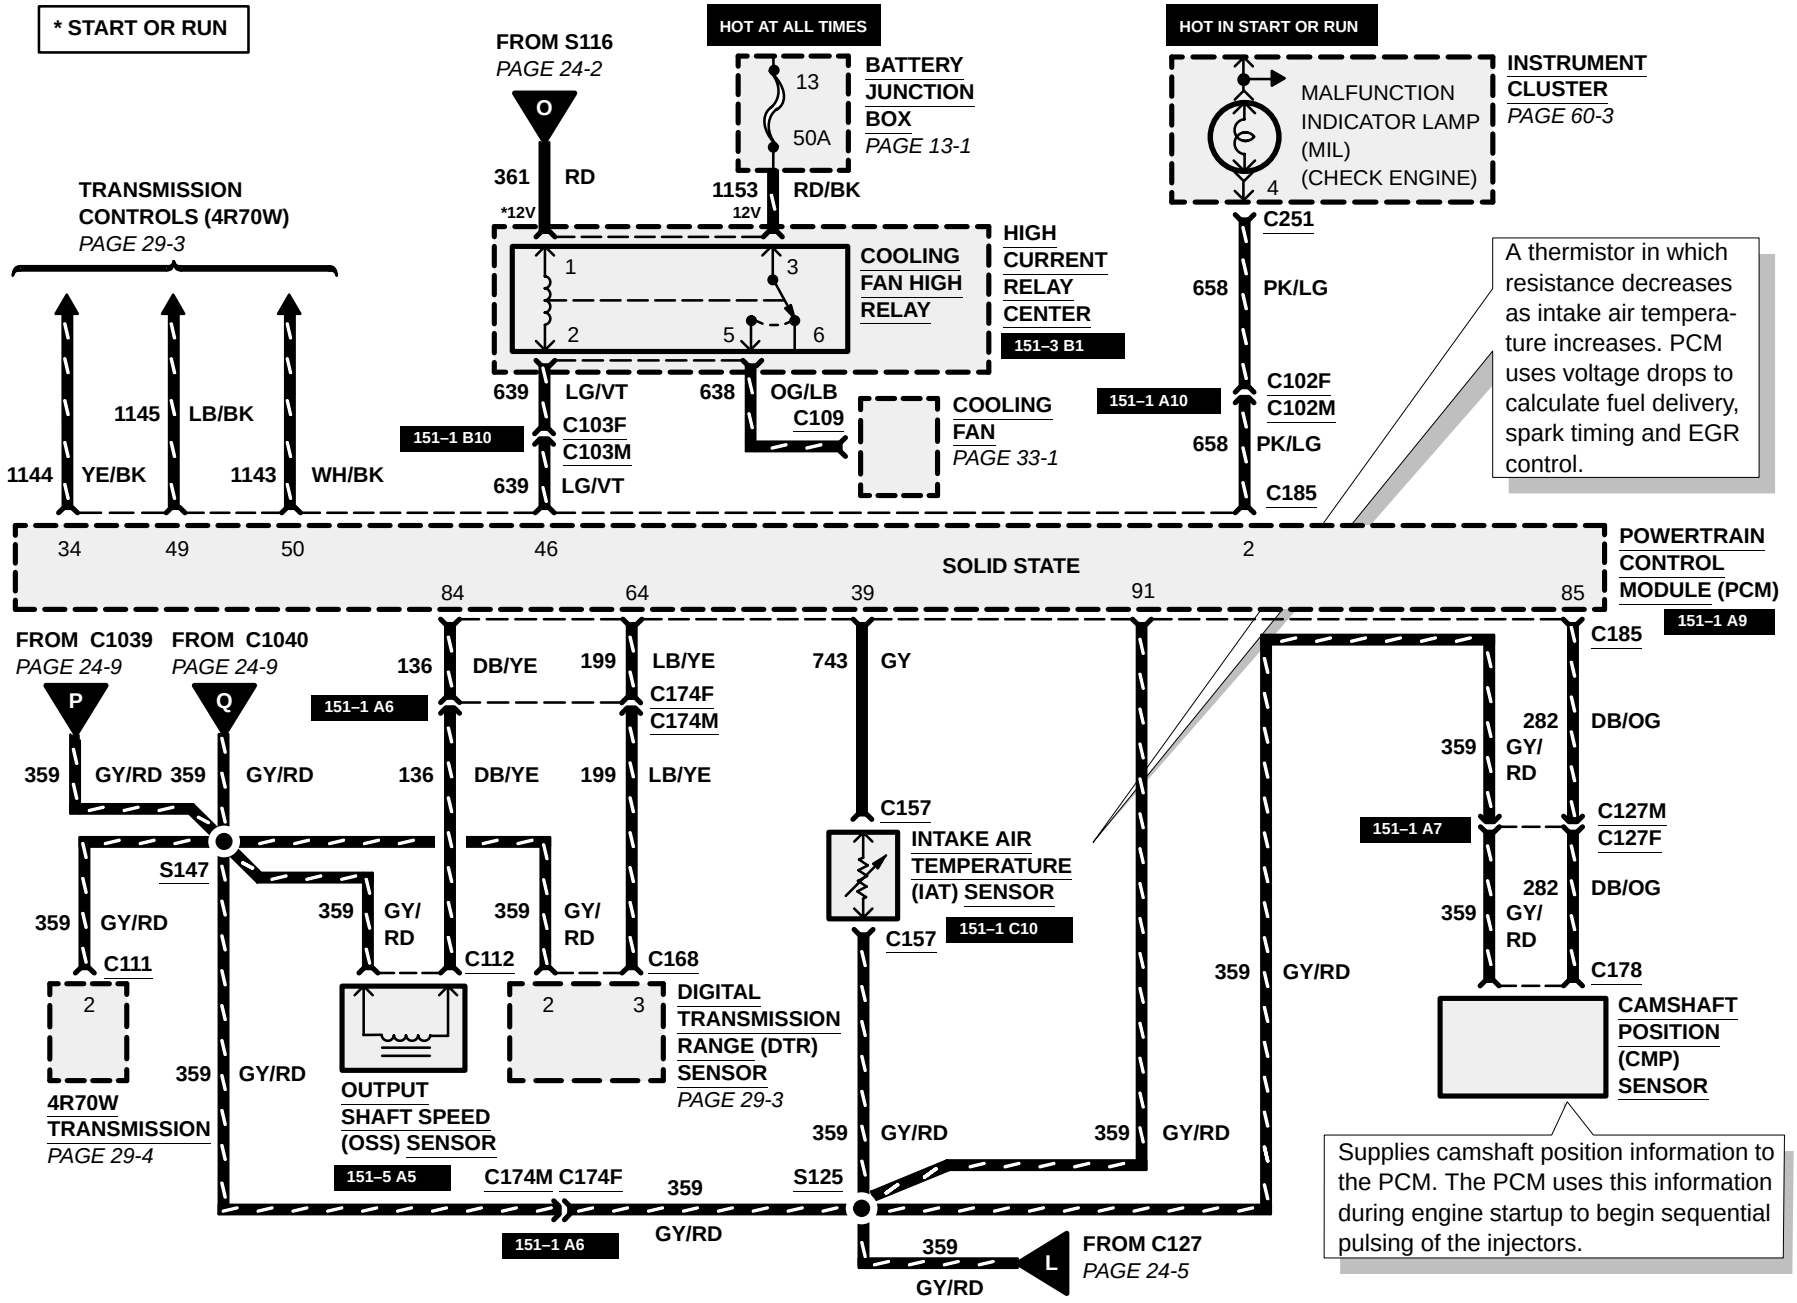
* START OR RUN
FROM S116
PAGE 24-2
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-1
13
50A
HOT IN START OR RUN
INSTRUMENT CLUSTER
PAGE 60-3
MALFUNCTION INDICATOR LAMP (MIL) (CHECK ENGINE)
4
C251
TRANSMISSION CONTROLS (4R70W)
PAGE 29-3
361 RD
*12V
1153 RD/BK
12V
COOLING FAN HIGH RELAY
HIGH CURRENT RELAY CENTER
151–3 B1
658 PK/LG
A thermistor in which resistance decreases as intake air temperature increases. PCM uses voltage drops to calculate fuel delivery, spark timing and EGR control.
639 LG/VT
C103F
C103M
638 OG/LB
C109
151–1 B10
151–1 A10
C102F
C102M
COOLING FAN
PAGE 33-1
658 PK/LG
1145 LB/BK
1144 YE/BK
1143 WH/BK
639 LG/VT
C185
34 49 50 46 2
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–1 A9
84 64 39 91 85
FROM C1039
PAGE 24-9
FROM C1040
PAGE 24-9
P
Q
136 DB/YE
199 LB/YE
743 GY
151–1 A6
C174F
C174M
359 GY/RD
359 GY/RD
136 DB/YE
199 LB/YE
C157
INTAKE AIR TEMPERATURE (IAT) SENSOR
151–1 C10
S147
359 GY/RD
359 GY/RD
359 GY/RD
C111
C112
C168
C157
359 GY/RD
282 DB/OG
359 GY/RD
C185
151–1 A7
C127M
C127F
282 DB/OG
359 GY/RD
C178
2
2
3
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 29-3
359 GY/RD
4R70W TRANSMISSION
PAGE 29-4
OUTPUT SHAFT SPEED (OSS) SENSOR
151–5 A5
CAMSHAFT POSITION (CMP) SENSOR
Supplies camshaft position information to the PCM. The PCM uses this information during engine startup to begin sequential pulsing of the injectors.
C174M C174F
359 GY/RD
S125
359 GY/RD
359 GY/RD
151–1 A6
359 GY/RD
L
FROM C127
PAGE 24-5