45-1 BELT AND BUCKLE ASSEMBLY (PRETENSIONER)

For diagnostic information, refer to Section 501-20B of the Workshop Manual.

Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.

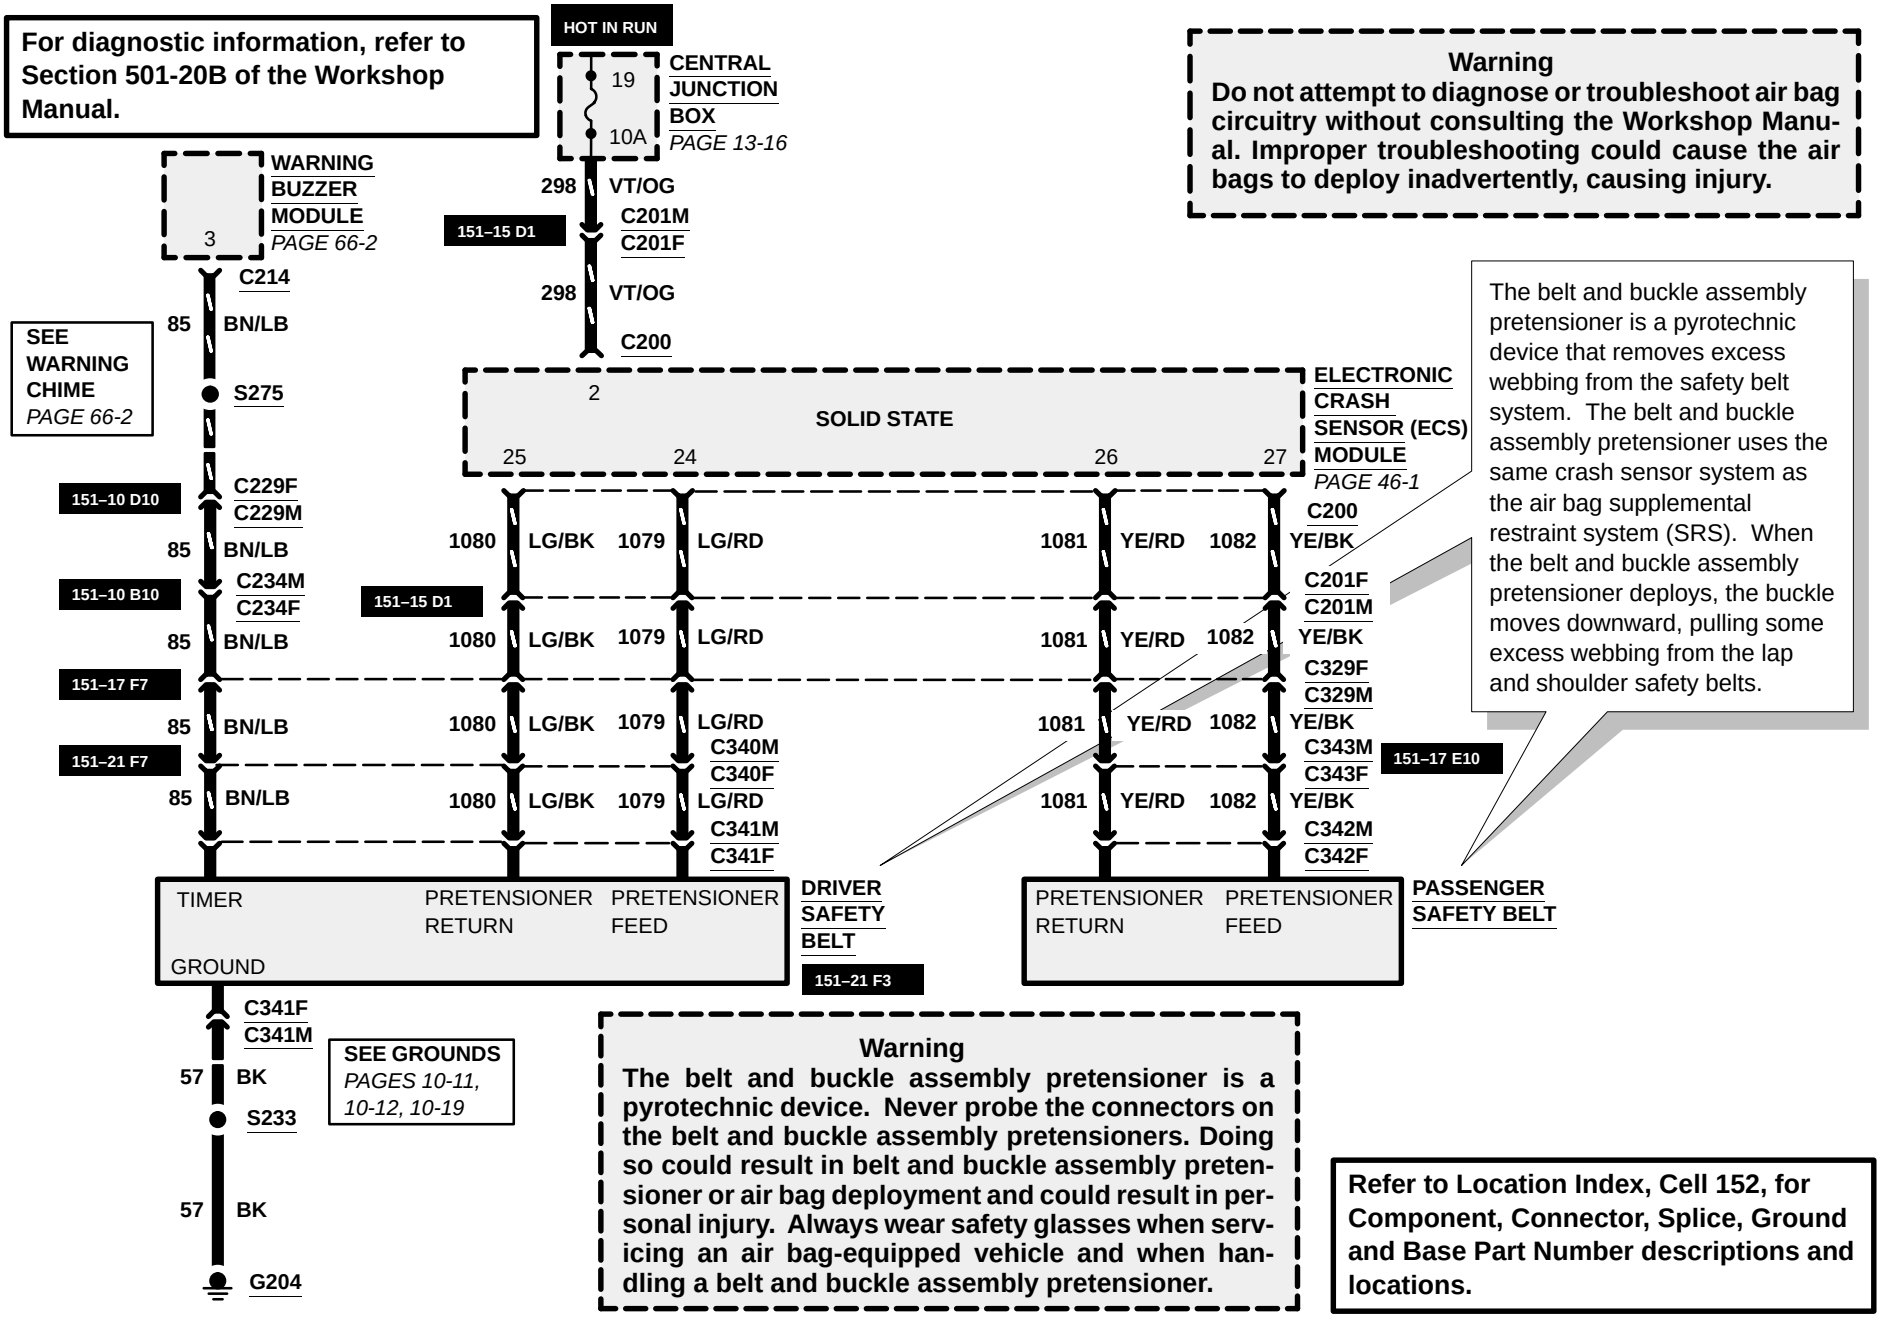

The belt and buckle assembly pretensioner is a pyrotechnic device that removes excess webbing from the safety belt system. The belt and buckle assembly pretensioner uses the same crash sensor system as the air bag supplemental restraint system (SRS). When the belt and buckle assembly pretensioner deploys, the buckle moves downward, pulling some excess webbing from the lap and shoulder safety belts.

Warning
The belt and buckle assembly pretensioner is a pyrotechnic device. Never probe the connectors on the belt and buckle assembly pretensioners. Doing so could result in belt and buckle assembly pretensioner or air bag deployment and could result in personal injury. Always wear safety glasses when servicing an air bag-equipped vehicle and when handling a belt and buckle assembly pretensioner.

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.