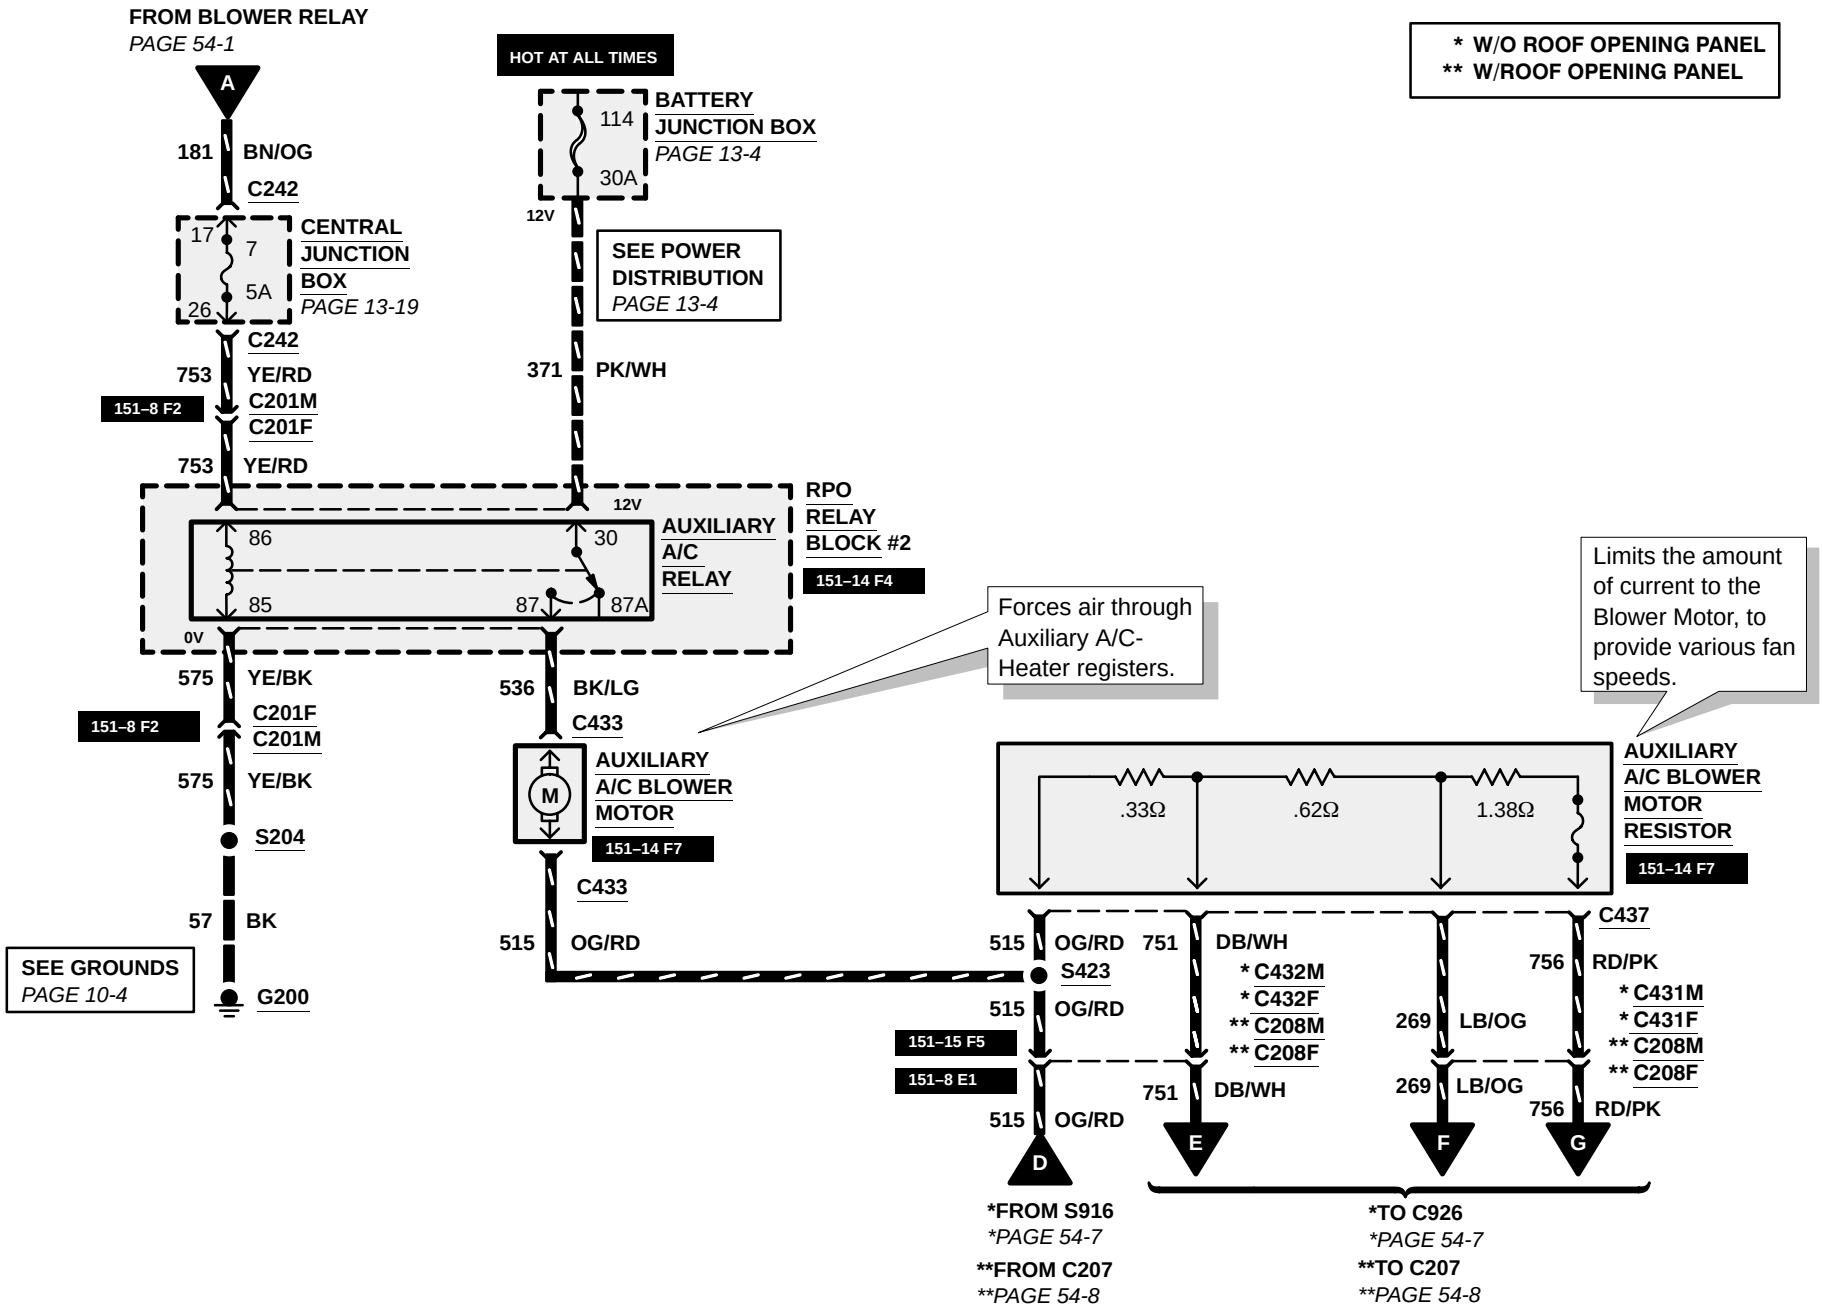
FROM BLOWER RELAY
PAGE 54-1
A
181 BN/OG
C242
17
7
5A
26
CENTRAL JUNCTION BOX
PAGE 13-19
C242
753 YE/RD
151–8 F2
C201M
C201F
753 YE/RD
HOT AT ALL TIMES
114
30A
BATTERY JUNCTION BOX
PAGE 13-4
12V
SEE POWER DISTRIBUTION
PAGE 13-4
371 PK/WH
12V
86
30
85
87
87A
AUXILIARY A/C RELAY
RPO RELAY BLOCK #2
151–14 F4
0V
575 YE/BK
151–8 F2
C201F
C201M
575 YE/BK
S204
57 BK
SEE GROUNDS
PAGE 10-4
G200
536 BK/LG
C433
M
AUXILIARY A/C BLOWER MOTOR
151–14 F7
C433
515 OG/RD
* W/O ROOF OPENING PANEL
** W/ROOF OPENING PANEL
Forces air through Auxiliary A/C-Heater registers.
Limits the amount of current to the Blower Motor, to provide various fan speeds.
.33Ω
.62Ω
1.38Ω
AUXILIARY A/C BLOWER MOTOR RESISTOR
151–14 F7
C437
515 OG/RD
751 DB/WH
756 RD/PK
S423
* C432M
* C432F
** C208M
** C208F
* C431M
* C431F
** C208M
** C208F
515 OG/RD
269 LB/OG
151–15 F5
151–8 E1
751 DB/WH
269 LB/OG
756 RD/PK
515 OG/RD
D
E
F
G
*FROM S916
*PAGE 54-7
**FROM C207
**PAGE 54-8
*TO C926
*PAGE 54-7
**TO C207
**PAGE 54-8