C234

14401

Floor mode actuator (19E616)

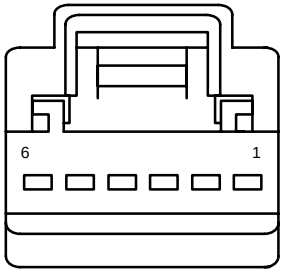

F06128

Pin	Circuit	Circuit function
1	32-FB6 (WH/VT)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB6 (WH/VT)	Sensor signal
4	9-FB6 (BN/WH)	Sensor signal return (reference/ground)
5	7-FB6 (YE/VT)	Voltage DC supplied at all times (sensor)
6	33-FB6 (YE/VT)	Switched between: Battery voltage, Ground or Open

C235

14401

Discharge temperature sensor, left

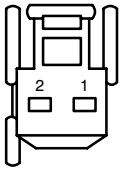

F02047

Pin	Circuit	Circuit function
1	9-FA47 (BN/GN)	Sensor signal return (reference/ground)
2	8-FA47 (WH/GN)	Sensor signal

C236

14401

Panel mode actuator (19E616)

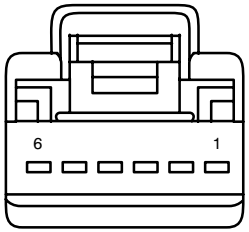

F006179

Pin	Circuit	Circuit function
1	33-FB7 (YE)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	8-FB7 (WH)	Sensor signal
4	7-FB7 (YE)	Voltage DC supplied at all times (sensor)
5	9-FB7 (BN)	Sensor signal return (reference/ground)
6	32-FB7 (WH)	Switched between: Battery voltage, Ground or Open