C475b

13A265

E174
High mounted stop-lamp (13A613)

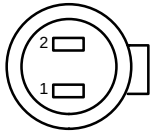

F02237

Pin	Circuit	Circuit function
1	569 (DG)	Brake pedal position switch (13480), to stoplamps
	569 (DG)	
2	1205 (BK)	Ground
	1205 (BK)	

C475c

13A265

E174
High mounted stop-lamp (13A613)

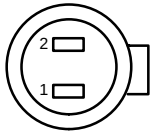

F02237

Pin	Circuit	Circuit function
1	569 (DG)	Brake pedal position switch (13480), to stoplamps
	569 (DG)	
2	1205 (BK)	Ground
	1205 (BK)	

C475d

13A265

E174
High mounted stop-lamp (13A613)

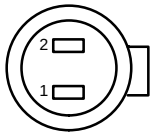

F02237

Pin	Circuit	Circuit function
1	569 (DG)	Brake pedal position switch (13480), to stoplamps
	569 (DG)	
2	1205 (BK)	Ground
	1205 (BK)	

C481

13410

E210
Side lamp, left rear
(13411)

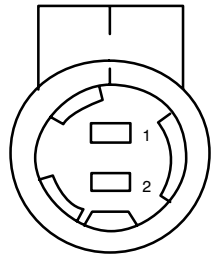

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	14 (BN)	Power, Exterior lamps

C482

13407

E211
Side lamp, right rear
(13411)

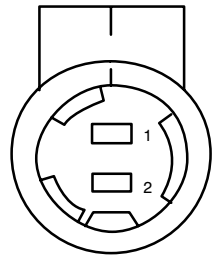

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	14 (BN)	Power, Exterior lamps

C484

14A005

Y17
Speaker, left rear
(18808)



F02048

Pin	Circuit	Circuit function
1	801 (TN/YE)	Speaker, left rear (18808) –
2	800 (GY/LB)	Speaker, left rear (18808) +