C106 (BK)

* 3.8L

***9D930**
12B637

Fuel rail pressure transducer sensor

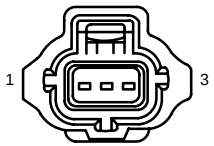

F03247

Pin	Circuit	Circuit function
1	351 (BN/WH)	Reference, voltage
2	359 (GY/RD)	signal, return
3	141 (RD/PK)	Fuel rail pressure transducer sensor, input

C107

† Automatic

†7C078
15525

Cylinder–head temperature sensor (6G004)

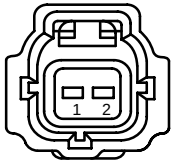

F02111

Pin	Circuit	Circuit function
1	354 (LG/RD)	Cylinder–head temperature sensor (6G004) signal
2	359 (GY/RD)	signal, return

C108

12B559

Knock sensor 2 (6G004)

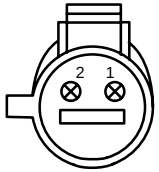

F02113

Pin	Circuit	Circuit function
1	310 (YE/RD)	Knock sensor (12A699) +
2	1273 (YE)	Knock sensor (12A699) –

C109

12B559

Knock sensor 1 (6G004)

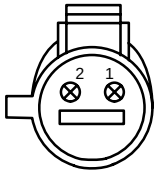

F02113

Pin	Circuit	Circuit function
1	311 (DG/VT)	Knock sensor (12A699) +
2	1274 (DG/WH)	Knock sensor (12A699) –

C110 (BK)

* 3.8L
‡ Cobra

14290

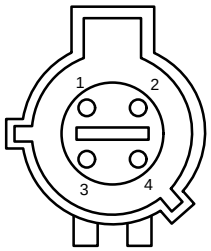

F04082

(1) 904 (LG/RD)
(2) 31 (WH/RD)
(3) 36 (YE/WH)
(4) 568 (LG)

12B637/*14305/‡14B060

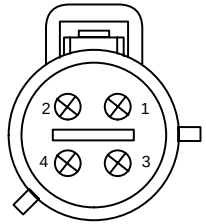

F04263

C111 (BK)

*** 4.6L 2V
†† 4.6L 4V

12B637

Coil On Plug (COP) 1 (12A366)

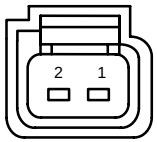

F02645

Pin	Circuit	Circuit function
1	***1118 (RD)	PCM power relay, output
	††1024 (LG/WH)	coil driver (CD) – A control
2	***1024 (LG/WH)	coil driver (CD) – A control
	††1118 (RD)	PCM power relay, output