## C361

### 14B719

N445
Lumbar adjust switch, left front (14B691)

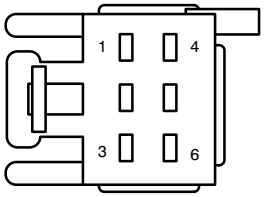


F06167

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 32-AH39 (WH/BU) | Switched between: Battery voltage, Ground or Open |
| 2 | – | not used |
| 3 | 31-AH40 (BK/GN) | Ground |
| 4 | 33-AH39 (YE/BU) | Switched between: Battery voltage, Ground or Open |
| 5 | 30-AH40 (RD/GN) | Voltage supplied at all times (not overload protected) |
| 6 | – | not used |

## C362

### 14B719

M227
Driver seat horizontal motor




F02071

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 32-AH37 (WH/GN) | Switched between: Battery voltage, Ground or Open |
| 2 | 33-AH37 (YE/GN) | Switched between: Battery voltage, Ground or Open |

## C363

### 14B719

M227
Driver seat horizontal motor




F02071

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 33-AH38 (YE/BK) | Switched between: Battery voltage, Ground or Open |
| 2 | 32-AH38 (WH/BK) | Switched between: Battery voltage, Ground or Open |

## C364

### 14B719

N29
Seat cushion heater, left front

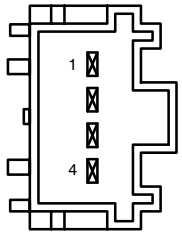


F04139

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 20S-HC17 (PK) | Voltage, hot in run only, Switched |
| 2 | 8-HC23 (WH/BK) | Sensor signal |
| 3 | 9-HC23 (BN/YE) | Sensor signal return (reference/ground) |
| 4 | 20S-HC16 (PK/BU) | Voltage, hot in run only, Switched |