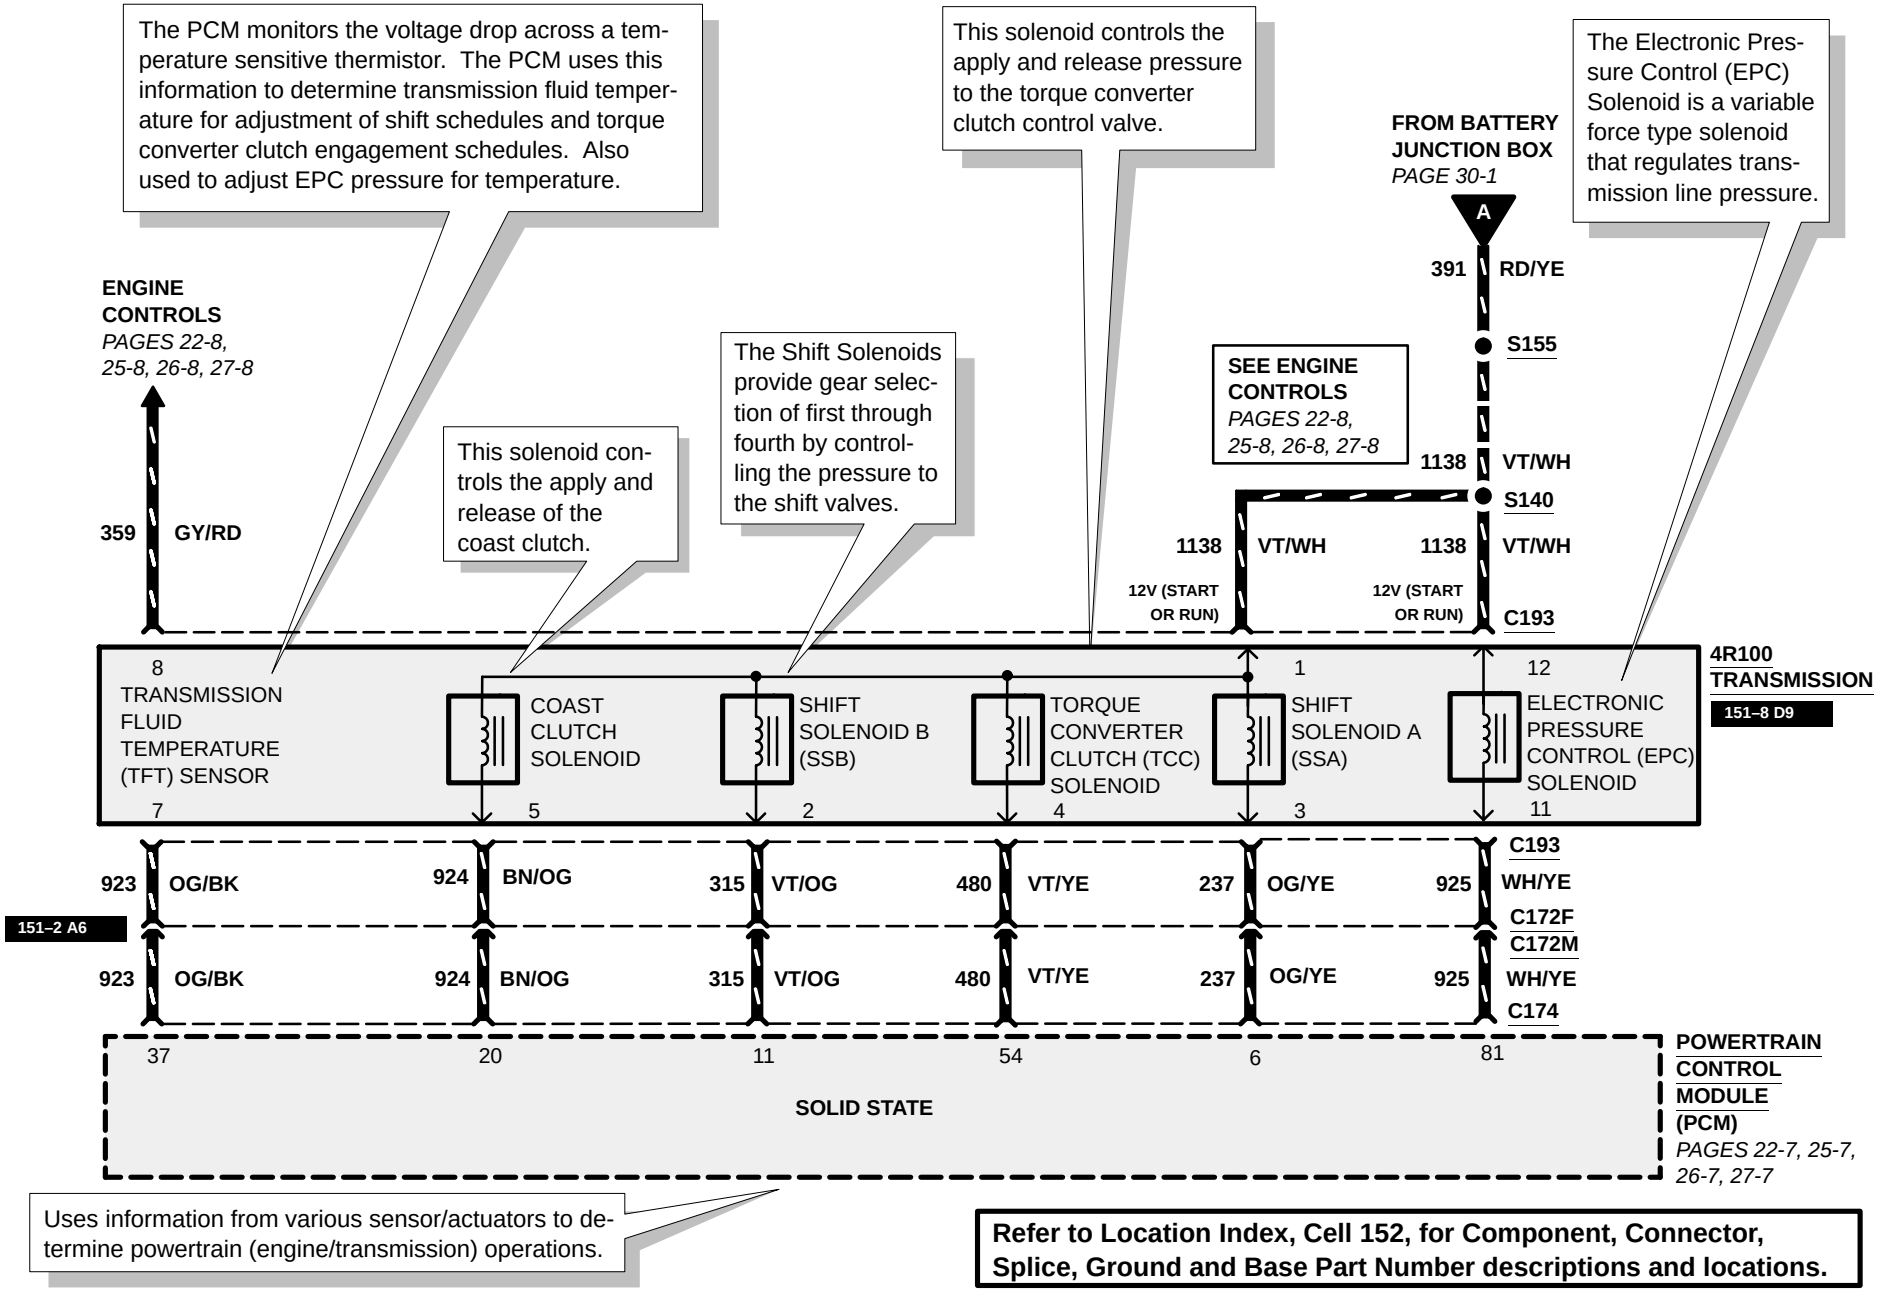
The PCM monitors the voltage drop across a temperature sensitive thermistor. The PCM uses this information to determine transmission fluid temperature for adjustment of shift schedules and torque converter clutch engagement schedules. Also used to adjust EPC pressure for temperature.
This solenoid controls the apply and release pressure to the torque converter clutch control valve.
The Electronic Pressure Control (EPC) Solenoid is a variable force type solenoid that regulates transmission line pressure.
FROM BATTERY JUNCTION BOX
PAGE 30-1
A
391 RD/YE
S155
SEE ENGINE CONTROLS
PAGES 22-8, 25-8, 26-8, 27-8
1138 VT/WH
S140
1138 VT/WH
1138 VT/WH
12V (START OR RUN)
12V (START OR RUN)
C193
ENGINE CONTROLS
PAGES 22-8, 25-8, 26-8, 27-8
359 GY/RD
This solenoid controls the apply and release of the coast clutch.
The Shift Solenoids provide gear selection of first through fourth by controlling the pressure to the shift valves.
8 TRANSMISSION FLUID TEMPERATURE (TFT) SENSOR
7
COAST CLUTCH SOLENOID
5
SHIFT SOLENOID B (SSB)
2
TORQUE CONVERTER CLUTCH (TCC) SOLENOID
4
1
SHIFT SOLENOID A (SSA)
3
12
ELECTRONIC PRESSURE CONTROL (EPC) SOLENOID
11
4R100 TRANSMISSION
151–8 D9
923 OG/BK
924 BN/OG
315 VT/OG
480 VT/YE
237 OG/YE
925 WH/YE
C193
C172F
C172M
C174
151–2 A6
923 OG/BK
924 BN/OG
315 VT/OG
480 VT/YE
237 OG/YE
925 WH/YE
37
20
11
54
6
81
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 22-7, 25-7, 26-7, 27-7
Uses information from various sensor/actuators to determine powertrain (engine/transmission) operations.
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.