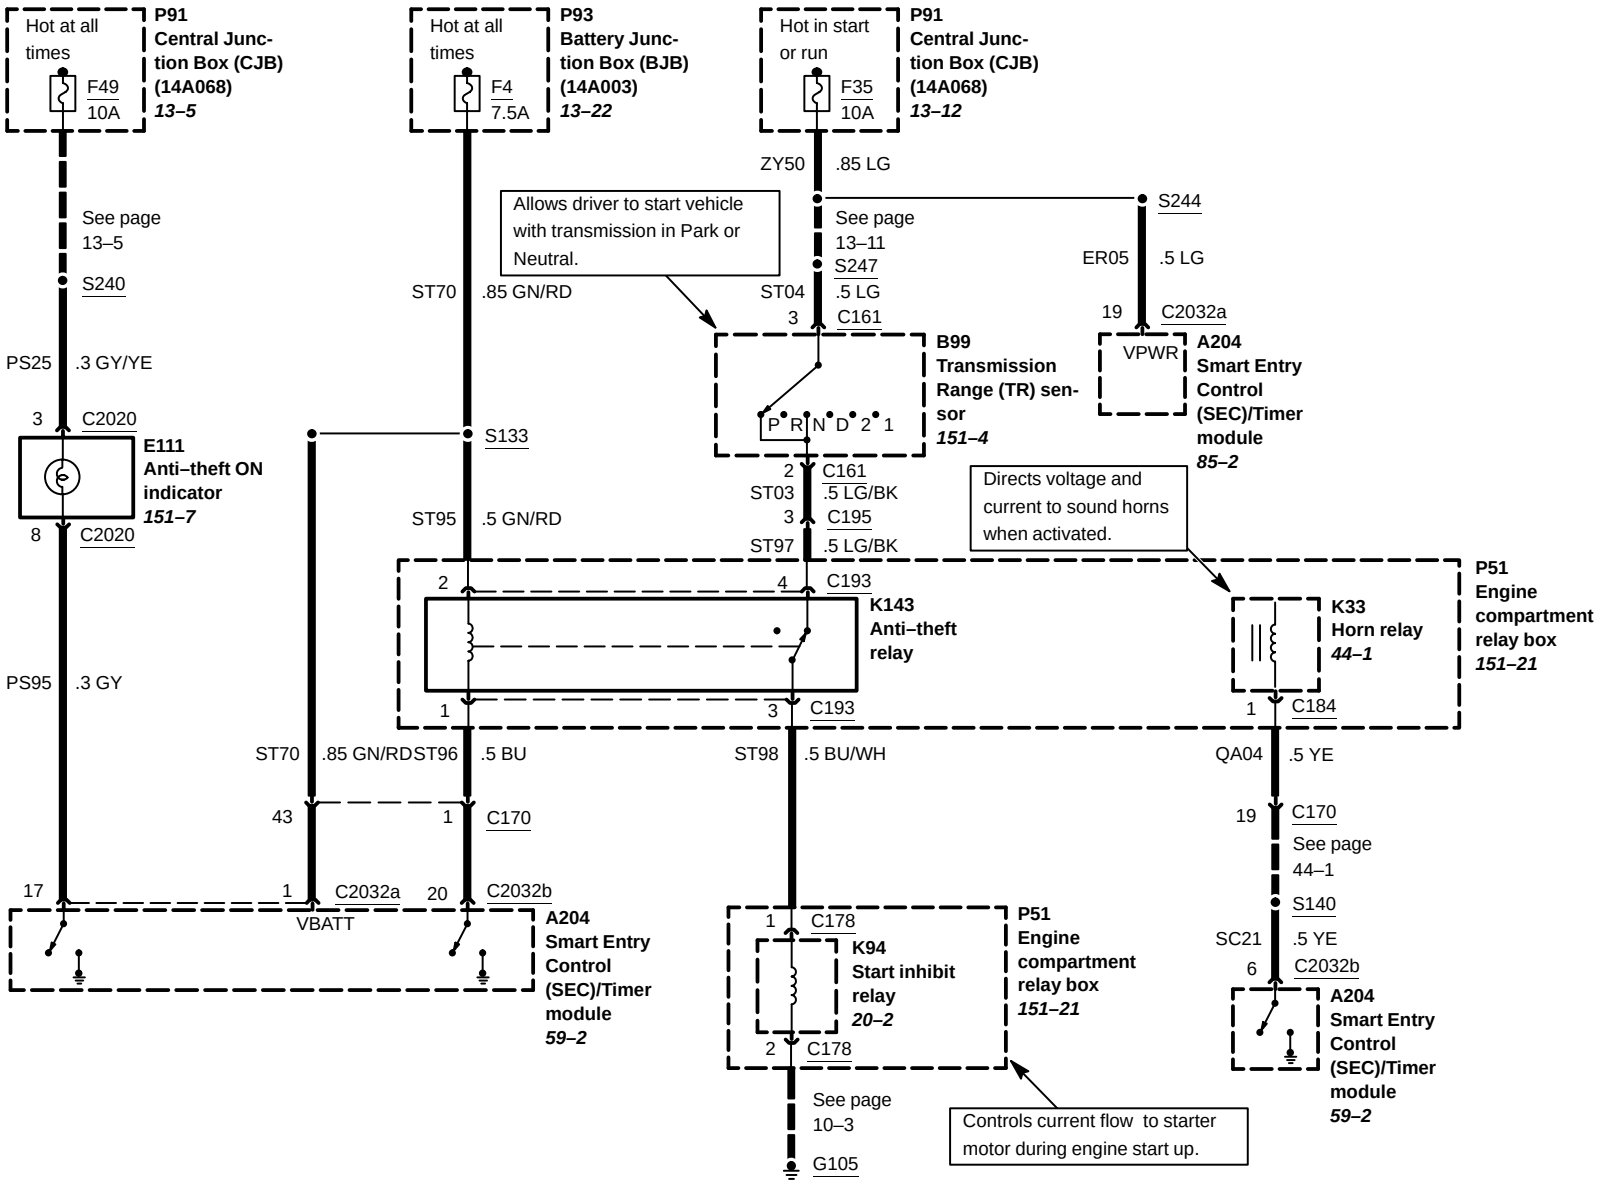
Hot at all times
F49
10A
P91
Central Junction Box (CJB)
(14A068)
13–5
See page 13–5
S240
PS25 .3 GY/YE
3 C2020
E111
Anti–theft ON indicator
151–7
8 C2020
PS95 .3 GY
Hot at all times
F4
7.5A
P93
Battery Junction Box (BJB)
(14A003)
13–22
ST70 .85 GN/RD
S133
ST95 .5 GN/RD
Hot in start or run
F35
10A
P91
Central Junction Box (CJB)
(14A068)
13–12
ZY50 .85 LG
Allows driver to start vehicle with transmission in Park or Neutral.
See page 13–11
S247
ST04 .5 LG
3 C161
B99
Transmission Range (TR) sensor
151–4
P R N D 2 1
2 C161
ST03 .5 LG/BK
3 C195
ST97 .5 LG/BK
S244
ER05 .5 LG
19 C2032a
VPWR
A204
Smart Entry Control (SEC)/Timer module
85–2
Directs voltage and current to sound horns when activated.
2 4 C193
K143
Anti–theft relay
1 3 C193
K33
Horn relay
44–1
P51
Engine compartment relay box
151–21
1 C184
ST70 .85 GN/RD
ST96 .5 BU
ST98 .5 BU/WH
QA04 .5 YE
43 1 C170
19 C170
See page 44–1
17 1 C2032a 20 C2032b
VBATT
A204
Smart Entry Control (SEC)/Timer module
59–2
1 C178
K94
Start inhibit relay
20–2
2 C178
P51
Engine compartment relay box
151–21
S140
SC21 .5 YE
6 C2032b
A204
Smart Entry Control (SEC)/Timer module
59–2
See page 10–3
G105
Controls current flow to starter motor during engine start up.